TOSHIBA

FILE NO. 140-200309

SERVICE MANUAL

COLOR TELEVISION/ VIDEO CASSETTE RECORDER/ DVD VIDEO PLAYER

MW24FN1

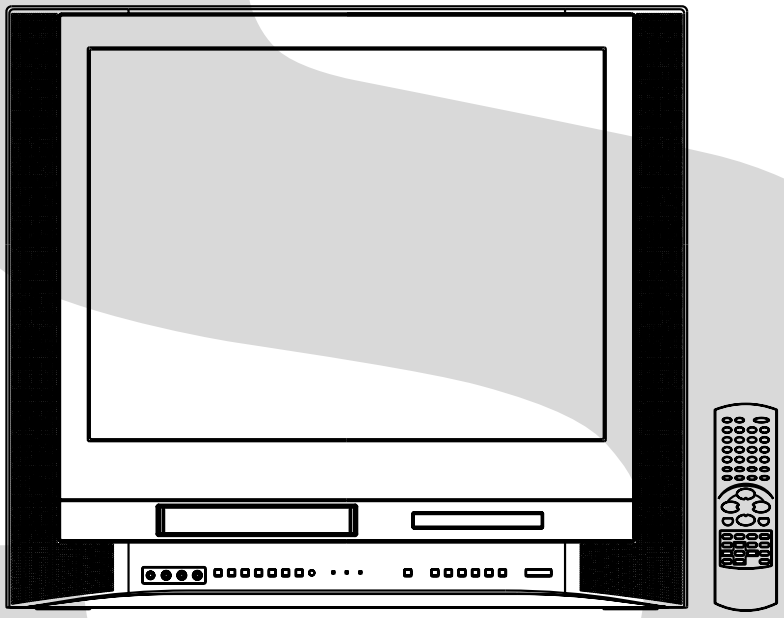

DOCUMENT CREATED IN JAPAN, Apr., 2003

CAUTION

THIS DIGITAL VIDEO PLAYER EMPLOYS A LASER SYSTEM.

TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS SERVICE MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.

USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

Location of the required Marking
The rating sheet and the safety caution are on the rear of the unit.

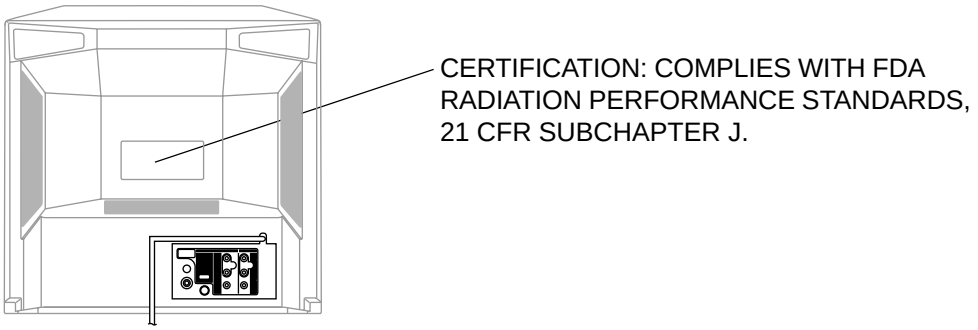

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

IMPORTANT SAFEGUARDS

1. **READ INSTRUCTIONS**
   All the safety and operating instructions should be read before the unit is operated.
2. **RETAIN INSTRUCTIONS**
   The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS**
   All warnings on the unit and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS**
   All operating and use instructions should be followed.
5. **CLEANING**
   Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **ATTACHMENTS**
   Do not use attachments not recommended by the unit's manufacturer as they may cause hazards.
7. **WATER AND MOISTURE**
   Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
8. **ACCESSORIES**
   Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.

PORTABLE CART WARNING
(symbol provided by RETAC)

S3126A

8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. **VENTILATION**
   Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the unit, and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **POWER SOURCES**
    This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.
11. **GROUNDING OR POLARIZATION**
    This unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin, this plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
12. **POWER-CORD PROTECTION**
    Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. **LIGHTNING**
    To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.
14. **POWER LINES**
    An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
15. **OVERLOADING**
    Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.
16. **OBJECT AND LIQUID ENTRY**
    Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.
17. **OUTDOOR ANTENNA GROUNDING**
    If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
18. **SERVICING**
    Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled, or objects have fallen into the unit.
c. If the unit has been exposed to rain or water.
d. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
e. If the unit has been dropped or the cabinet has been damaged.
f. When the unit exhibits a distinct change in performance, this indicates a need for service.

20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts.
Unauthorized substitutions may result in fire, electric shock or other hazards.

21. SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

22. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

24. DISC TRAY

Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.

25. CONNECTING

When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

26. SOUND VOLUME

Reduce the volume to the minimum level before you turn on the product. Otherwise, sudden high volume sound may cause hearing or speaker damage.

27. SOUND DISTORTION

Do not allow the product output distorted sound for a longtime. It may cause speaker overheating and fire.

28. HEADPHONES

When you use the headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

29. LASER BEAM

Do not look into the opening of the disc tray or ventilation opening of the product to see the source of the laser beam. It may cause sight damage.

30. DISC

Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.

31. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

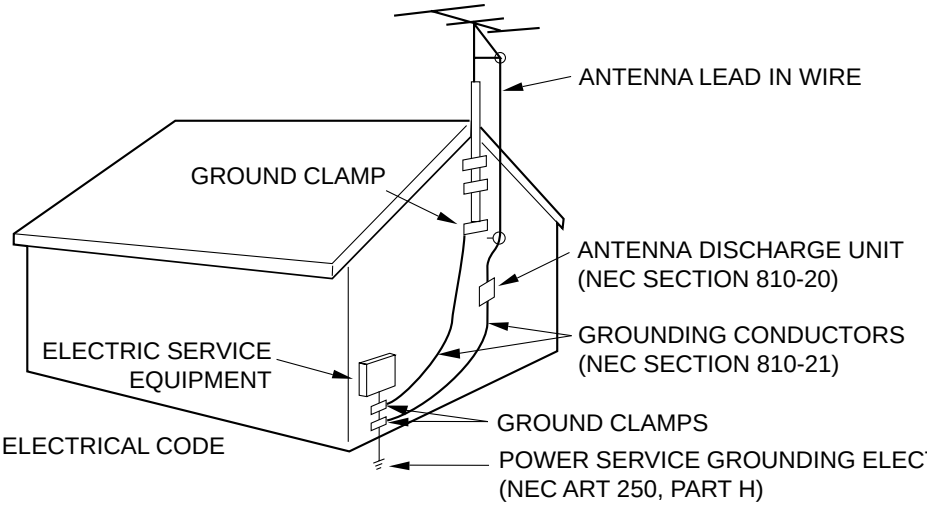

S2898A

TAPE REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the TV/DVD/VCR block from the main unit and the **Fig. 1** below can be seen. **(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Remove one screw of the Loading Motor from the insert hole for screw driver and remove the Loading Motor.
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape. **(Refer to Fig. 2)**
4. Rotate the Clutch Ass'y either of the directions to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

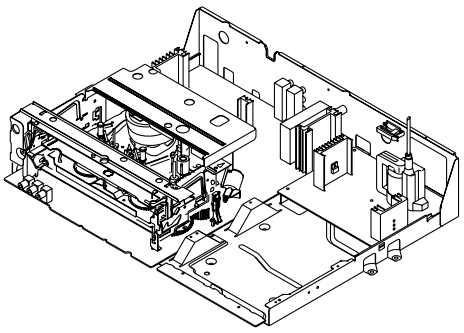

Fig. 1

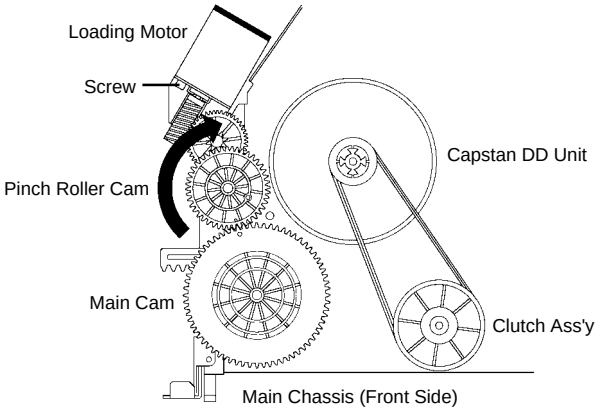

Fig. 2

DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Back Cabinet, TV//DVD/VCR Block and DVD TOP. **(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Slide the Rack Loading (White) toward the arrow direction by using a minus driver to release the lock. **(Refer to Fig. 1)**
3. Draw the Tray.

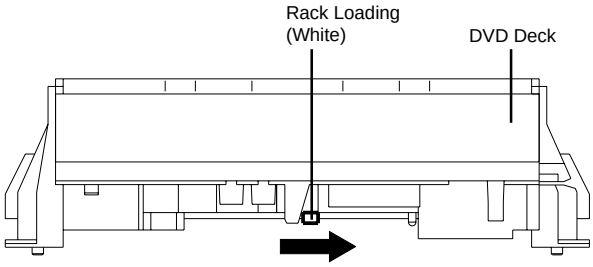

Fig. 1

PARENTAL CONTROL - RATING LEVEL

4 DIGIT PASSWORD CANCELLATION

If the stored 4 digit password in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Set the VOLUME to minimum.
4. Press and hold the 'VOL. DOWN' button on the front panel.
5. Simultaneously press and hold the '4' key on the remote control unit.
6. Hold both keys for more than 1 second.
7. The On Screen Display message 'INITALIZE5 COMPLETE' will appear.
8. The 4 digit password has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

TRAY LOCK

Tray cannot be opened by setting the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Press and hold the '9' key on the remote control unit.
4. Simultaneously press and hold the 'STOP' key on the front panel.
5. Hold both keys for more than 3 seconds.
6. Press the OPEN/CLOSE key on the front panel to check the Tray Lock setting.

NB: No indications on the screen when the Tray Lock is setting.

To unlock the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Set the VOLUME to minimum.
4. Press and hold the 'VOL. DOWN' button on the front panel.
5. Simultaneously press and hold the '4' key on the remote control unit.
6. Hold both keys for more than 1 second.
7. The On Screen Display message 'INITALIZE5 COMPLETE' will appear.
8. The Tray Lock has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

TABLE OF CONTENTS

CAUTION A1-1
SERVICING NOTICES ON CHECKING A1-2
HOW TO ORDER PARTS A1-2
IMPORTANT WARNING A1-3, A1-4
TAPE REMOVAL METHODATNO POWER SUPPLY A1-5
DISC REMOVAL METHODATNO POWER SUPPLY A1-5
PARENTAL CONTROL-RATING LEVEL A1-6
TRAY LOCK A1-6
TABLE OF CONTENTS A2-1
GENERAL SPECIFICATIONS ..... A3-1~A3-7
DISASSEMBLY INSTRUCTIONS
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS B1-1, B1-2
2. REMOVAL OF VCR DECK PARTS ..... B2-a~B2-6
3. REMOVAL OF DVD DECK PARTS ..... B3-1~B3-4
4. REMOVAL OF ANODE CAP B4-1
5. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC B5-1, B5-2

KEY TO ABBREVIATIONS C1-1, C1-2
SERVICE MODE LIST C2-1
PREVENTIVE CHECKS AND SERVICE INTERVALS C3-1, C3-2
WHEN REPLACING EEPROM (MEMORY) IC C4-1
SERVICING FIXTURES AND TOOLS D1-1
PREPARATION FOR SERVICING D1-1
MECHANICAL ADJUSTMENTS ..... D2-1~D2-4
ELECTRICAL ADJUSTMENTS ..... D3-1~D3-6
BLOCK DIAGRAMS
DVD ST SOLUTION E-1, E-2
Y/C/AUDIO/CCD/HEAD AMP E-3, E-4
MICON E-5, E-6
IN/OUT E-7, E-8
CHROMA/IF E-9, E-10
SOUND AMP E-11, E-12
Hi-Fi/DEMODULATOR E-13, E-14
COMB FILTER E-15, E-16
DVD IN/OUT E-17, E-18
REGULATOR E-19, E-20
TV E-21, E-22

PRINTED CIRCUIT BOARDS
DVD F-1, F-2
VCR ..... F-3~F-6
DEFLECTION/CRT/OPERATIONRELAY/SW F-7, F-8

SCHEMATIC DIAGRAMS
RF_AMP/DSP G-1, G-2
MOTOR DRIVE G-3, G-4
MPEG G-5, G-6
MEMORY G-7, G-8
AUDIO/VIDEO G-9, G-10
REGULATOR2 ..... G-11, G-12
Y/C/AUDIO/CCD/HEAD AMP G-13, G-14
MICON G-15, G-16
IN/OUT G-17, G-18
CHROMA/IF G-19, G-20
SOUND AMP/SURROUND G-21, G-22
Hi-Fi/DEMODULATOR G-23, G-24
DIGITAL COMB FILTER G-25, G-26
DVD IN/OUT G-27, G-28
REGULATOR G-29, G-30
TV POWER G-31, G-32
DEFLECTION G-33, G-34
CRT/OPERATION G-35, G-36

INTERCONNECTION DIAGRAM G-37, G-38
WAVEFORMS ..... H-1~H-3
MECHANICAL EXPLODED VIEWS I1-1, I1-2
CHASSIS EXPLODED VIEWS I2-1, I2-2
DVD DECK EXPLODED VIEWS I3-1
MECHANICAL REPLACEMENT PARTS LIST J1-1, J1-2
CHASSIS REPLACEMENT PARTS LIST J2-1
DVD DECK REPLACEMENT PARTS LIST J3-1
ELECTRICAL REPLACEMENT PARTS LIST ..... J4-1~J4-7

GENERAL SPECIFICATIONS

G-1	**TV System**	CRT	CRT Size / Visual Size	24 inch / 600mmV
			CRT Type	Flat
			Deflection	101 degree
			Magnetic Field BV/BH	+ 0.45 G / 0.18 G
		Color System		NTSC
		Speaker		2 Speaker
			Position	Front
			Size	1.8 x 3.9 Inch
			Impedance	8 ohm
		Sound Output	MAX	1.5W + 1.5W
			10%(Typical)	1.5W + 1.5W
G-2	**VCR System**	System		VHS Player / Recorder
		Video System		NTSC
		Hi-Fi STEREO		Yes
		NTSC PB		-
		Deck	DECK	OVD-7
			Loading System	Front
			Motor	3
		Heads Video Head		4 Heads
		FM Audio Head		2 Heads
		Audio /Control		Mono /Yes
		Erase(Full Track Erase)		Yes
		Tape Speed Rec	PAL	-
			NTSC	SP/SLP(EP)
		Play	PAL	-
			NTSC	SP/SLP(EP)
		Fast Forward / Rewind Time (Approx.) at 25oC		FF:1'48"/REW:1'48"
			with Cassette	T-120
		Forward/Reverse Picture Search	NTSC or PAL-M	SP/SLP(EP)=3x,5x / 9x,15x
		Frame Advance		Yes
		Slow Speed		1/10
G-3	**DVD System**	Color System		NTSC
		Disc		DVD, CD-DA, CD-R/RW, Video CD
		Disc Diameter		120 mm , 80 mm
		Deck	Disc Loading System	Front Loading
			Motor	2 Motors
		Pick up		1-Lens 2-Beams System
		Playback time(Max)	DVD 1-Layer	135min (4.7GB)
			DVD 2-Layer	245min (8.5GB)
			CD	74min
			Video CD	-
		Search speed	Fwd	2-15 times / 4 step (DVD,VIDEO CD)
				2-20 times / 4 step (CD)
			Actual	2-45 times (DVD,VIDEO CD)
				4-40 times (CD)
			Rew	2-15 times / 4 step (DVD,VIDEO CD)
				2-20 times / 4 step (CD)
			Actual	2-45 times (DVD,VIDEO CD)
				4-40 times (CD)
		Slow speed	Fwd	1/8-1/2 times(DVD,VIDEO CD)
			Actual	-
			Rew	-
			Actual	-
G-4	**Tuning System**	Broadcasting System		US System M
		Tuner and Receive CH	System	1 Tuner
			Destination	US(w/CATV)
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2~69, 4A,A-5~A-1, A~I, J~W,W+1~W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.5MHz
		Preset CH		No
		Stereo/Dual TV Sound		US-Stereo
		Tuner Sound Muting		Yes

GENERAL SPECIFICATIONS

G-5	**Signal**	Video Signal	Input Level		1 V p-p/75 ohm
			Output Level		1 V p-p/75 ohm
			S/N Ratio (Weighted) at DVD Mode		65dB
			S/N Ratio (Weighted) at VCR Mode		50dB
			Horizontal Resolution at DVD Mode		400 Lines
			Horizontal Resolution at VCR(SP)Mode		220 Lines
		RGB Signal	Output Level		-
		Audio Signal	Input Level		-8.0dBm/50k ohm
		VCR	Output Level(0dB=0.775Vrms)		-8.0dBm/1k ohm
		DVD	Output Level(-20dBFs 0dBFs=2.0Vrms)		-12.0dBm/1k ohm
			Digital Output Level		0.5 V p-p/75 ohm(DVD)
			S/N Ratio at DVD (Weighted)		90 dB
			S/N Ratio at VCR (SP)(CCIR Filter:ON)		38 dB
			Harmonic Distortion at DVD Mode		0.06% (1kHz)
			Harmonic Distortion at VCR(SP) Mode		1.5% (1kHz) Typical
			Frequency Response :		
			DVD Mode	at DVD	4Hz - 22kHz
				at Video CD	4Hz - 20kHz
				at CD	4Hz - 20kHz
			VCR Mode	at SP	100Hz - 10kHz
				at LP	-
				at SLP	100Hz - 4kHz
		Hi-Fi Audio Signal	Dynamic Range : More than		90 dB
			Frequency Response :		20Hz - 20kHz
			Wow And Flutter : Less than		0.01 %Wrms
			Channel Separation : More than		60 dB
			Harmonic Distortion : Less than		1.0 %
G-6	**Power**	Power Source	AC		120V,60Hz
			DC		-
		Power Consumption		at AC	135 W at 120 V 60 Hz
				at DC	-
			Stand by (at AC)		4 W at 120 V 60 Hz
			Per Year		-
		Protector	Power Fuse		Yes
			Dew Sensor		No
G-7	**Regulation**		Safety		UL
			Radiation		FCC
			X-Radiation		DHHS
			Laser		DHHS
G-8	**Temperature**		Operation		+5oC ~ +40oC
			Storage		-20oC ~ +60oC
G-9	**Operating Humidity**				Less than 80% RH

GENERAL SPECIFICATIONS

G-10	**On Screen Display (TV/VCR)**	Menu			Yes
		Menu	Type		Character
		Timer Rec Set			Yes
		Channel Setup			Yes
			TV/CATV		Yes
			Auto CH Memory		Yes
			Add/ Delete		Yes
			Guide CH Set		No
		TV Setup			Yes
			V-chip Set		Yes
			On/Off Timer Set		Yes
			Picture		Yes
			Audio		Yes
			Surround		Yes
			Stable Sound		Yes
			Sap On/Off		Yes
		Auto Repeat On/Off			Yes
		System Setup			Yes
			Clock Set		Yes (Calendar 12h)
			Language		Yes
			Auto Clock On/Off		Yes
			Standard Time		Yes
			Daylight Saving Time		Yes
		G-CODE(or SHOWVIEW or PLUSCODE)No. Entry			No
		TV/VCR			Yes
		DVD			Yes
		Clock / Date			Yes
		CH/AV(LINE)/DVD			Yes
		Tape Counter(Linear Counter)			Yes
		Tape Speed			Yes
		Sleep Time			Yes
		Stereo/Audio Output			Yes
			Bilingal		No
			SAP		Yes
		Control Level	Volume		Yes
			Brightness/Contrast/Sharpness/Color		Yes
			Tint		Yes
			Bass/Treble/Balance		Yes
			Manual Tracking		Yes
		Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In		(Symbol Mark)	Yes
		Auto Tracking/Manual Tracking			Yes
		Caption / Text			Yes
		Index			No
		Mute			Yes
		Hi-Fi			Yes
		Repeat			Yes
		Zero Return			Yes
		DEW			No

GENERAL SPECIFICATIONS

G-11	**On Screen Display (DVD)**	Menu		Yes	
			Menu Type	Character	
		Language		Yes	
			OSD Language	Yes	
			Menu	Yes	
			SubTitle	Yes	
			Audio	Yes	
		Picture		Yes	
			TV Screen Size	Yes	
			OSD Display On/Off	Yes	
		Sound		Yes	
			DRC (Dynamic Range Control)	Yes	
			dts Decode	No	
			Output(5.1ch/ 2ch)	No	
			Surround On/Off	No	
			Center On/Off	No	
			Sub Woofer On/Off	No	
		Parental		Yes	
			Password Lock/ Un Lock	Yes	
			Rating Level	Yes	
		Open		Yes	
		Close		Yes	
		No disc		Yes	
		Reading		Yes	
		Play		Yes	
		Still/Pause		Yes	
		Stop		Yes	
		Prohibit Mark		Yes	
		Step		Yes	
		Skip(>>|)		Yes	
		Skip(|<<)		Yes	
		Random		Yes (CD)	
		Repeat		Yes	
		Slow+ ##		Yes	
		Slow- ##		No	
		Search+ ##		Yes	
		Search- ##		Yes	
		Jump		Yes	
		Resume		Yes	
		Title No.		Yes	
		Chapter No.		Yes	
		Track No.		Yes	
		Time		Yes	
		Sub Title No.		Yes	
		Angle No.		Yes	
		Vocal On/Off		No	
		Audio No.		Yes	
		Audio Stereo L/R		Yes (Video CD)	
		Zoom		Yes	
		Marker No.		No	
		Program Play Back		Yes (CD)	
		Surround On/Off		No	
		Screen Saver		No	
		MP3	Folder Name	No	
			File Name	No	
			File No	No	
			Time	No	
			Track No	No	
G-12	**OSD Language**	TV/VCR		English French Spanish	
		DVD		English French Spanish	
G-13	**Clock,Timer and Timer Back-up**	Calendar		1990/1/1 ~ 2081/12/31	
		Timer Events		8 Program/ 1 Month	
		One Touch Recording Max Time		6 Hours	
		OTPB Valid Time		-	
		Sleep Timer	Max Time	120	Min
			Step	10	Min
		On/Off Timer	Program(On Timer / Off Timer)	1	Program
		Auto Shut Off	No Signal	15	Min
			No Operation	-	Min
		Timer Back-up (at Power Off Mode)		5	Sec

GENERAL SPECIFICATIONS

G-14	**Remote Control Unit**	Unit(for TOSHIBA)		RC-FG
		Glow in Dark Remocon		Yes
		Format		NEC
		Custom Code		40-BFh,44-BBh
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		48 Key
		Keys	TV/VCR	Yes
			DVD	Yes
			Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Channel-	Yes
			Channel+	Yes
			Volume-	Yes
			Volume+	Yes
			Display	Yes
			Sleep	Yes
			Audio Select	Yes
			Mute	Yes
			Channel Return / Skip-	Yes
			Closed Caption / Skip+	Yes
			T-REC	Yes
			Rec(T-Rec/OTR)	Yes
			Rec/OTR	Yes
			Slow+	Yes
			Play	Yes
			Stop	Yes
			Rew	Yes
			F. Fwd	Yes
			Pause / Still	Yes
			CM Skip / Jump	Yes
			SP/SLP / Return	Yes
			Counter Reset / Angle	Yes
			Zero Return / Subtitle	Yes
			Input Select / Zoom	Yes
			Menu /Set Up	Yes
			Program / Repeat A-B	Yes
			D.Tracking / Top Menu	Yes
			Tracking+ / DVD Menu	Yes
			Tracking- / Play Mode	Yes
			Cancel/Clear	Yes
			3D Surround	No
			Cursor Up	Yes
			Cursor Down	Yes
			Cursor Left	Yes
			Cursor Right	Yes
			Enter	Yes
			VCR Plus+	No
			One More Search	No
			Remain/Counter	No
			Eject	No
			Index-	No
			Index+	No

GENERAL SPECIFICATIONS

G-15	**Features**	Auto Head Cleaning		Yes
		Auto Tracking		Yes
		HQ (VHS Standard High Quality)		Yes
		Auto Power On, Auto Play, Auto Rewind, Auto Eject		Yes
		VIDEO PLUS+(SHOWVIEW,G-CODE)		No
		Auto Clock		Yes
		Forward / Reverse Picture Search		Yes
		Auto CH Memory		Yes
		Surround		Yes
		Stable Sound		Yes
		Closed Caption		Yes
		TV Auto Shut off Function		Yes
		End Call		No
		Index Search		No
		SQPB		No
		CATV		Yes
		CM Skip(30sec x 6 Times)		Yes
		Comb Filter (2Lines)		Yes
		VM Circuit		No
		TV Monitor		No
		Program Extend		No
		Choke Coil		No
		Energy Star		Yes
		Protect of FBT Leak Circuit		Yes
		Zero Return		Yes
		Power On Memory		No
		Dirty Head		No
		V-chip USA V-chip		Yes
		V-chip CANADA V-chip		No
		Parental Lock (DVD Only)		Yes
		Tray Lock		Yes
		Auto Stop (Pause, and Resume Stop after 5min.)		Yes
		Video CD Playback		Yes
		MP3 Playback		No
		Digital Out	Dolby Digital	Yes
			PCM	Yes
			DTS	Yes
			MPEG1, MPEG2	Yes
		Down Mix Out	(Dolby Digital, MPEG1,MPEG2)	Yes
		TruSurround		No
		Screen Saver		No
G-16	**Accessories**	Owner's Manual	Language	English
			w/Guarantee Card	Yes
		Remote Control Unit		Yes
		Battery		Yes
			UM size x pcs	UM-4 x 2 pcs
			OEM Brand	No
		Rod Antenna		No
			Poles	-
			Terminal	-
		Loop Antenna		No
			Terminal	-
		U/V Mixer		No
		300 ohm to 75 ohm Antenna Adapter		Yes
		Antenna Change Plug		No
		DC Car Cord (Center+)		No
		AC Plug Adapter		No
		AC Cord		No
		AV Cord (2Pin-1Pin)		No
		Guarantee Card		No
		Registration Card		Yes
		ESP Card		No
		Warning Sheet		No
		Dew/AHC Caution Sheet		No
		Quick Set-up Sheet		No
		Circuit Diagram		No
		Service Facility List		No
		Important Safeguard		No

GENERAL SPECIFICATIONS

G-17	**Interface**	Switch	Front	Power (Tact)	Yes
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
				Play (VCR)	Yes
				Stop / Eject (VCR)	Yes
				F.FWD/Cue (VCR)	Yes
				Rew/Rev (VCR)	Yes
				REC/OTR (VCR)	Yes
				Play (DVD)	Yes
				Stop (DVD)	Yes
				Skip+ /Search+ (DVD)	Yes
				Skip- /Search- (DVD)	Yes
				Open/Close (DVD)	Yes
				Input Select	No
				Main Power SW	No
		Indicator		Power	Yes(Red)
				REC/OTR	Yes(Red)
				T-REC	Yes(Red)
				TV/VCR	No
				DVD	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Other Terminal	HeadPhone (Stereo & Mono, 3.5mm)
			Rear	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Video Output	RCA x1
				Audio Output	RCA x 2(Stereo)
				Digital Audio Output	Coaxial (DVD Only)
				VHF/UHF Antenna Input	F Type
				AC Inlet	No
G-18	**Set Size**			Approx. W x D x H (mm)	655 x 473.5 x 580
G-19	**Weight**			Net (Approx.)	36.0kg (79.4lbs)
				Gross (Approx.)	40.0kg (88.2lbs)
G-20	**Carton**		Master Carton		No
				Content	-
				Material	-
				Dimensions W x D x H(mm)	-
				Description of Origin	-
			Gift Box		Yes
				Material	Double/White
				Dimensions W x D x H(mm)	766 x 579.5 x 711
				Design	As per Buyer's
				Description of Origin	Yes
			Drop Test	Natural Dropping At	1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	31
			Container Stuffing(40' container)		180 Sets
G-21	**Material**		Cabinet	Front	PS 94V0 DECABROM
				Rear	PS 94V0 DECABROM
				Jack Panel	-
			PCB	Non-Halogen Demand	No
				Eyelet Demand	Yes

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

1-1: BACK CABINET (Refer to Fig. 1-1)

1. Remove the 6 screws ①.
2. Remove the 2 screws ②.
3. Remove the Back Cabinet in the direction of arrow.

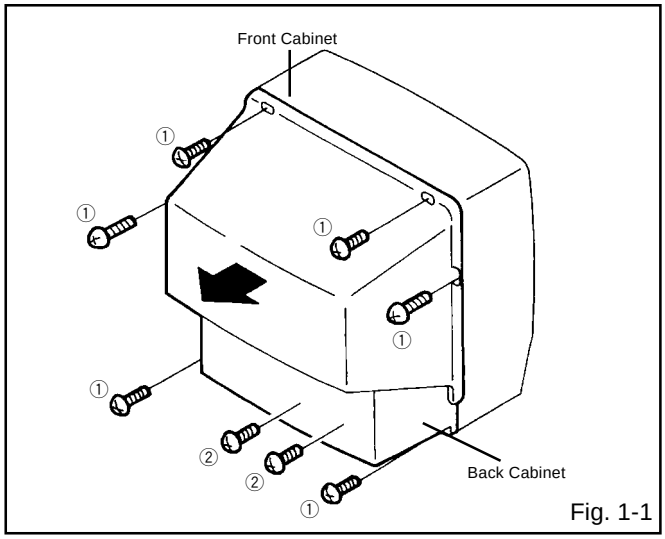

Fig. 1-1

1-2: CRT PCB (Refer to Fig. 1-2)

CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.

1. Remove the Anode Cap.
   (Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connectors:
   (CP603B, CP803 and CP805).
3. Remove the CRT PCB in the direction of arrow.

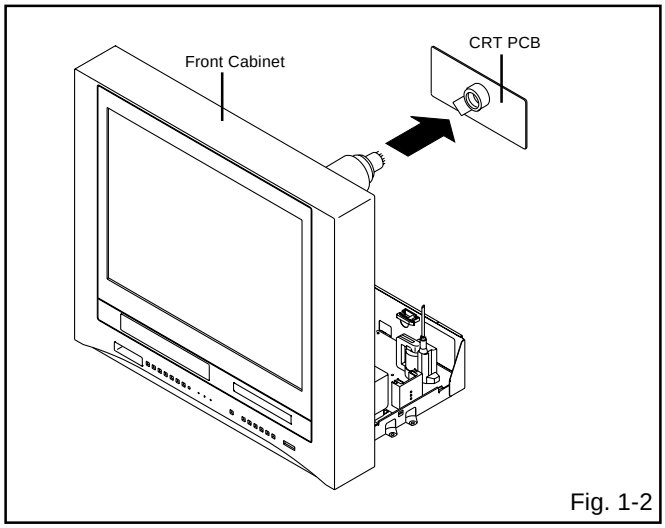

Fig. 1-2

1-3: TV/DVD/VCR BLOCK (Refer to Fig. 1-3)

1. Remove the 2 screws ①.
2. Disconnect the following connectors:
   (CP303, CP404 and CP1704).
3. Remove the TV/DVD/VCR Block in the direction of arrow.

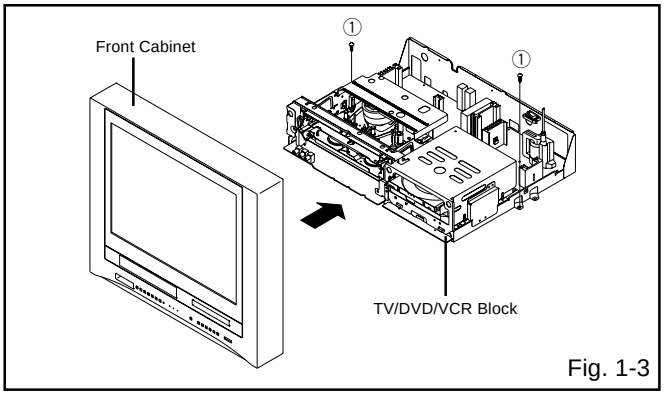

Fig. 1-3

1-4: VCR DECK (Refer to Fig. 1-4)

NOTE

Do not remove the cable at the FE Head section. The FE Head may be damaged if you remove the cable by force.

1. Remove the 2 screws ①.
2. Remove the VCR Top.
3. Remove the 2 screws ②.
4. Remove the VCR Holder.
5. Move the Cassette Holder Ass'y to the back side.
6. Remove the 3 screws ③.
7. Remove the 2 screws ④.
8. Remove the Deck Shield Cover.
9. Remove the screw ⑤.
10. Remove the FE Head.
11. Disconnect the following connectors:
    (CP101, CP4501 and CP4502).
12. Remove the VCR Deck in the direction of arrow.

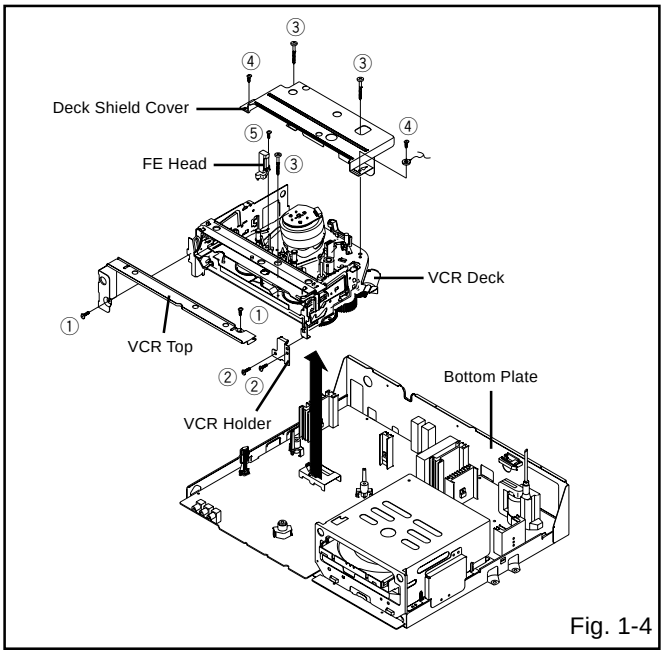

Fig. 1-4

DISASSEMBLY INSTRUCTIONS

1-5: VCR PCB (Refer to Fig. 1-5)

1. Remove the 6 screws ①.
2. Remove the screw ②.
3. Remove the AV Jack Shield.
4. Disconnect the following connectors:
   (CP001, CP604, CP602B, CP2201, CP8001 and CP8002).
5. Remove the VCR PCB in the direction of arrow.

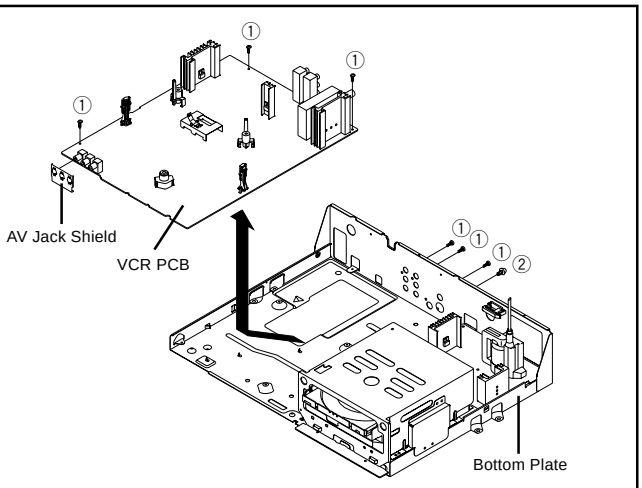

Fig. 1-5

1-6: VCR DECK (Refer to Fig. 1-6)

1. Remove the 2 screws ①.
2. Remove the DVD Shield.
3. Remove the 4 screws ②.
4. Remove the DVD Block in the direction of arrow (A).
5. Remove the 2 screws ③.
6. Remove the Operation PCB in the direction of arrow (B).

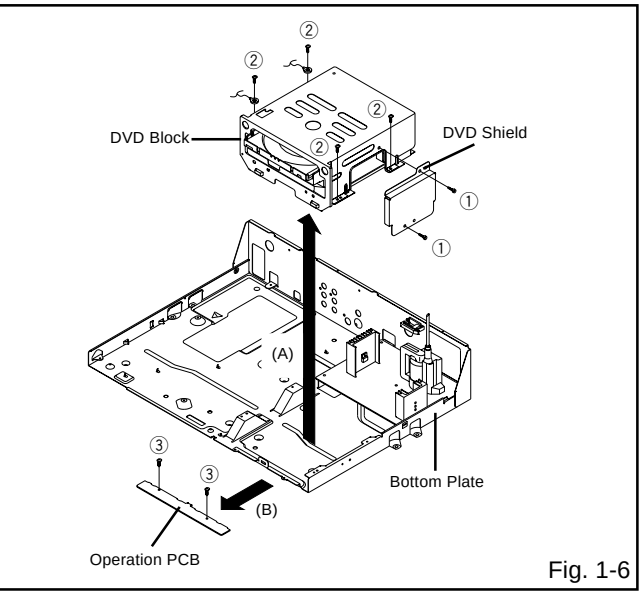

Fig. 1-6

1-7: DVD PCB/DVD DECK (Refer to Fig. 1-7)

1. Make the short circuit on the position as shown **Fig. 1-7** using a soldering. If you remove the DVD Deck with no soldering, the Laser may be damaged.
2. Remove the 3 screws ①.
3. Remove the DVD Top in the direction of arrow (A).
4. Disconnect the following connectors:
   (CP2001, CP2301 and CP2302).
5. Remove the 4 screws ②.
6. Remove the DVD Deck in the direction of arrow (B).
7. Remove the 4 screws ③.
8. Remove the DVD PCB in the direction of arrow (C).

NOTE

When the installation of the DVD Deck, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

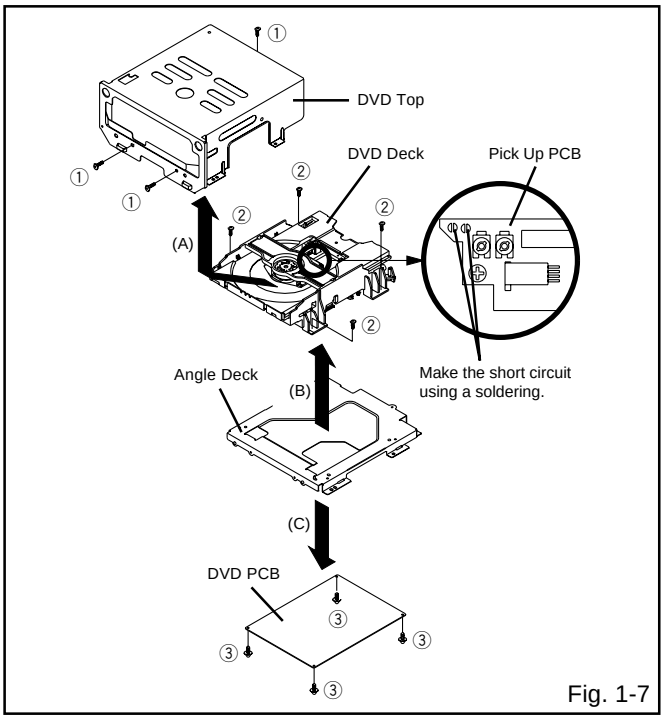

Fig. 1-7

1-8: DEFLECTION PCB (Refer to Fig. 1-8)

1. Remove the 2 screws ①.
2. Remove the 3 screws ②.
3. Remove the Deflection PCB in the direction of arrow.

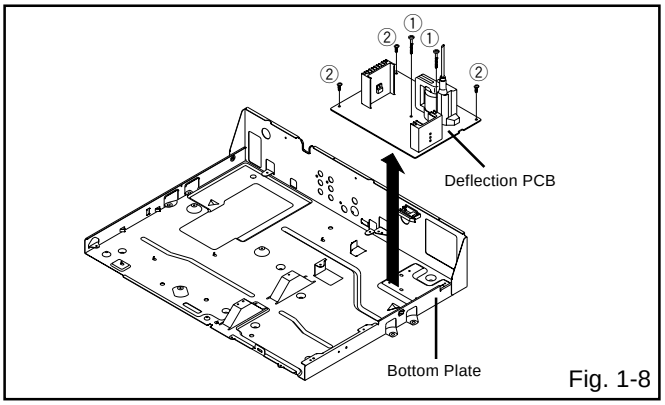

Fig. 1-8

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF VCR DECK PARTS

2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports ①.
2. Slide the 2 supports ② and remove the Top Bracket.

NOTE

1. After the installation of the Top Bracket, bend the support ① so that the Top Bracket is fixed.

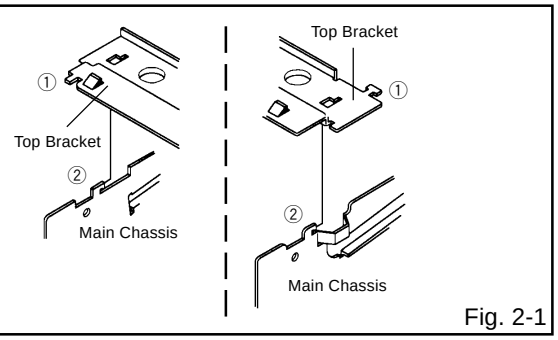

Fig. 2-1

2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

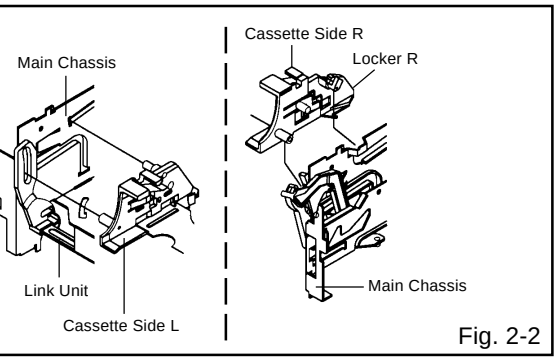

Fig. 2-2

2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports ① and then remove the Cassette Side L/R.
3. Unlock the support ② and then remove the Locker R.

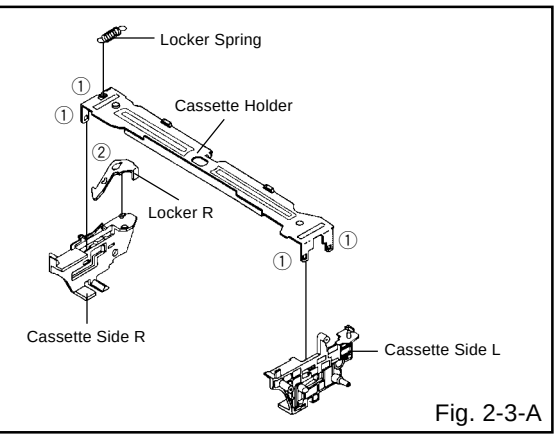

Fig. 2-3-A

NOTE

1. In case of the Locker R installation, check if the one position of Fig. 2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

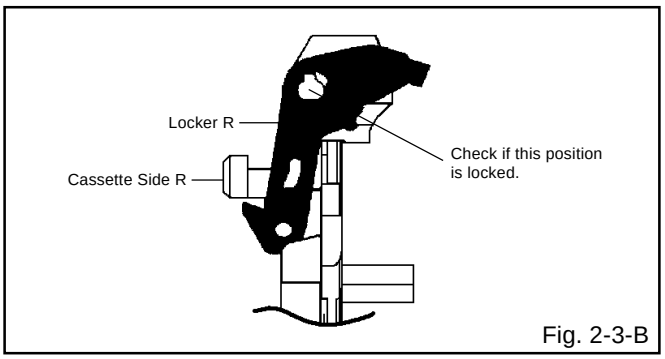

Fig. 2-3-B

2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support ①.
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

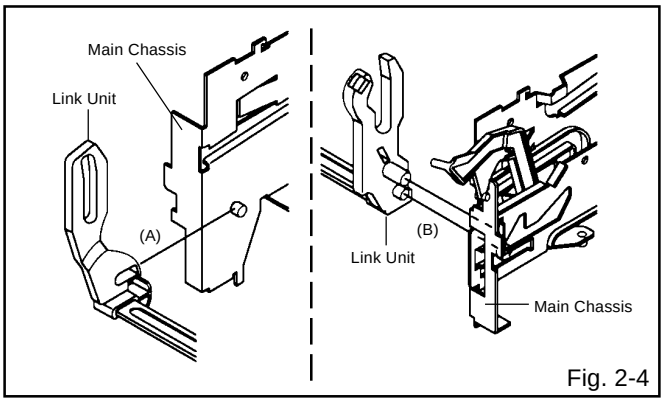

Fig. 2-4

2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)

1. Extend the support ①.
2. Remove the Link Lever.
3. Remove the Flap Lever.

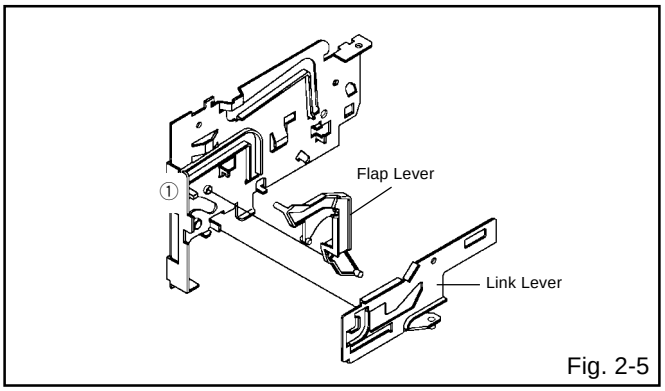

Fig. 2-5

DISASSEMBLY INSTRUCTIONS

2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Loading Motor.
3. Remove the Worm.

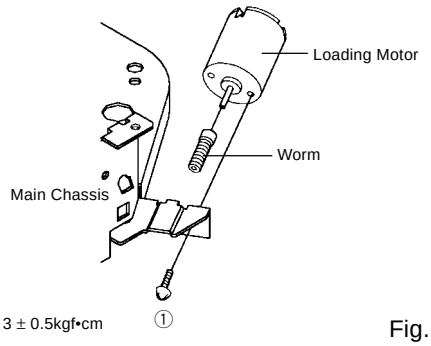

Fig. 2-6-A

NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, hook the wire on the Cassette Opener as shown Fig. 2-6-C.
3. When installing the wires between Capstan DD Unit and Loading Motor, connect them correctly as shown Fig. 2-6-D.

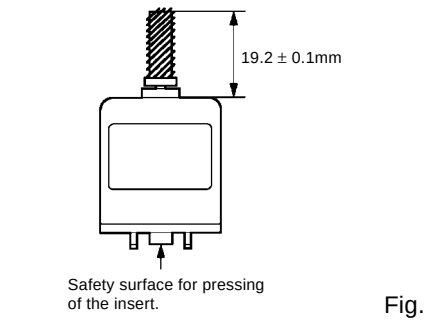

Fig. 2-6-B

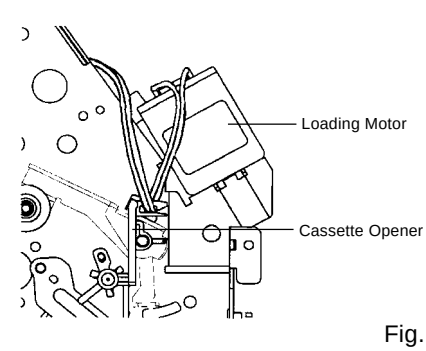

Fig. 2-6-C

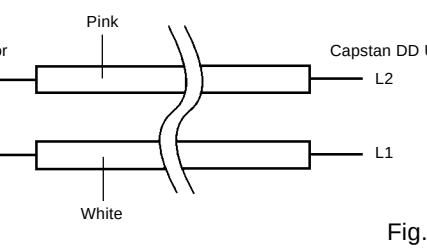

Fig. 2-6-D

2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports ① and remove the Tension Band.
4. Unlock the support ② and remove the Tension Arm Ass'y.
5. Unlock the support ③ and remove the Tension Connect.
6. Float the hook ④ and turn it clockwise then remove the Tension Holder.

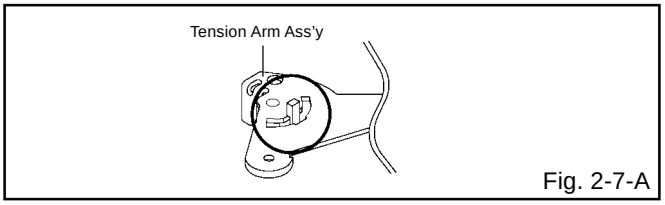

Fig. 2-7-A

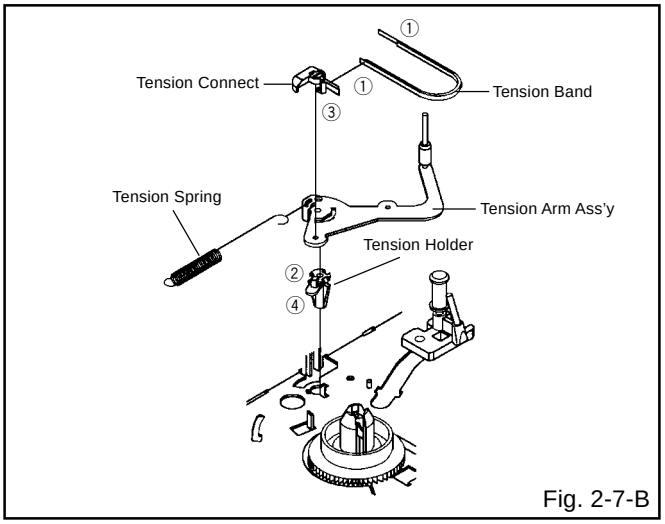

Fig. 2-7-B

NOTE

1. In case of the Tension Band installation, note the direction of the installation. **(Refer to Fig. 2-7-C)**
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

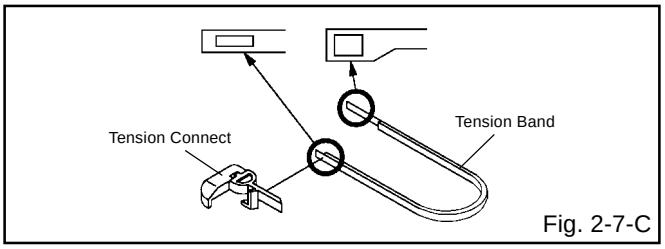

Fig. 2-7-C

DISASSEMBLY INSTRUCTIONS

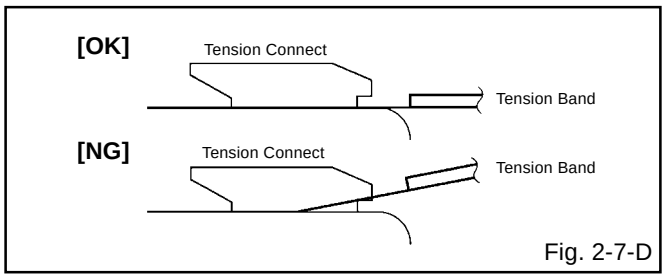

Fig. 2-7-D

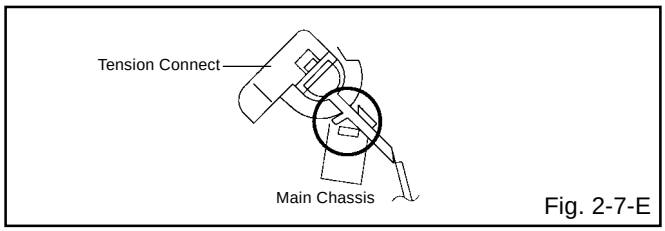

Fig. 2-7-E

2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports ① and remove the T Brake Band.

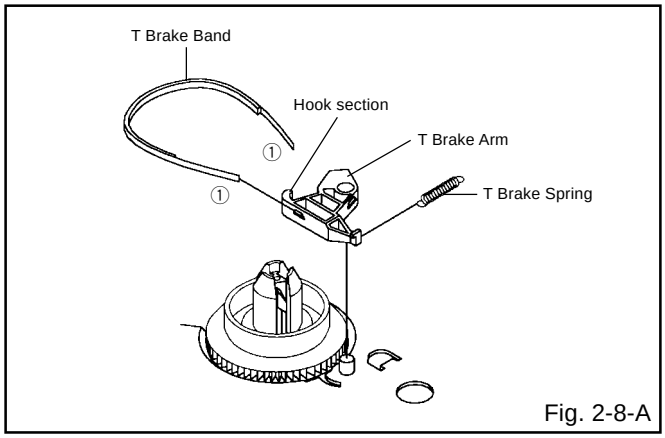

Fig. 2-8-A

NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

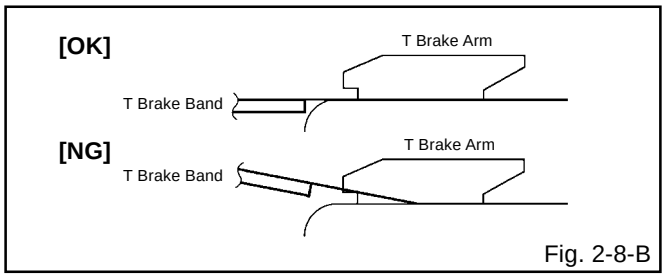

Fig. 2-8-B

2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.
3. Remove the Idler Arm Ass'y and Idler Gear.

NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) **(Refer to Fig. 2-9-A)** Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it. (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. **(Refer to MECHANICAL ADJUSTMENT)**

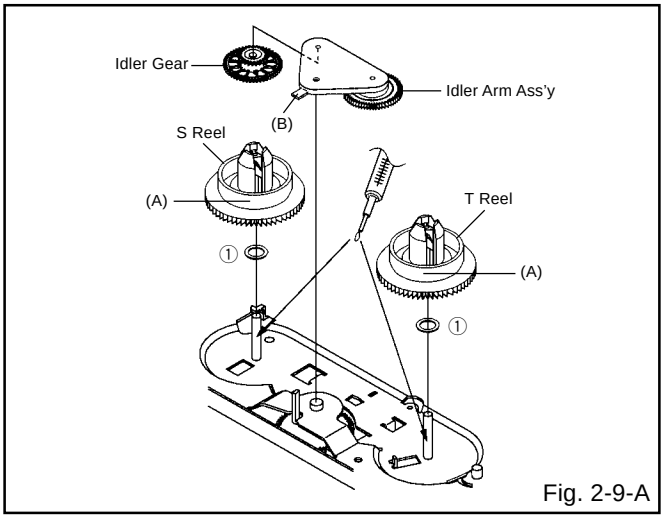

Fig. 2-9-A

NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. **(Refer to Fig. 2-9-B)**
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

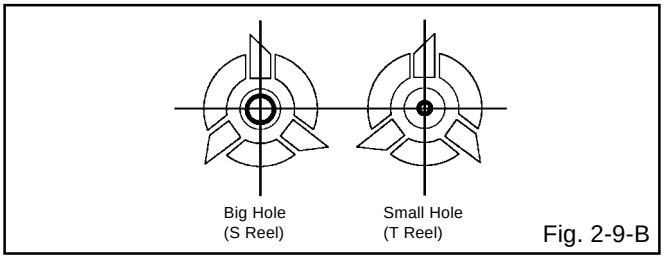

Fig. 2-9-B

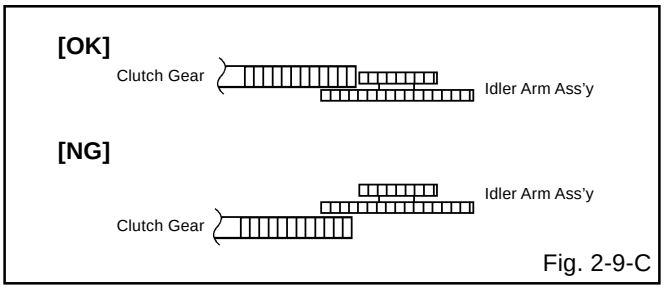

Fig. 2-9-C

DISASSEMBLY INSTRUCTIONS

2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support ① and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

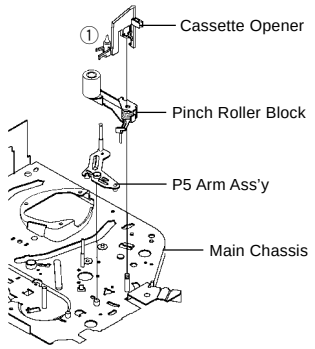

Fig. 2-10-A

NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.

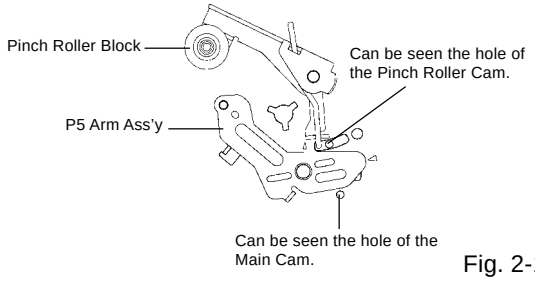

Fig. 2-10-B

2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.

NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

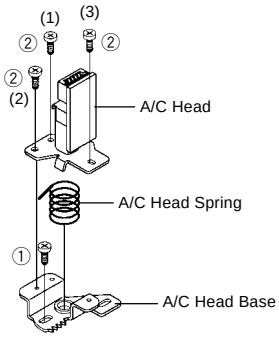

• Screw Torque: 5 ± 0.5kgf•cm (Screw ①)

Fig. 2-11-A

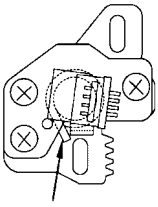

Fig. 2-11-B

2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw ①.
2. Remove the FE Head.

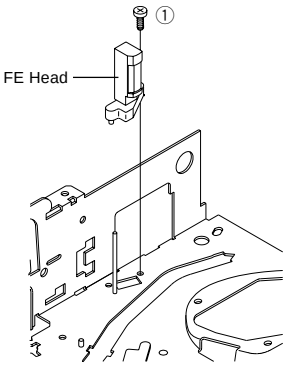

• Screw Torque: 5 ± 0.5kgf•cm
• The FE Head is not installed on the Video Cassette Player.

Fig. 2-12

2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support ① and remove the AHC Ass'y.
2. Disconnect the following connector: (CD2001)
3. Remove the 3 screws ②.
4. Remove the Cylinder Unit Ass'y.

NOTE

1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

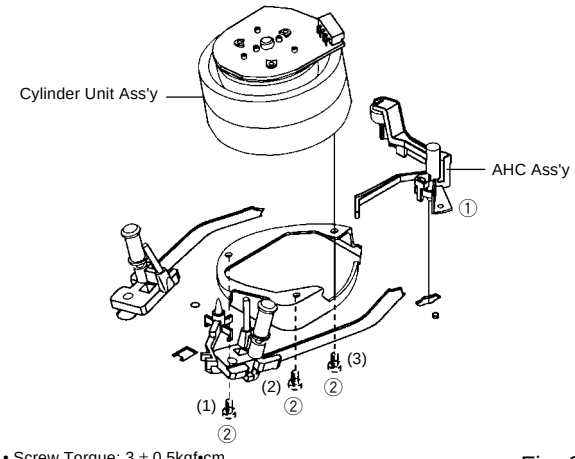

• Screw Torque: 3 ± 0.5kgf•cm

Fig. 2-13

DISASSEMBLY INSTRUCTIONS

2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

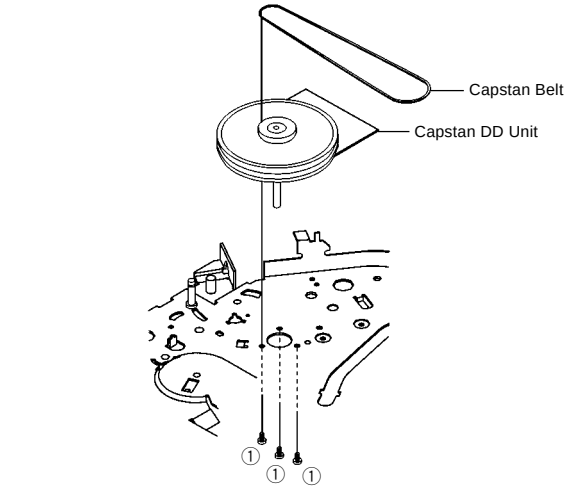

• Screw Torque: 4 ± 0.5kgf•cm

Fig. 2-14-A

NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.) **(Refer to Fig. 2-14-B, C)**

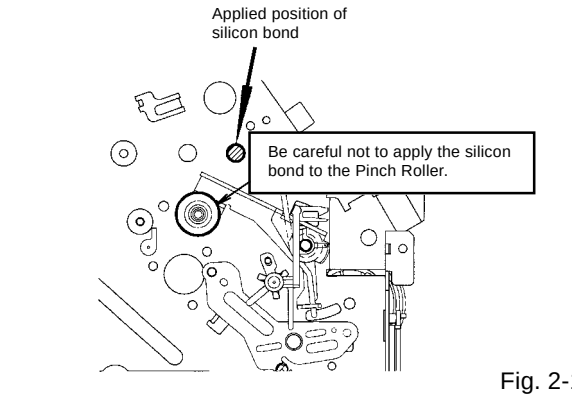

Fig. 2-14-B

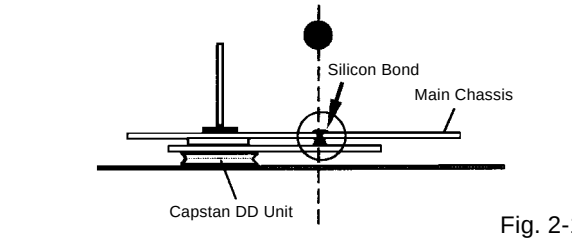

Fig. 2-14-C

2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring ①, then remove the Main Cam.
2. Remove the E-Ring ②, then remove the Pinch Roller Cam and Joint Gear.

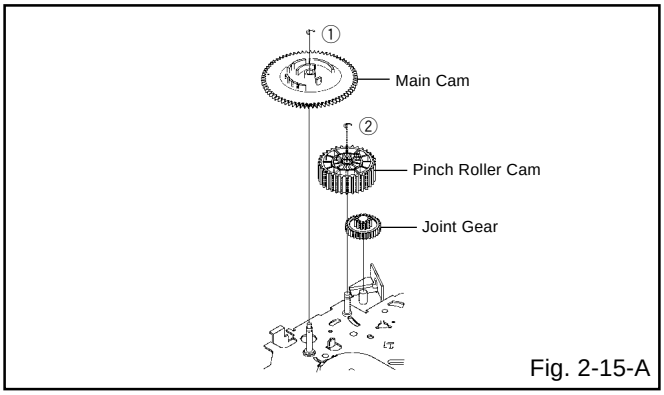

Fig. 2-15-A

NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. **(Refer to Fig. 2-15-B)** And also can be seen the Main Chassis hole through the Main Cam maker hole.

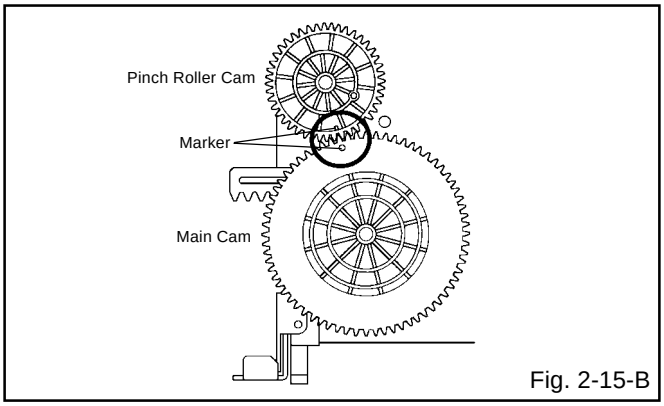

Fig. 2-15-B

2-16: LOADING GEAR S/T UNIT (Refer to Fig. 2-16-A)

1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Unit and Loading Arm T Unit.

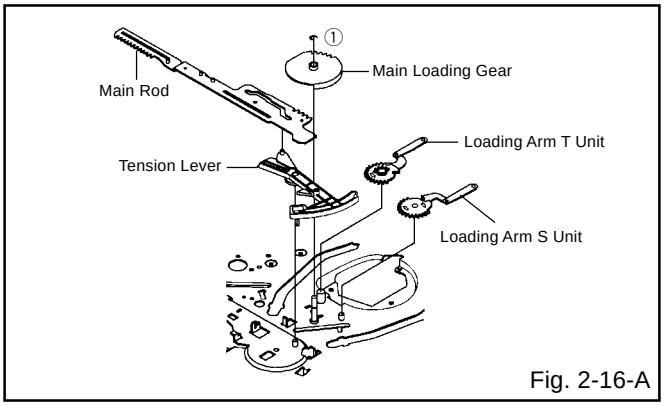

Fig. 2-16-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker. **(Refer to Fig. 2-16-B)**

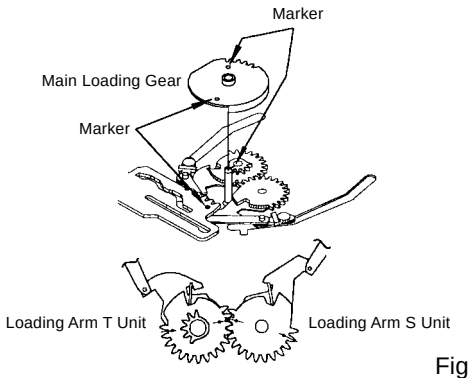

Fig. 2-16-B

2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/ CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Ass'y and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

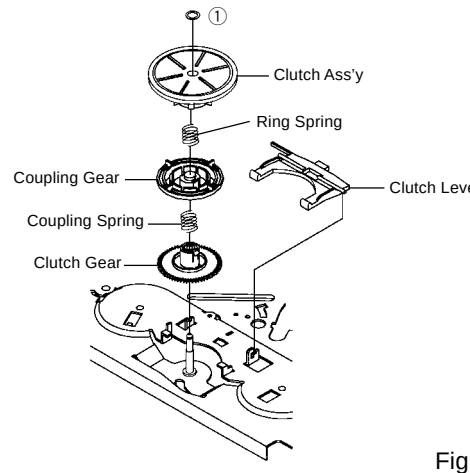

Fig. 2-17-A

NOTE

1. In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. **(Refer to Fig. 2-17-B)**

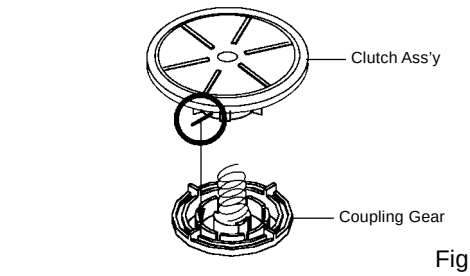

Fig. 2-17-B

2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support ① and remove the Cassette Guide Post.
3. Remove the Inclined Base S/T Unit.
4. Remove the screw ②.
5. Remove the LED Reflector.

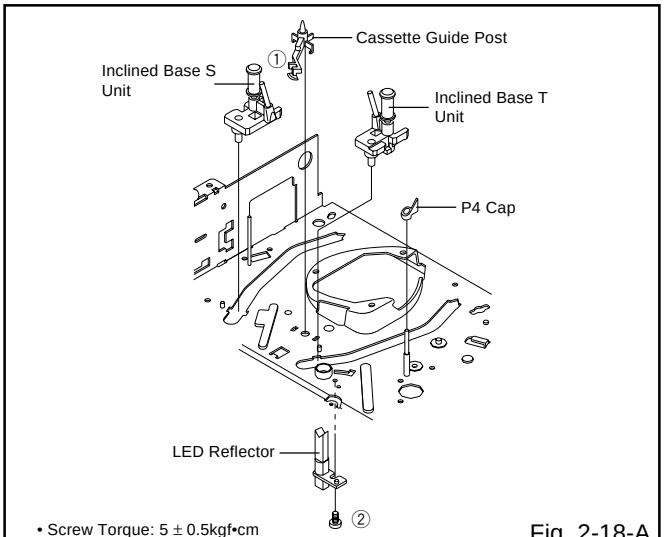

Fig. 2-18-A

NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

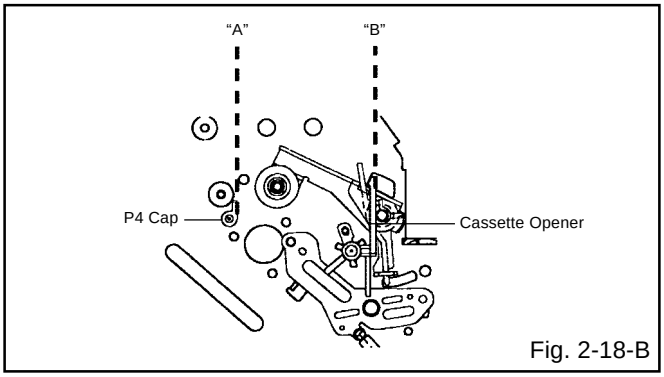

Fig. 2-18-B

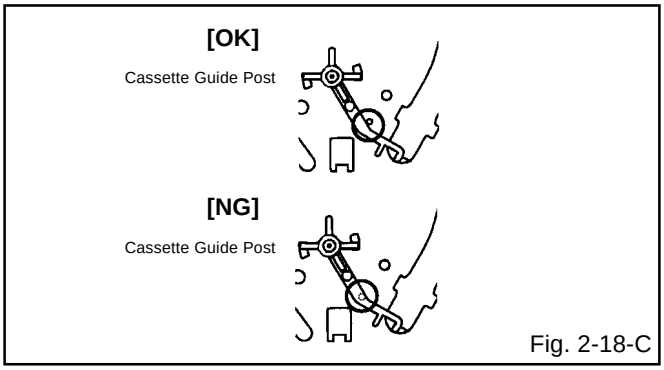

Fig. 2-18-C

DISASSEMBLY INSTRUCTIONS

3. REMOVAL OF DVD DECK PARTS

NOTE

1. Do not disassemble the DVD DECK PARTS except listed parts here. Minute adjustments are needed if the disassemble is done. If the repair is needed except listed parts, replace the DVD MECHA ASS'Y.

3-1: TRAY (Refer to Fig. 3-1-A)

1. Set the Tray opened. **(Refer to the DISC REMOVAL METHOD AT NO POWER SUPPLY)**
2. Unlock the support ① and remove the Tray.

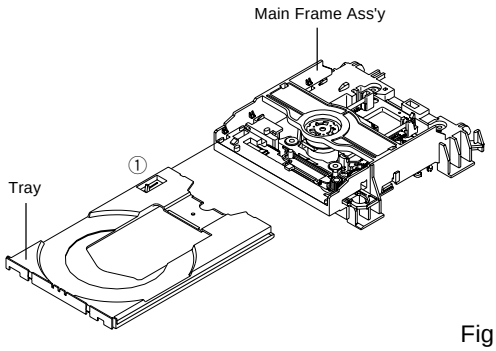

Fig. 3-1-A

NOTE

1. In case of the Tray installation, install them as the circled section of Fig. 3-1-B so that the each markers are met.

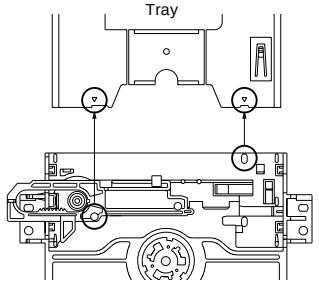

Fig. 3-1-B

3-2: MAIN CHASSIS ASS'Y (Refer to Fig. 3-2)

1. Remove the Main Chassis Ass'y from the Insulator (R).
2. Unlock the support ①.
3. Remove the Main Chassis Ass'y.

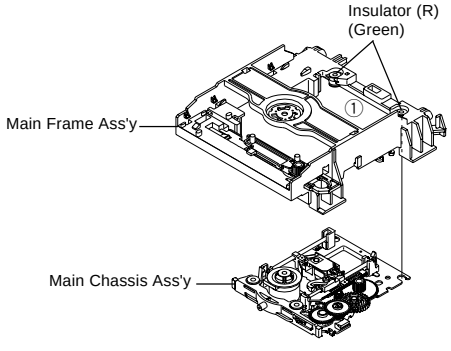

Fig. 3-2

3-3: RACK LOADING/MAIN GEAR/ RACK LOADING SPRING (Refer to Fig. 3-3)

1. Press down the catcher ① and slide the Rack Loading.
2. Remove the Rack Loading, Rack Loading Spring and Main Gear.

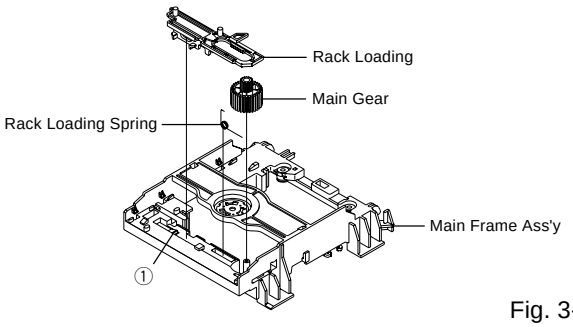

Fig. 3-3

3-4: CLAMPER ASS'Y/INSULATOR(R)/LEVER SWITCH (Refer to Fig. 3-4-A)

1. Remove the screw ①.
2. Remove the Lever Switch.
3. Remove the 2 Insulator (R).
4. Press the Clamper and rotate the Clamper Plate clockwise, then unlock the 3 supports ②.
5. Remove the Clamper Plate, Clamper Magnet and Clamper.

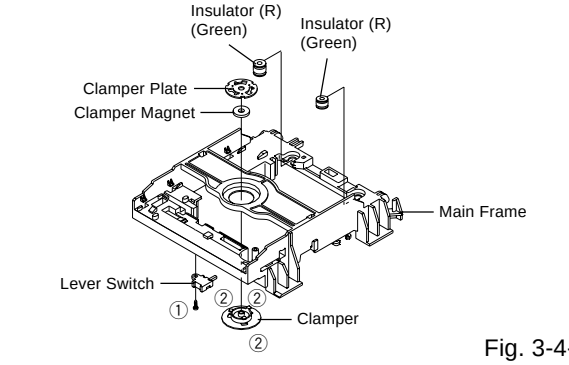

Fig. 3-4-A

NOTE

1. When installing the Clamper Magnet, install it with the green face up.
2. When installing the wire of the Lever Switch, install it correctly as Fig. 3-4-B.
3. When installing the Lever Switch, install it correctly as Fig. 3-4-C.
4. In case of the Lever Switch installation, hook the wire on the Main Frame as shown Fig. 3-4-D.

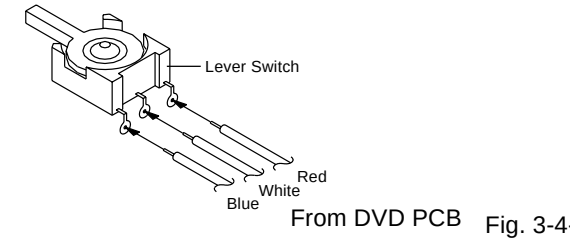

Fig. 3-4-B

DISASSEMBLY INSTRUCTIONS

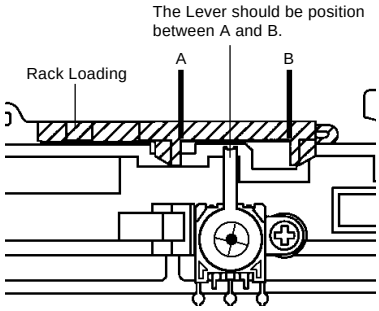

Fig. 3-4-C

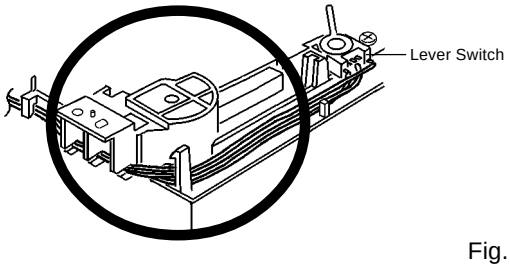

Fig. 3-4-D

3-5: TRAVERSE HOLDER/INSULATOR (F) (Refer to Fig. 3-5-A)

1. Remove the Traverse Holder.
2. Remove the 2 Insulator (F).

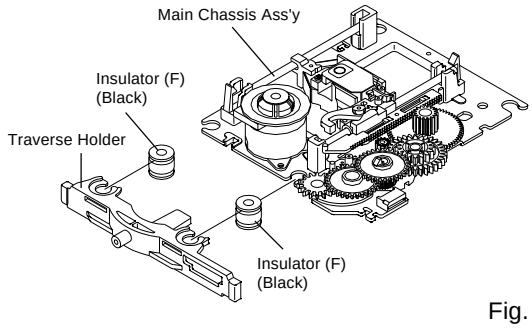

Fig. 3-5-A

NOTE

1. After the installing of the Traverse Holder, check if the wire is like Fig. 3-5-B.

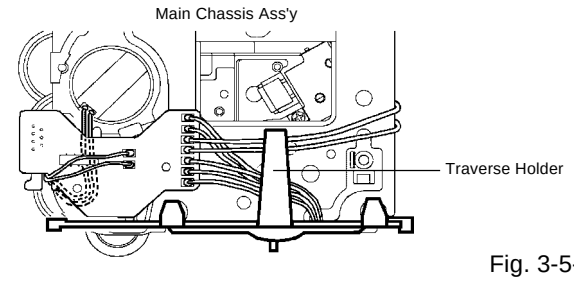

Fig. 3-5-B

3-6: SWITCH PCB ASS'Y (Refer to Fig. 3-6-A)

1. Remove the screw ①.
2. Remove the Switch PCB Ass'y.

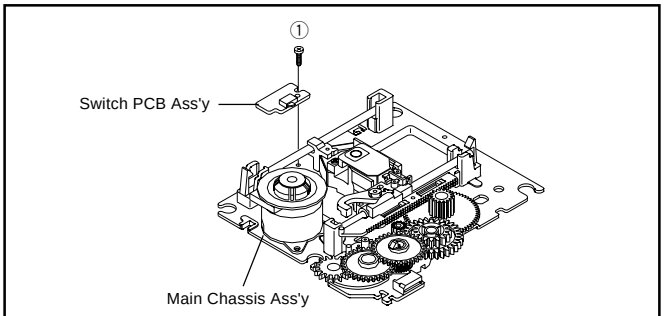

Fig. 3-6-A

NOTE

1. When installing the wire of the Switch PCB, install it correctly as Fig. 3-6-B.

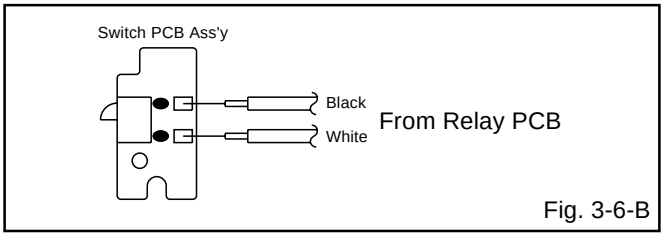

Fig. 3-6-B

3-7: RACK FEED ASS'Y (Refer to Fig. 3-7-A)

1. Remove the screw ①.
2. Remove the Rack Feed 1/2 Spring, Rack Feed 1/2 and Rack Feed Lever.

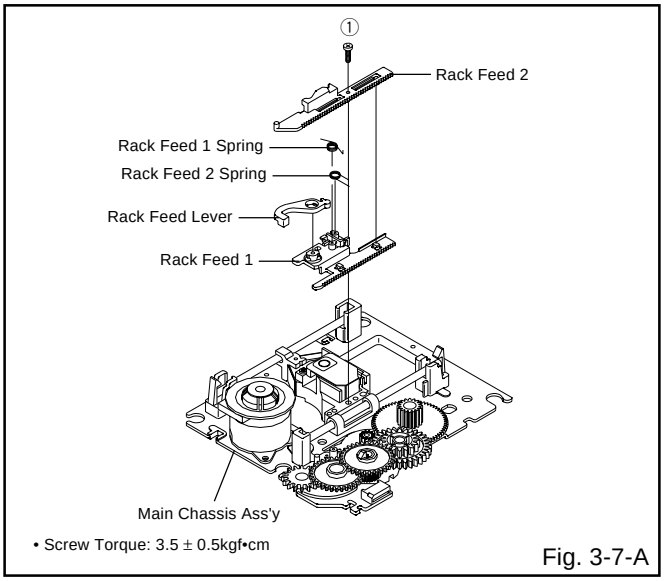

Fig. 3-7-A

NOTE

1. After the assembly of the Rack Feed, check if the Rack Feed 1/2 is moving smoothly. **(Refer to Fig. 3-7-B)**
2. In case of the Rack Feed Ass'y installation, install correctly as Fig. 3-7-C.

DISASSEMBLY INSTRUCTIONS

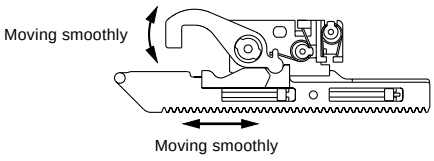

Fig. 3-7-B

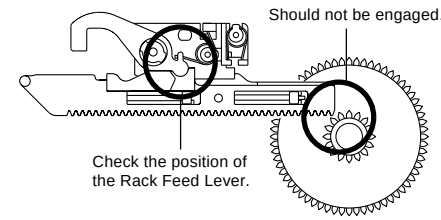

Fig. 3-7-C

3-8: RELAY PCB ASS'Y (Refer to Fig. 3-8-A)

1. Remove the screw ①.
2. Remove the Relay PCB Ass'y.

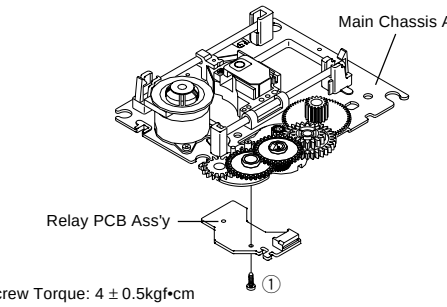

Fig. 3-8-A

NOTE

1. When installing the wire of the Relay PCB, install it correctly as Fig. 3-8-B.

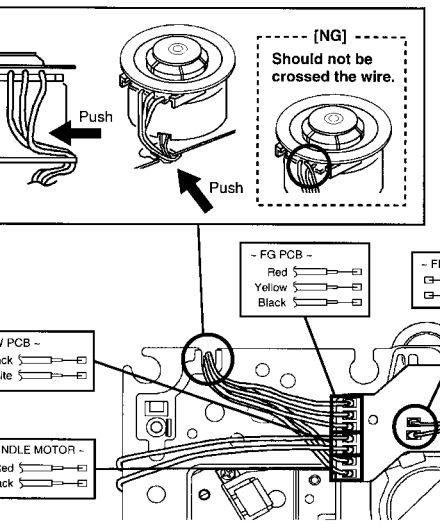

Fig. 3-8-B

3-9: GEAR (Refer to Fig. 3-9-A)

1. Unlock the support ①.
2. Remove the Middle Gear 1/2/3, Idler Gear and Feed Gear.

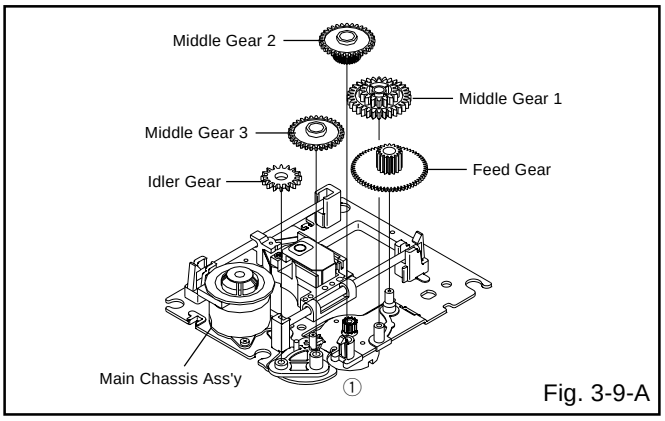

Fig. 3-9-A

NOTE

1. In case of the Idler Gear installation, install correctly as Fig. 3-9-B.
2. When installing the Middle Gear 2, check if the Middle Gear 2 is locked correctly as Fig. 3-9-C.

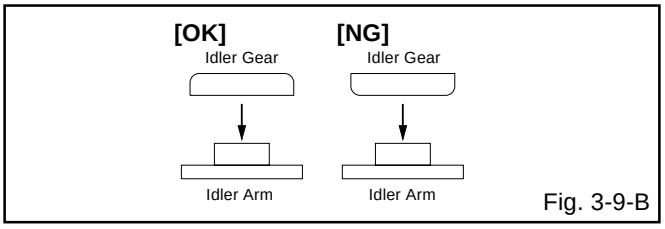

Fig. 3-9-B

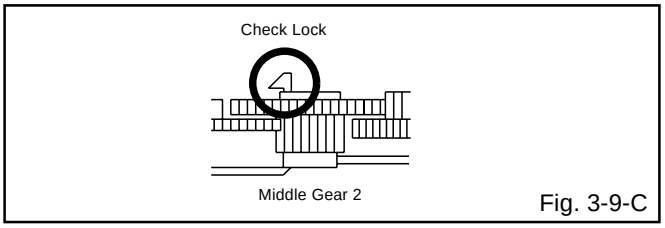

Fig. 3-9-C

3-10: IDLER ARM (Refer to Fig. 3-10-A)

1. Remove the Idler Arm Spring.
2. Remove the Chassis Spring.
3. Remove the Idler Arm.

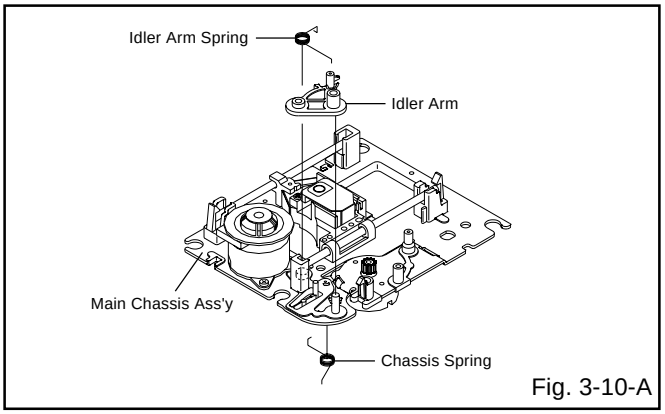

Fig. 3-10-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. In case of the Idler Arm installation, install as the circled section of Fig. 3-10-B.
2. In case of the Idler Arm Spring installation, install as the circled section of Fig. 3-10-C.
3. In case of the Chassis Spring installation, install as the circled section of Fig. 3-10-D.

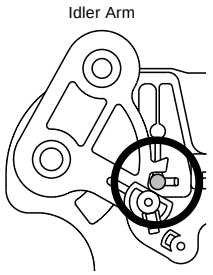

Fig. 3-10-B

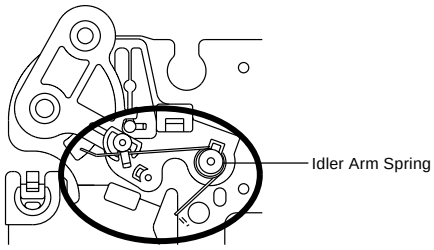

Fig. 3-10-C

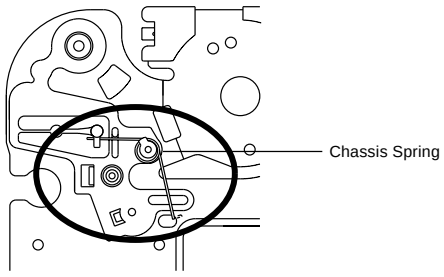

Fig. 3-10-D

3-11: FEED MOTOR (Refer to Fig. 3-11-A)

1. Remove the 2 screws ①.
2. Remove the Feed Motor.
3. Remove the Motor Gear.

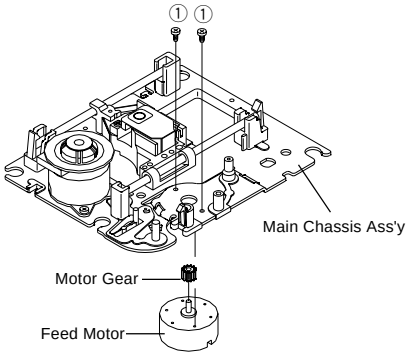

• Screw Torque: 1 ± 0.5kgf•cm

Fig. 3-11-A

NOTE

1. In case of the Motor Gear installation, check if the value of the Fig. 3-11-B is correct.
2. When installing the Feed Motor, check if the cable is positioned as Fig. 3-11-C.

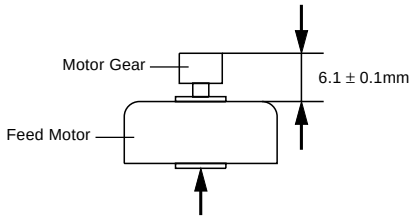

Fig. 3-11-B

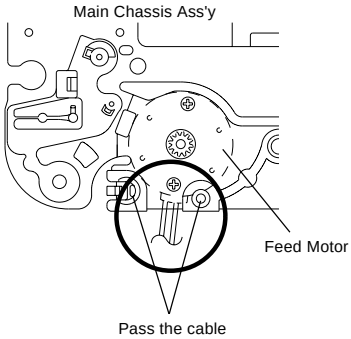

Fig. 3-11-C

DISASSEMBLY INSTRUCTIONS

4. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 4-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

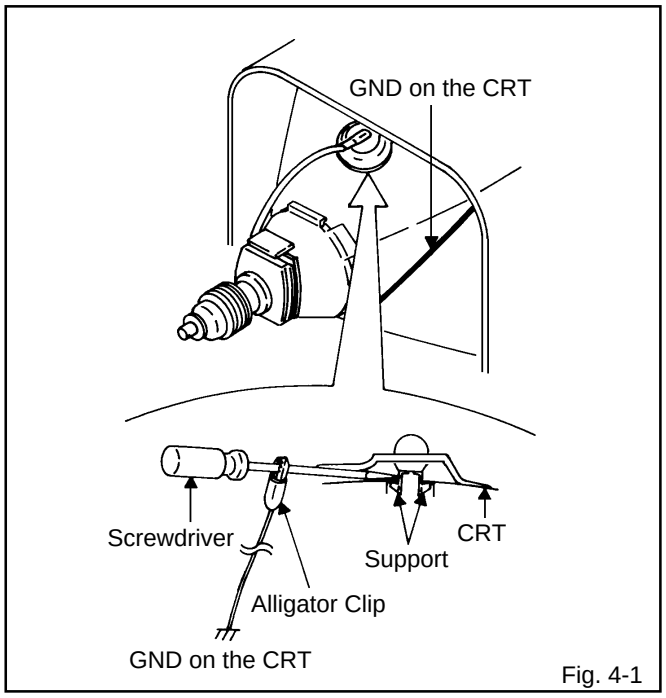

Fig. 4-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 4-2.)**

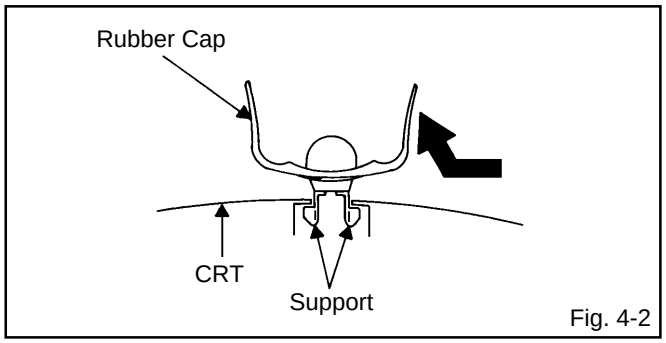

Fig. 4-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 4-3.)**

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

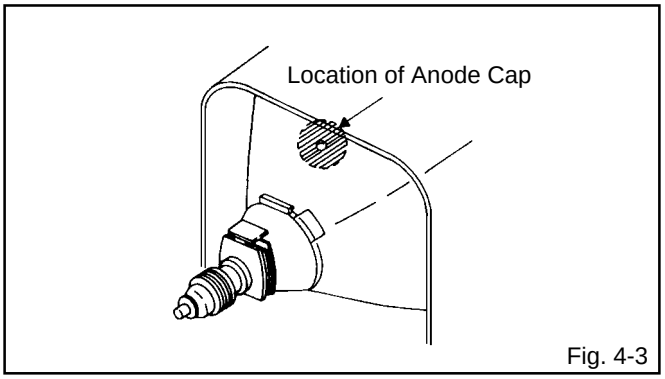

Fig. 4-3

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 4-4.)**

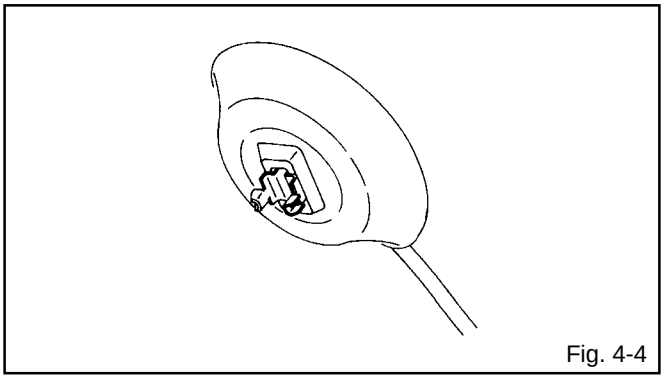
Fig. 4-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 4-5**.

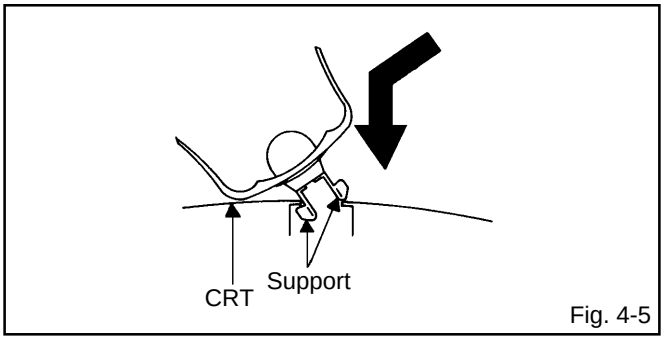

Fig. 4-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

5. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 5-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

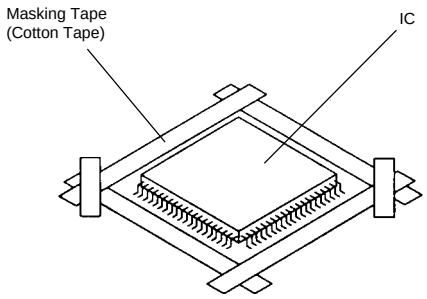

Fig. 5-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 5-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

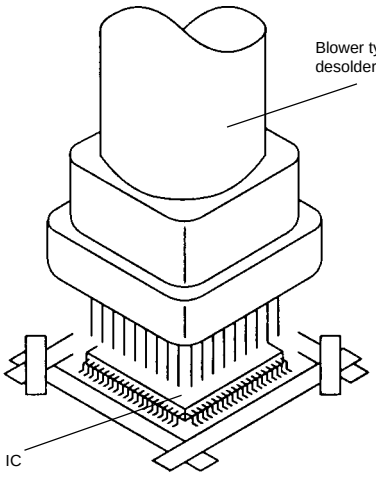

Fig. 5-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 5-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

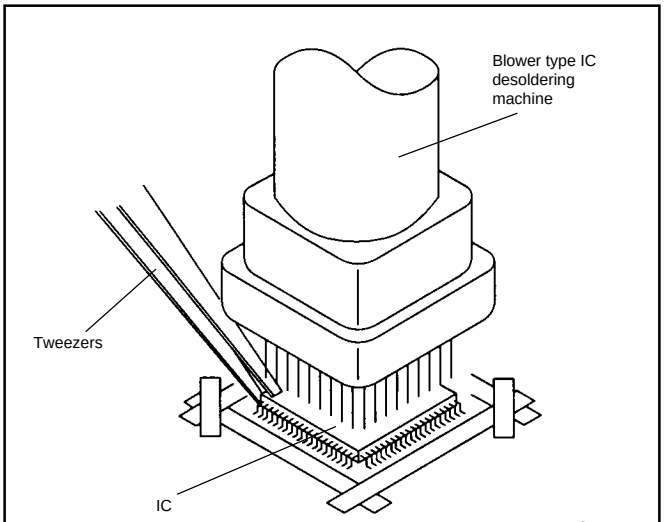

Fig. 5-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 5-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

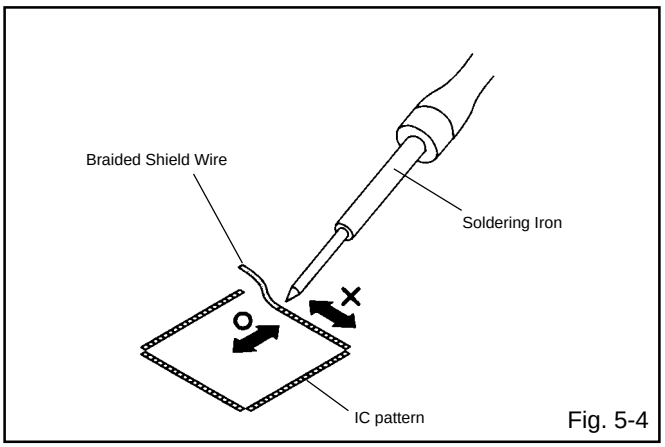

Fig. 5-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 5-5.)**

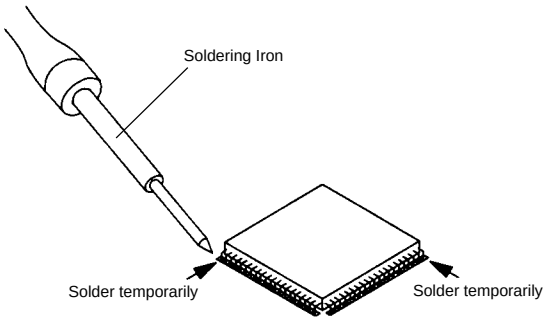

Fig. 5-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 5-6.)**

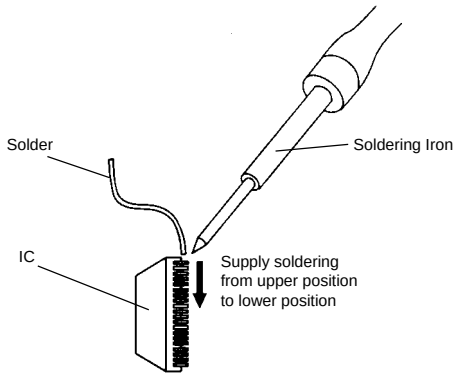

Fig. 5-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 5-7.)**

   NOTE

   Do not absorb the solder to excess.

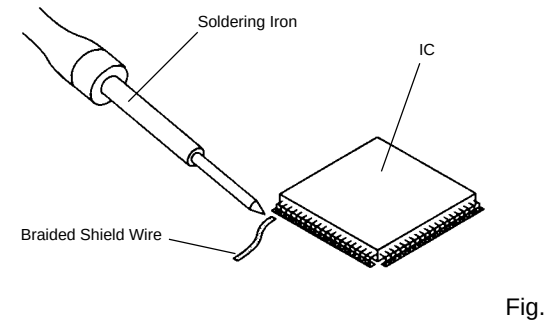

Fig. 5-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 5-8.)**

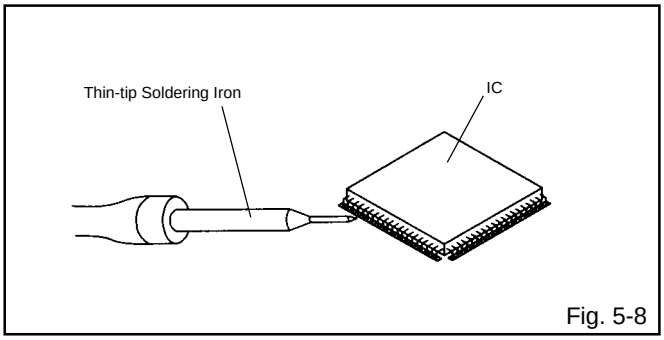

Fig. 5-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

KEY TO ABBREVIATIONS

A	**A/C**	:	Audio/Control
	ACC	:	Automatic Color Control
	AE	:	Audio Erase
	AFC	:	Automatic Frequency Control
	AFT	:	Automatic Fine Tuning
	AFT DET	:	Automatic Fine Tuning Detect
	AGC	:	Automatic Gain Control
	AMP	:	Amplifier
	ANT	:	Antenna
	A.PB	:	Audio Playback
	APC	:	Automatic Phase Control
	ASS'Y	:	Assembly
	AT	:	All Time
	AUTO	:	Automatic
	A/V	:	Audio/Video
B	**BGP**	:	Burst Gate Pulse
	BOT	:	Beginning of Tape
	BPF	:	Bandpass Filter
	BRAKE SOL	:	Brake Solenoid
	BUFF	:	Buffer
	B/W	:	Black and White
C	**C**	:	Capacitance, Collector
	CASE	:	Cassette
	CAP	:	Capstan
	CARR	:	Carrier
	CH	:	Channel
	CLK	:	Clock
	CLOCK (SY-SE)	:	Clock (Syscon to Servo)
	COMB	:	Combination, Comb Filter
	CONV	:	Converter
	CPM	:	Capstan Motor
	CTL	:	Control
	CYL	:	Cylinder
	CYL-M	:	Cylinder-Motor
	CYL SENS	:	Cylinder-Sensor
D	**DATA (SY-CE)**	:	Data (Syscon to Servo)
	dB	:	Decibel
	DC	:	Direct Current
	DD Unit	:	Direct Drive Motor Unit
	DEMOD	:	Demodulator
	DET	:	Detector
	DEV	:	Deviation
E	**E**	:	Emitter
	EF	:	Emitter Follower
	EMPH	:	Emphasis
	ENC	:	Encoder
	ENV	:	Envelope
	EOT	:	End of Tape
	EQ	:	Equalizer
	EXT	:	External
F	**F**	:	Fuse
	FBC	:	Feed Back Clamp
	FE	:	Full Erase
	FF	:	Fast Forward, Flip-flop
	FG	:	Frequency Generator
	FL SW	:	Front Loading Switch
	FM	:	Frequency Modulation
	FSC	:	Frequency Sub Carrier
	FWD	:	Forward
G	**GEN**	:	Generator
	GND	:	Ground
H	**H.P.F**	:	High Pass Filter
	H.SW	:	Head Switch
	Hz	:	Hertz
I	**IC**	:	Integrated Circuit
	IF	:	Intermediate Frequency
	IND	:	Indicator
	INV	:	Inverter
K	**KIL**	:	Killer
L	**L**	:	Left
	LED	:	Light Emitting Diode
	LIMIT AMP	:	Limiter Amplifier
	LM, LDM	:	Loading Motor
	LP	:	Long Play
	L.P.F	:	Low Pass Filter
	LUMI.	:	Luminance
M	**M**	:	Motor
	MAX	:	Maximum
	MINI	:	Minimum
	MIX	:	Mixer, mixing
	MM	:	Monostable Multivibrator
	MOD	:	Modulator, Modulation
	MPX	:	Multiplexer, Multiplex
	MS SW	:	Mecha State Switch
N	**NC**	:	Non Connection
	NR	:	Noise Reduction
O	**OSC**	:	Oscillator
	OPE	:	Operation
P	**PB**	:	Playback
	PB CTL	:	Playback Control
	PB-C	:	Playback-Chrominance
	PB-Y	:	Playback-Luminance
	PCB	:	Printed Circuit Board
	P. CON	:	Power Control
	PD	:	Phase Detector
	PG	:	Pulse Generator
	P-P	:	Peak-to Peak
R	**R**	:	Right
	REC	:	Recording
	REC-C	:	Recording-Chrominance
	REC-Y	:	Recording-Luminance
	REEL BRK	:	Reel Brake
	REEL S	:	Reel Sensor
	REF	:	Reference
	REG	:	Regulated, Regulator
	REW	:	Rewind
	REV, RVS	:	Reverse
	RF	:	Radio Frequency
	RMC	:	Remote Control
	RY	:	Relay
S	**S. CLK**	:	Serial Clock
	S. COM	:	Sensor Common
	S. DATA	:	Serial Data
	SEG	:	Segment
	SEL	:	Select, Selector
	SENS	:	Sensor
	SER	:	Search Mode
	SI	:	Serial Input
	SIF	:	Sound Intermediate Frequency
	SO	:	Serial Output
	SOL	:	Solenoid
	SP	:	Standard Play

KEY TO ABBREVIATIONS

S	**STB**	:	Serial Strobe
	SW	:	Switch
	SYNC	:	Synchronization
	SYNC SEP	:	Sync Separator, Separation
T	**TR**	:	Transistor
	TRAC	:	Tracking
	TRICK PB	:	Trick Playback
	TP	:	Test Point
U	**UNREG**	:	Unregulated
V	**V**	:	Volt
	VCO	:	Voltage Controlled Oscillator
	VIF	:	Video Intermediate Frequency
	VP	:	Vertical Pulse, Voltage Display
	V.PB	:	Video Playback
	VR	:	Variable Resistor
	V.REC	:	Video Recording
	VSF	:	Visual Search Fast Forward
	VSR	:	Visual Search Rewind
	VSS	:	Voltage Super Source
	V-SYNC	:	Vertical-Synchronization
	VT	:	Voltage Tuning
X	**X'TAL**	:	Crystal
Y	**Y/C**	:	Luminance/Chrominance

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter SERVICE MODE, unplug AC cord till lost actual clock time. Then press and hold Vol (-) button of main unit and remocon key simultaneously.
The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

Set Key	Remocon Key	Standard Time (seconds)	Operations
VOL. (-) MIN	0	2	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	2	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, the POWER ON total hours, and PLAY/REC total hours.
VOL. (-) MIN	2	2	Horizontal position adjustment of OSD. NOTE: Also can be adjusted by using the Adjustment MENU. Refer to the "ELECTRICAL ADJUSTMENT" (OSD HORIZONTAL).
VOL. (-) MIN	3	2	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	4	2	Adjust the PG SHIFTER manually. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	5	2	Adjusting of the Tracking to the center position.
VOL. (-) MIN	6	2	POWER ON total hours and PLAY/REC total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	2	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).
REC/OTR	4	2	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.
STOP (DVD)	7	3	Releasing of PARENTAL LOCK. Refer to the “PARENTAL CONTROL - RATING LEVEL”. NOTE: The function will only work without the setting of DVD disc at DVD mode.
STOP (DVD)	9	3	Tray cannot be opened. Refer to the “TRAY LOCK”. NOTE: No indications on the screen when the Tray Lock is setting.

Set Key	Set Key	Standard Time (seconds)	Operations
VOL. (-) MIN	FF	2	The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape. Refer to the "PREPARATION FOR SERVICING"

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.
Parts replacing time does not mean the life span for individual parts.
Also, long term storage or misuse may cause transformation and aging of rubber parts.
The following list means standard hours, so the checking hours depends on the conditions.

Time / Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	2,500 hours	Notes
Audio Control Head	■	■	■	●	●	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	●	●	
Capstan Belt		●	●	●	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	●	●	●	●	
Capstan DD Unit		●	●	●	●	
Loading Motor					●	
Tension Band		●	●	●	●	
T Brake Band		●	●	●	●	
Clutch Ass'y		●	●	●	●	
Idler Arm Ass'y		●	●	●	●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	Replace when rolling becomes abnormal.
Cylinder Unit	■	●	●	●	●	Clean the Head

■ : Clean
● : Check it and if necessary, replace it.

CONFIRMATION OF HOURS USED

POWER ON total hours and PLAY/REC total hours can be checked on the screen.
Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".
The confirmation of using hours will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control for more than 2 seconds.
3. After the confirmation of using hours, turn off the power.

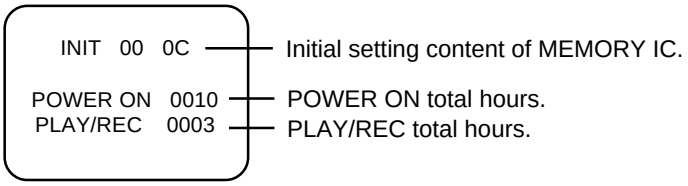

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

PREVENTIVE CHECKS AND SERVICE INTERVALS

CLEANING

NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. **(Refer to the figure below.)**

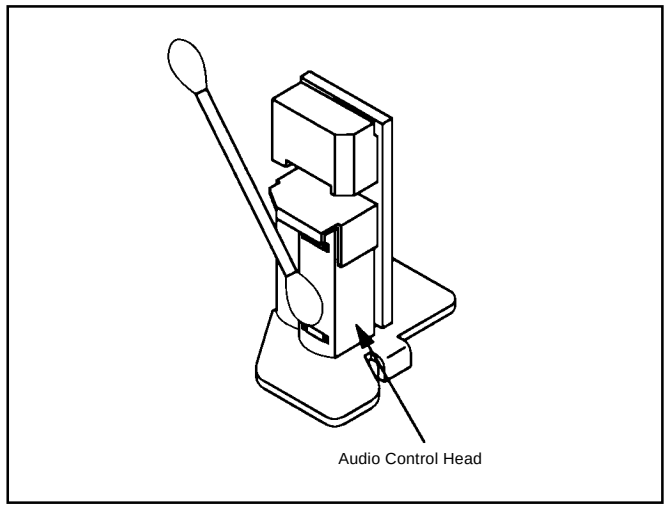

2. TAPE RUNNING SYSTEM

When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). **(Refer to the figure below.)**

NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head.
Use the chamois one by one.

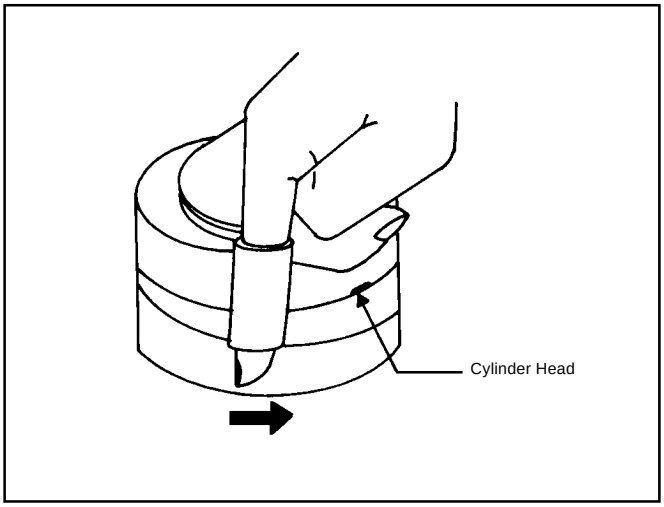

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: Initial Data setting will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.
No need setting for the position of the mark @ due to the adjustment value.
No need setting for after INI 3F due to the adjustment value..

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	0C	00	F3	02	C4	AD	20	22	86	45	F0	08	A6	A0	87	35
10	32	64	E3	52	03	87	00	48	00	FF	15	4B	1C	54	83	B2
20	9A	97	8C	A5	B7	88	91	B6	1A	0B	3D	00	36	16	25	30
30	01	31	19	40	00	@	@	0F	00	23	FF	FF	FF	FF	FF	FF

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.

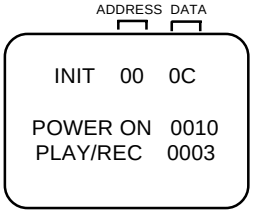

Fig. 1

3. ADDRESS is now selected and should "blink". Using the UP or DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using UP or DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

After the data input, set to the initializing of shipping.

9. Turn POWER on.
10. Press both VOL. DOWN button on the set and the Channel button **(1)** on the remote control for more than 2 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

SERVICING FIXTURES AND TOOLS

Alignment Tape 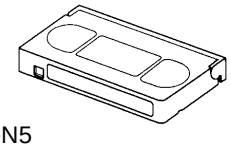 ST-N5 ST-NF	Back tension cassette gauge 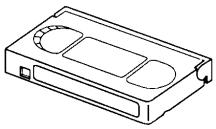 70909103	Torque cassette gauge (KT-300NR) 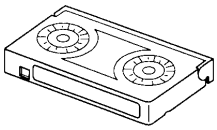 70909199	Taper nut driver 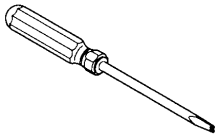 70909228
VTR cleaning kit 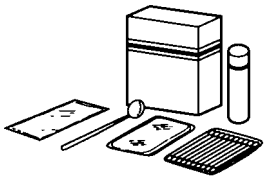	VTR lubrication kit 	Grease 	JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm) 
JG022 Master Plane 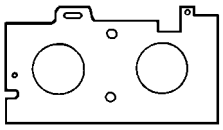	JG024A Reel Disk Height Adjustment Jig 	JG153 X Value Adjustment Screwdriver 	Tentelometer 

Ref. No.	Part No.	Parts Name	Remarks
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf•cm)	Brake Torque (T Reel Ass'y)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf•cm)	VSR Torque, Brake Torque (S Reel)
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment

PREPARATION FOR SERVICING

NOTE: The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the FF button on the set for more than 2 seconds.
   (The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape.)
3. In case of using a cassette tape, press the STOP/EJECT button to insert or eject a cassette tape.
   Turn on the power and re-check the cable before checking the trouble points.

MECHANICAL ADJUSTMENTS

1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)

1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane **(JG022)** and reel disk height adjustment jig **(JG024A)** on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig **(JG024A)** and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to 10(+2, -0)mm.
4. Adjust the other reel in the same way.

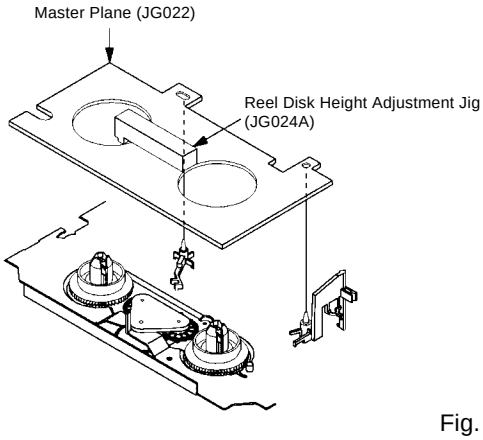

Fig. 1-1-A

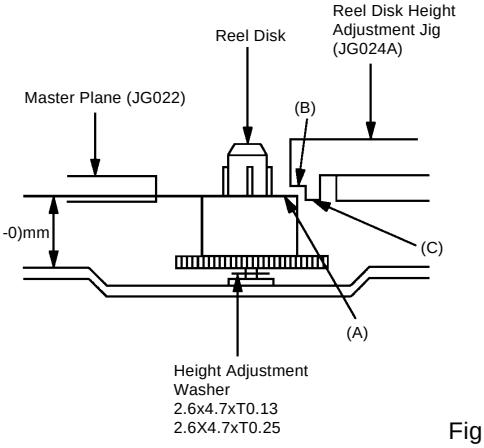

Fig. 1-1-B

1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

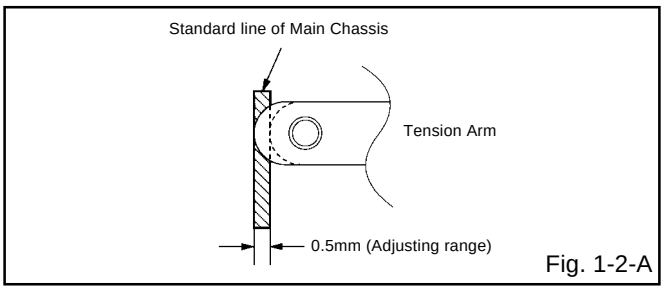

Fig. 1-2-A

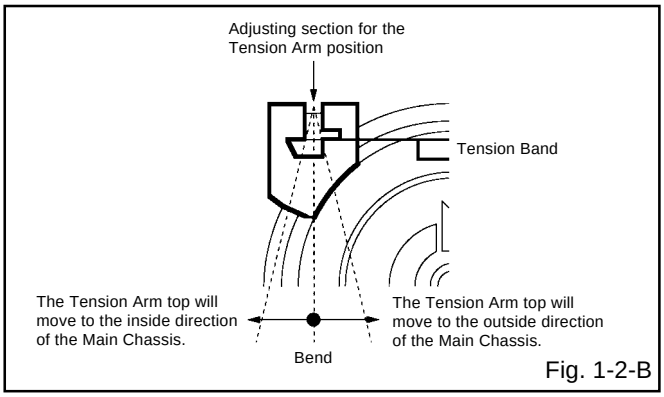

Fig. 1-2-B

1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates 20 ± 2gf in the beginning of playback.

• USING A CASSETTE TYPE TORQUE TAPE **(KT-300NR)**

1. After confirmation and adjustment of Tension Post position **(Refer to item 1-2)**, load the cassette type torque tape **(KT-300NR)** and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates 50~90gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates 25~40gf•cm during playback in SP mode.

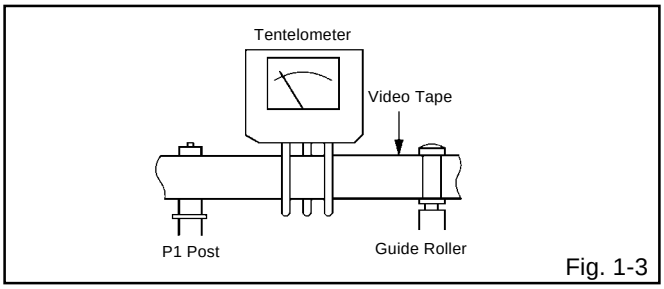

Fig. 1-3

MECHANICAL ADJUSTMENTS

1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge **(JG002F)** and Adapter **(JG002B)** on the S Reel. Set to the Picture Search (Rewind) mode. **(Refer to Fig.1-4-B)**
2. Then, confirm that it indicates 120~180gf•cm.

NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.

1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) **(Refer to Fig. 1-4-B)**

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge **(JG002F)** and Adapter **(JG002B)** on the S Reel. Turn the Torque Gauge **(JG002F)** clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) **(Refer to Fig. 1-4-B)**

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge **(JG002E)** and Adapter **(JG002B)** on the T reel. Turn the Torque Gauge **(JG002E)** counterclockwise.
4. Then, confirm that it indicates 30~50gf•cm.

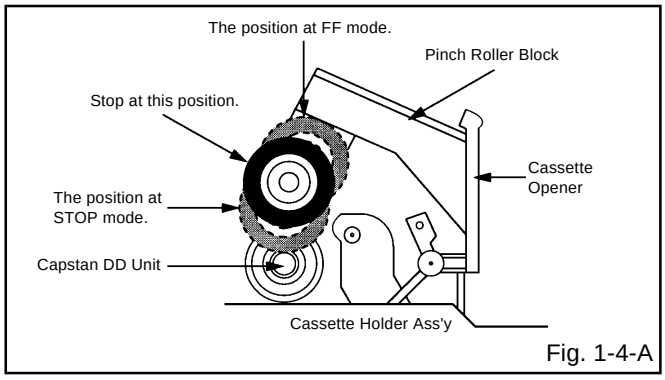

Fig. 1-4-A

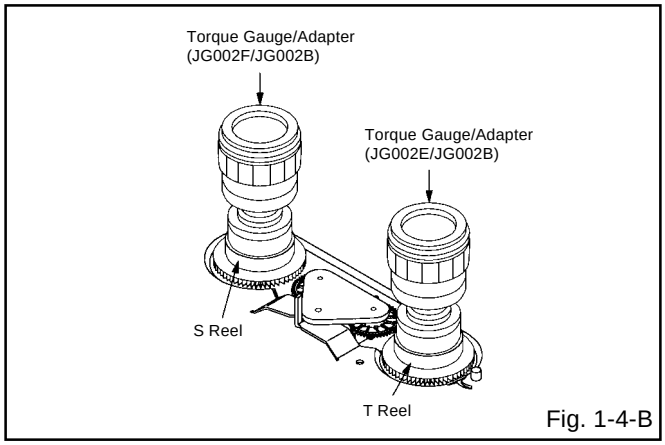

Fig. 1-4-B

NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Ass'y T Reel side: T Reel/T Brake Band//T Brake Spring/T Brake Arm

2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM

Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape.
2. Connect CH-1 of the oscilloscope to **TP4501 (Envelope)** and CH-2 to **TP102 (SW Pulse)**.
3. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control for more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. **(Refer to Fig. 2-1-A)**
5. When observing the envelope, adjust the Taper Nut Driver slightly until the envelope will be flat.
   Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in **Fig. 2-1-B**, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback.
   (Refer to the ELECTRICAL ADJUSTMENTS)

NOTE

After adjustment, confirm and adjust A/C head.
(Refer to item 2-2)

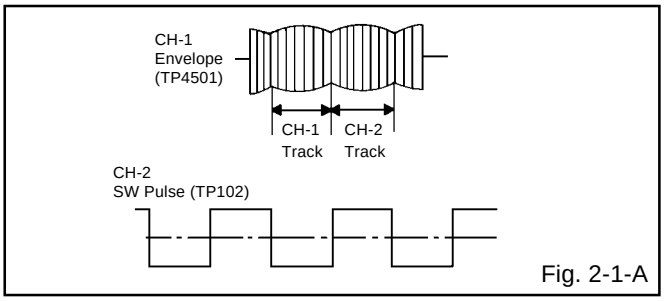

Fig. 2-1-A

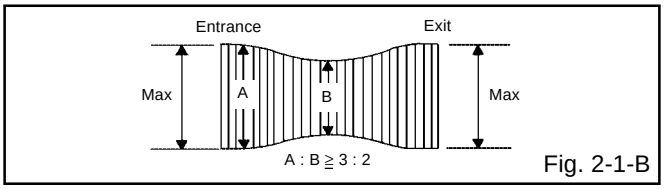

Fig. 2-1-B

MECHANICAL ADJUSTMENTS

2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape.
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Cap as shown in **Fig. 2-2-A**.
   a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
   b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
   c) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

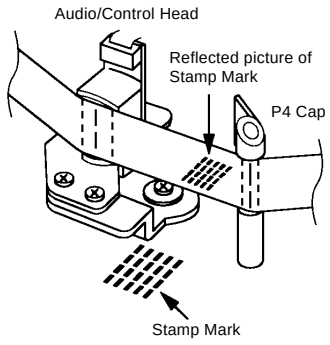

Fig. 2-2-A

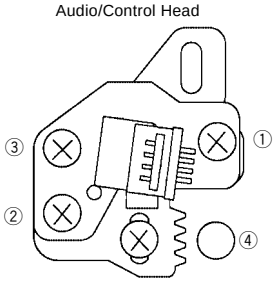

Fig. 2-2-B

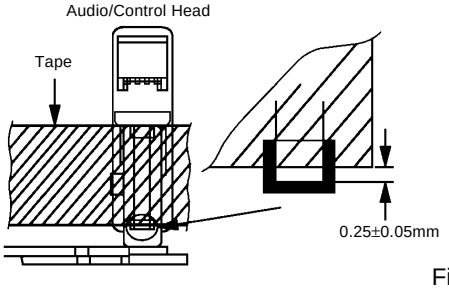

Fig. 2-2-C

2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. **(Refer to item 1-1)**
2. Confirm and adjust the position of the Tension Post. **(Refer to item 1-2)**
3. Adjust the Guide Roller. **(Refer to item 2-1)**
4. Confirm and adjust the Audio/Control Head. **(Refer to item 2-2)**
5. Connect CH-1 of the oscilloscope to **TP102**, CH-2 to **TP4501** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape.
7. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control for more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver **(JG153)** to the ④ of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

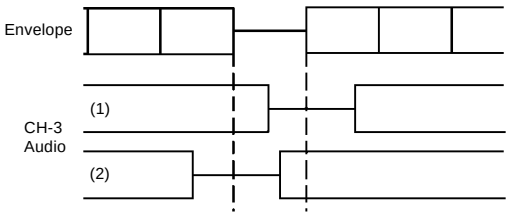

Fig. 2-3

MECHANICAL ADJUSTMENTS

3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

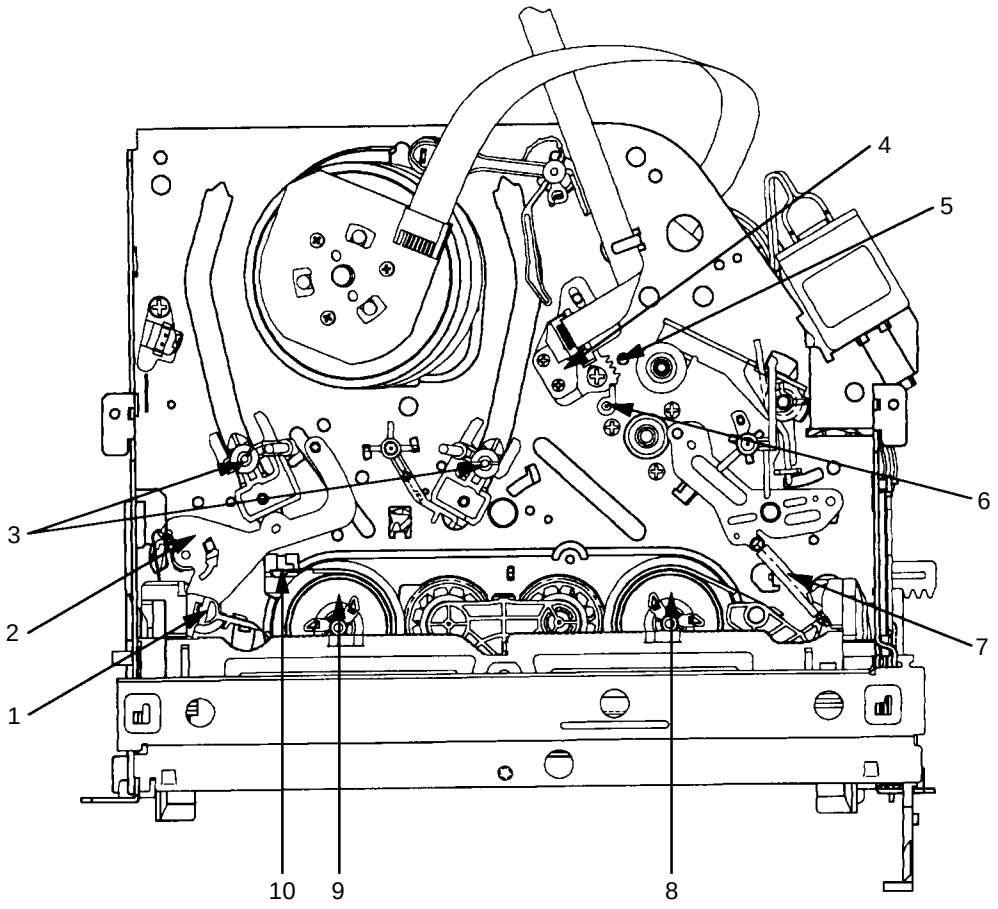

1. Tension Connect
2. Tension Arm
3. Guide Roller
4. Audio/Control Head
5. X value adjustment driver hole
6. P4 Post
7. T Brake Spring
8. T Reel
9. S Reel
10. Adjusting section for the Tension Arm position

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. Unplug the AC plug for more than 5 seconds to set the clock to the non-setting state. Then, set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

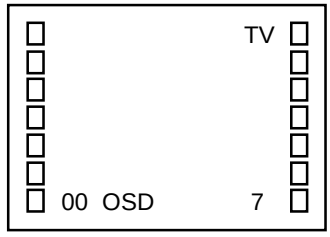

Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	18	BRI MAX
01	OSD C	19	BRI MIN
02	CUT OFF	20	CONT CENT
03	H.POSI	21	CONT MAX
04	H.BLK L	22	CONT MIN
05	H.BLK R	23	COL CENT
06	V.SIZE	24	COL MAX
07	V.POSI	25	COL MIN
08	V.LIN	26	TINT
09	VS.CORR	27	SHARP
10	V.COMP	28	SUB BIAS
11	R.BIAS	29	H.SIZE
12	G.BIAS	30	PARABOLA
13	B.BIAS	31	TRAPEZIUM
14	R.DRV	32	COR TOP
15	G.DRV	33	COR BTM
16	B.DRV	34	H.COMP
17	BRI CENT	35	T.STE

Fig. 1-2

2. BASIC ADJUSTMENTS (VCR SECTION)

2-1: PG SHIFTER

1. Connect CH-1 on the oscilloscope to **TP102** and CH-2 to **TP4201**.
2. Playback the alignment tape.
3. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control for more than 2 seconds to set tracking to center.
4. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control for more than 2 seconds until the indicator REC disappears. If the indicator REC disappears, adjustment is completed.

(If the above adjustments doesn't work well:)

5. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control for more than 2 seconds until the indicator REC disappears.
6. When the REC indicator is blinking, press both VOL. DOWN button on the set and the channel button **(4)** on the remote control for more than 2 seconds and adjust the Tracking +/- button until the arising to the down of Head Switching Pulse becomes 6.5 ± 0.5H.
(Refer to Fig. 2-1-A, B)

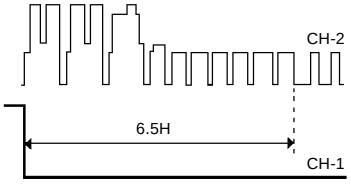

Fig. 2-1-A

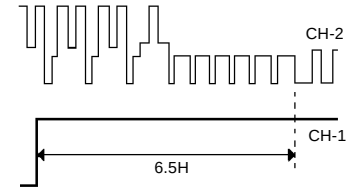

Fig. 2-1-B

ELECTRICAL ADJUSTMENTS

(TV SECTION)

2-2: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the digital voltmeter to **TP401**.
4. Adjust the **VR1701** until the digital voltmeter is 116 ± 0.5V.

2-3: CUT OFF

1. Adjust the unit to the following settings.
   R.BIAS=127, G.BIAS=127, B.BIAS=127, R.DRV=63, G.DRV=07, B.DRV=63,
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "CUT OFF".
6. Adjust the **Screen Volume** until a dim raster is obtained.

2-4: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(11)** on the remote control to select "R.BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R.BIAS", "G.BIAS", "B.BIAS", "R.DRV", "B.DRV" or "G.DRV".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R.BIAS, G.BIAS, B.BIAS, R.DRV, B.DRV, and G.DRV at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-5: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-6: HORIZONTAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "H.POSI".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-7: HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(29)** on the remote control to select “H. SIZE”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes 10 ± 2%.

2-8: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V.POSI".
4. Check if the step No. V.POSI is "00".
5. Adjust the **VR404** until the horizontal line becomes fit to the notch of the shadow mask.

2-9: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V.SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.

2-10: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-9. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "V.LIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-11: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select “TRAPEZIUM”.
4. Press the VOL. UP/DOWN button on the remote control until the both vertical lines of the screen become parallel.

ELECTRICAL ADJUSTMENTS

2-12: PARABOLA

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(29)** on the remote control to select “PARABOLA”.
4. Press the VOL. UP/DOWN button on the remote control until the right and left vertical lines are straight.

2-13: CORNER CORR TOP

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(31)** on the remote control to select “COR TOP”.
4. Press the VOL. UP/DOWN button on the remote control until the upper section of the both ends vertical lines are straight.

2-14: CORNER CORR BOTTOM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(32)** on the remote control to select “COR BTM”.
4. Press the VOL. UP/DOWN button on the remote control until the bottom section of the both ends vertical lines are straight.

2-15: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-2)**

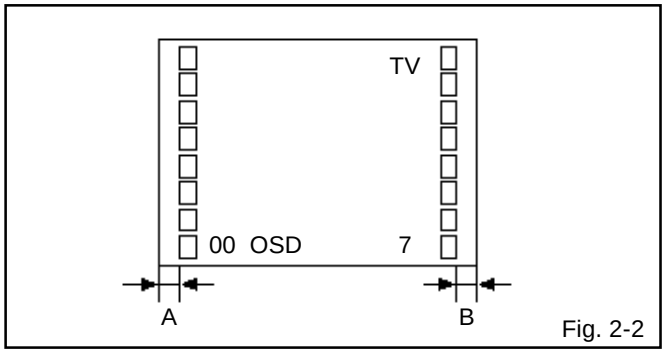

Fig. 2-2

2-16: SUB BRIGHT CENTER

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the DVD button on the remote control to set to the DVD mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRI CENT".
9. Press the RIGHT/LEFT button on the remote control to increase the step numbers by 10 steps to the AV.

2-17: SUB TINT CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP803**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(26)** on the remote control to select "TNT".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line **(Refer to Fig. 2-3)**.
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~5.
8. Press the DVD button on the remote control to set to the DVD mode.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(26)** on the remote control to select "TNT".
10. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

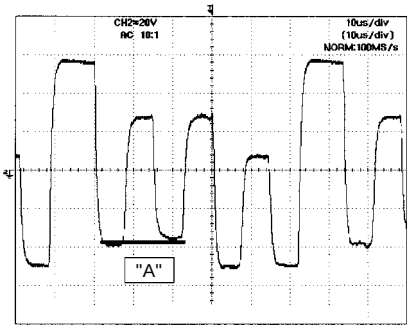

Fig. 2-3

ELECTRICAL ADJUSTMENTS

2-18: SUB COLOR CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP802**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(23)** on the remote control to select "COL CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110 ± 5% of the white level. **(Refer to Fig. 2-4)**
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~6.
9. Press the DVD button on the remote control to set to the DVD mode.
10. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(23)** on the remote control to select "COL CENT".
11. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

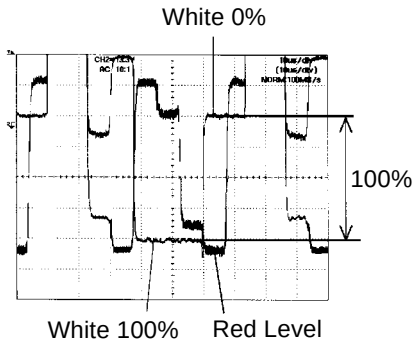

Fig. 2-4

2-19: SUB CONTRAST MAX

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(21)** on the remote control to select "CONT MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "110".
3. Receive a broadcast and check if the picture is normal.
4. Press the INPUT SELECT button on the remote control to set to the AV mode.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(21)** on the remote control to select "CONT MAX".
6. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "110".
7. Receive a broadcast and check if the picture is normal.
8. Press the DVD button on the remote control to set to the DVD mode.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(21)** on the remote control to select "CONT MAX".
10. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

2-20: Confirmation of Fixed Value (step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	DVD
01	OSD C	03	03	03
04	H.BLK L	02	02	02
05	H.BLK R	02	02	02
09	VS.CORR	05	05	05
10	V.COMP	03	03	03
15	G.DRV	07	07	07
18	BRI MAX	75	75	75
19	BRI MIN	20	20	20
20	CONT CENT	80	80	80
22	CONT MIN	30	30	30
24	COL MAX	127	127	127
25	COL MIN	00	00	00
27	SHARP	25	25	15
28	SUB BIAS	30	30	30
34	H.COMP	00	00	00
35	T.STE	00	00	00

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

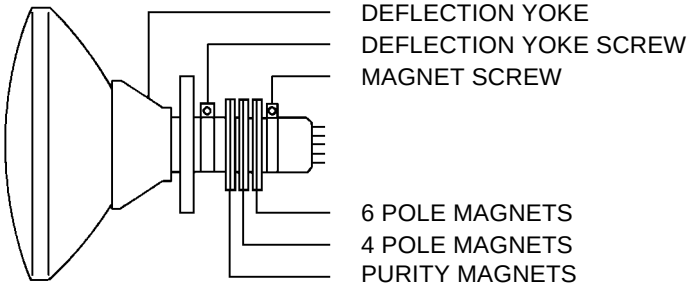

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

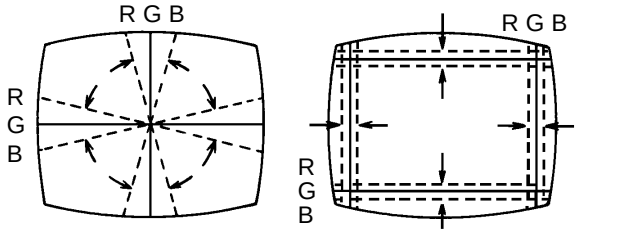

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

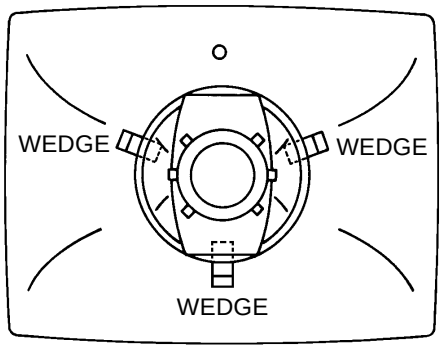

WEDGE POSITION

Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

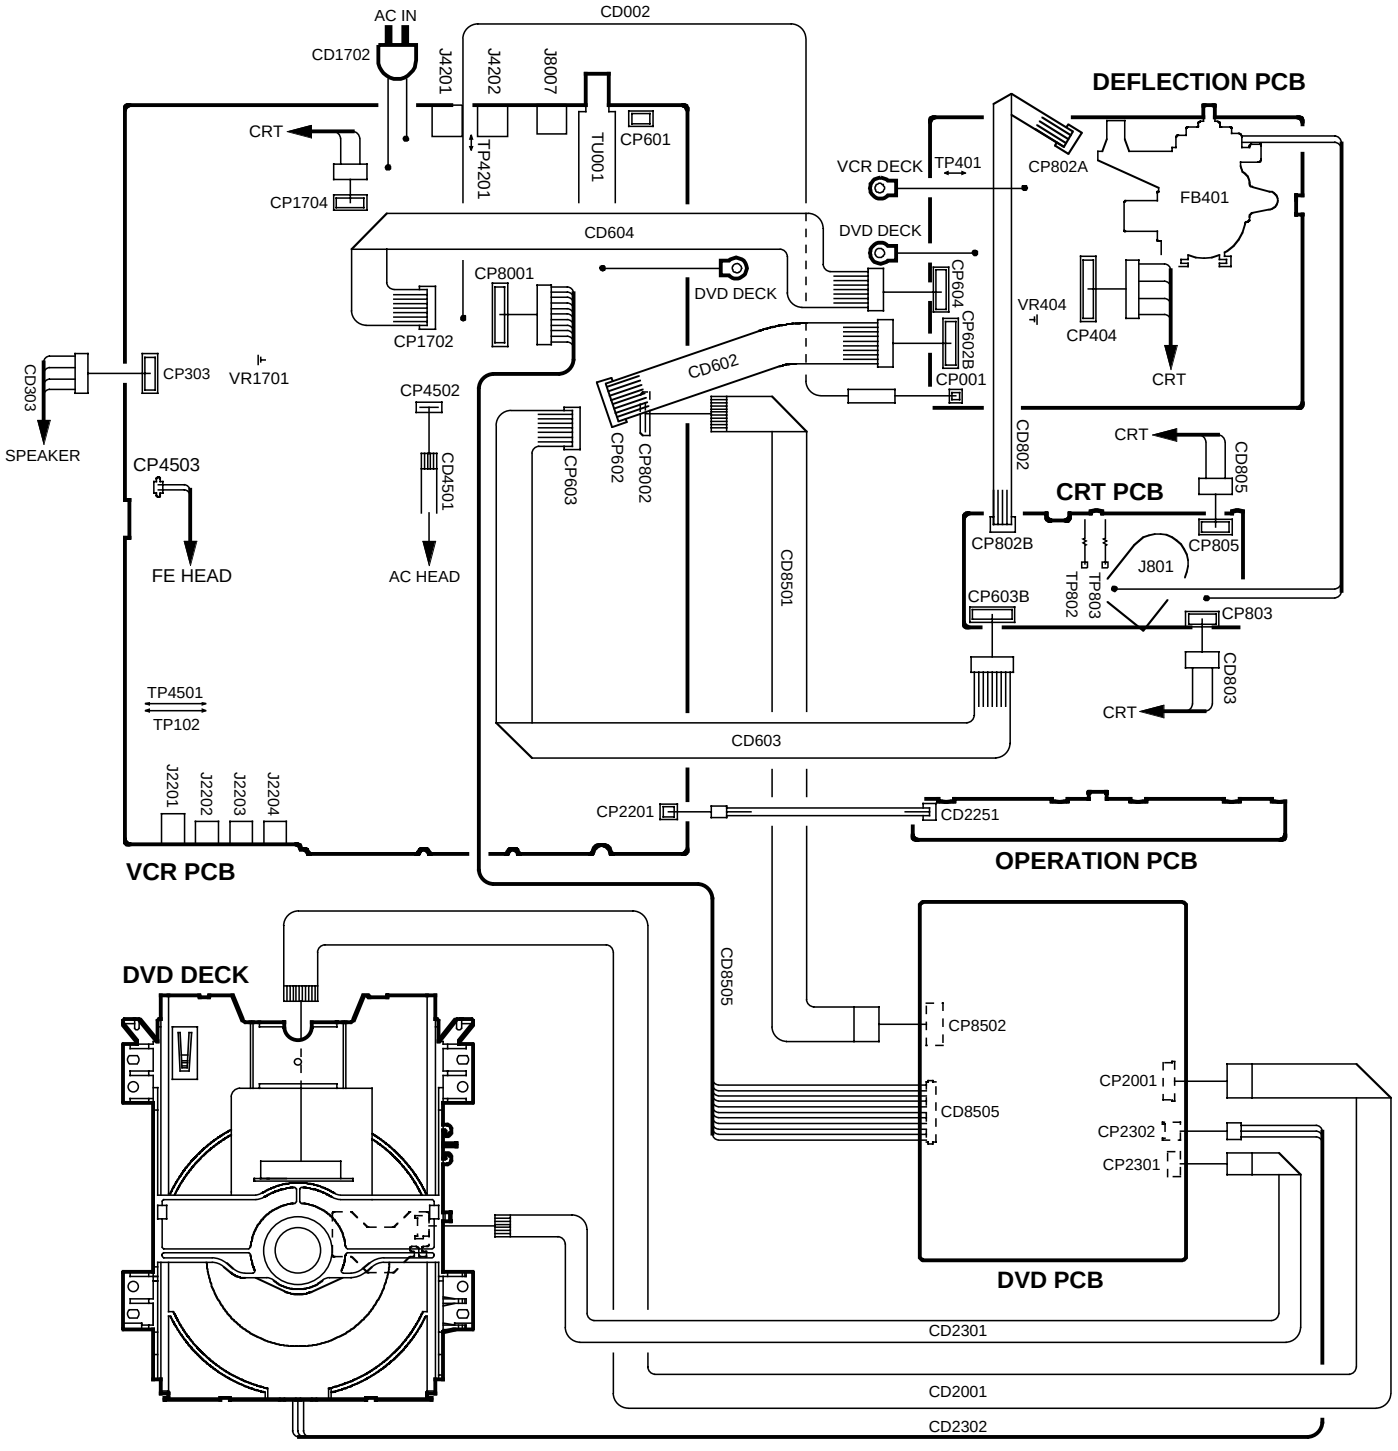

DVD ST SOLUTION BLOCK DIAGRAM

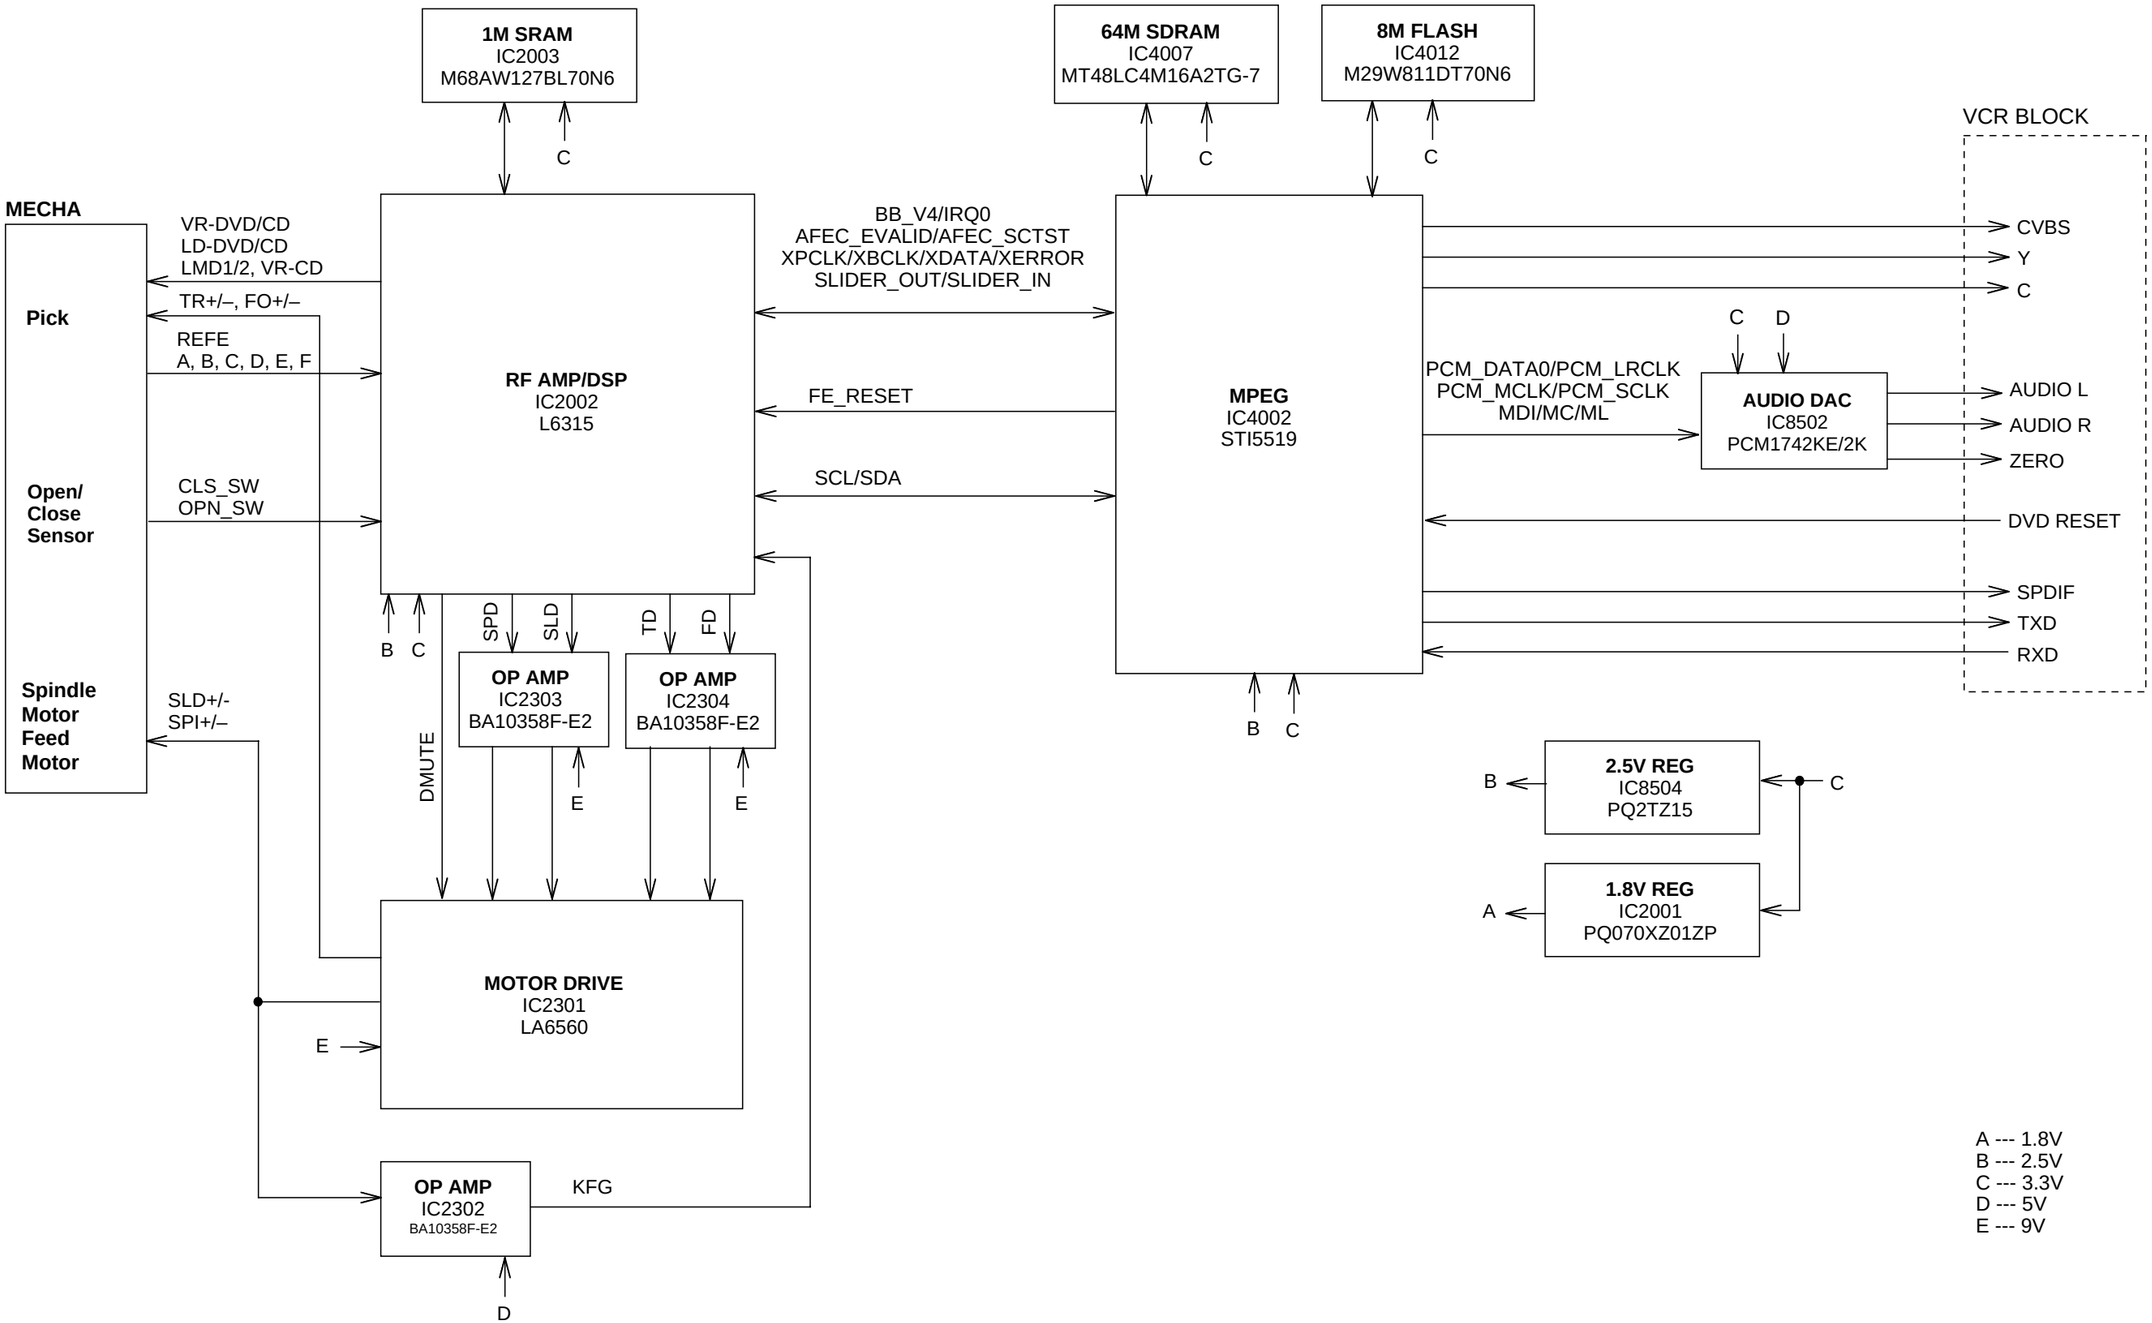

Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM

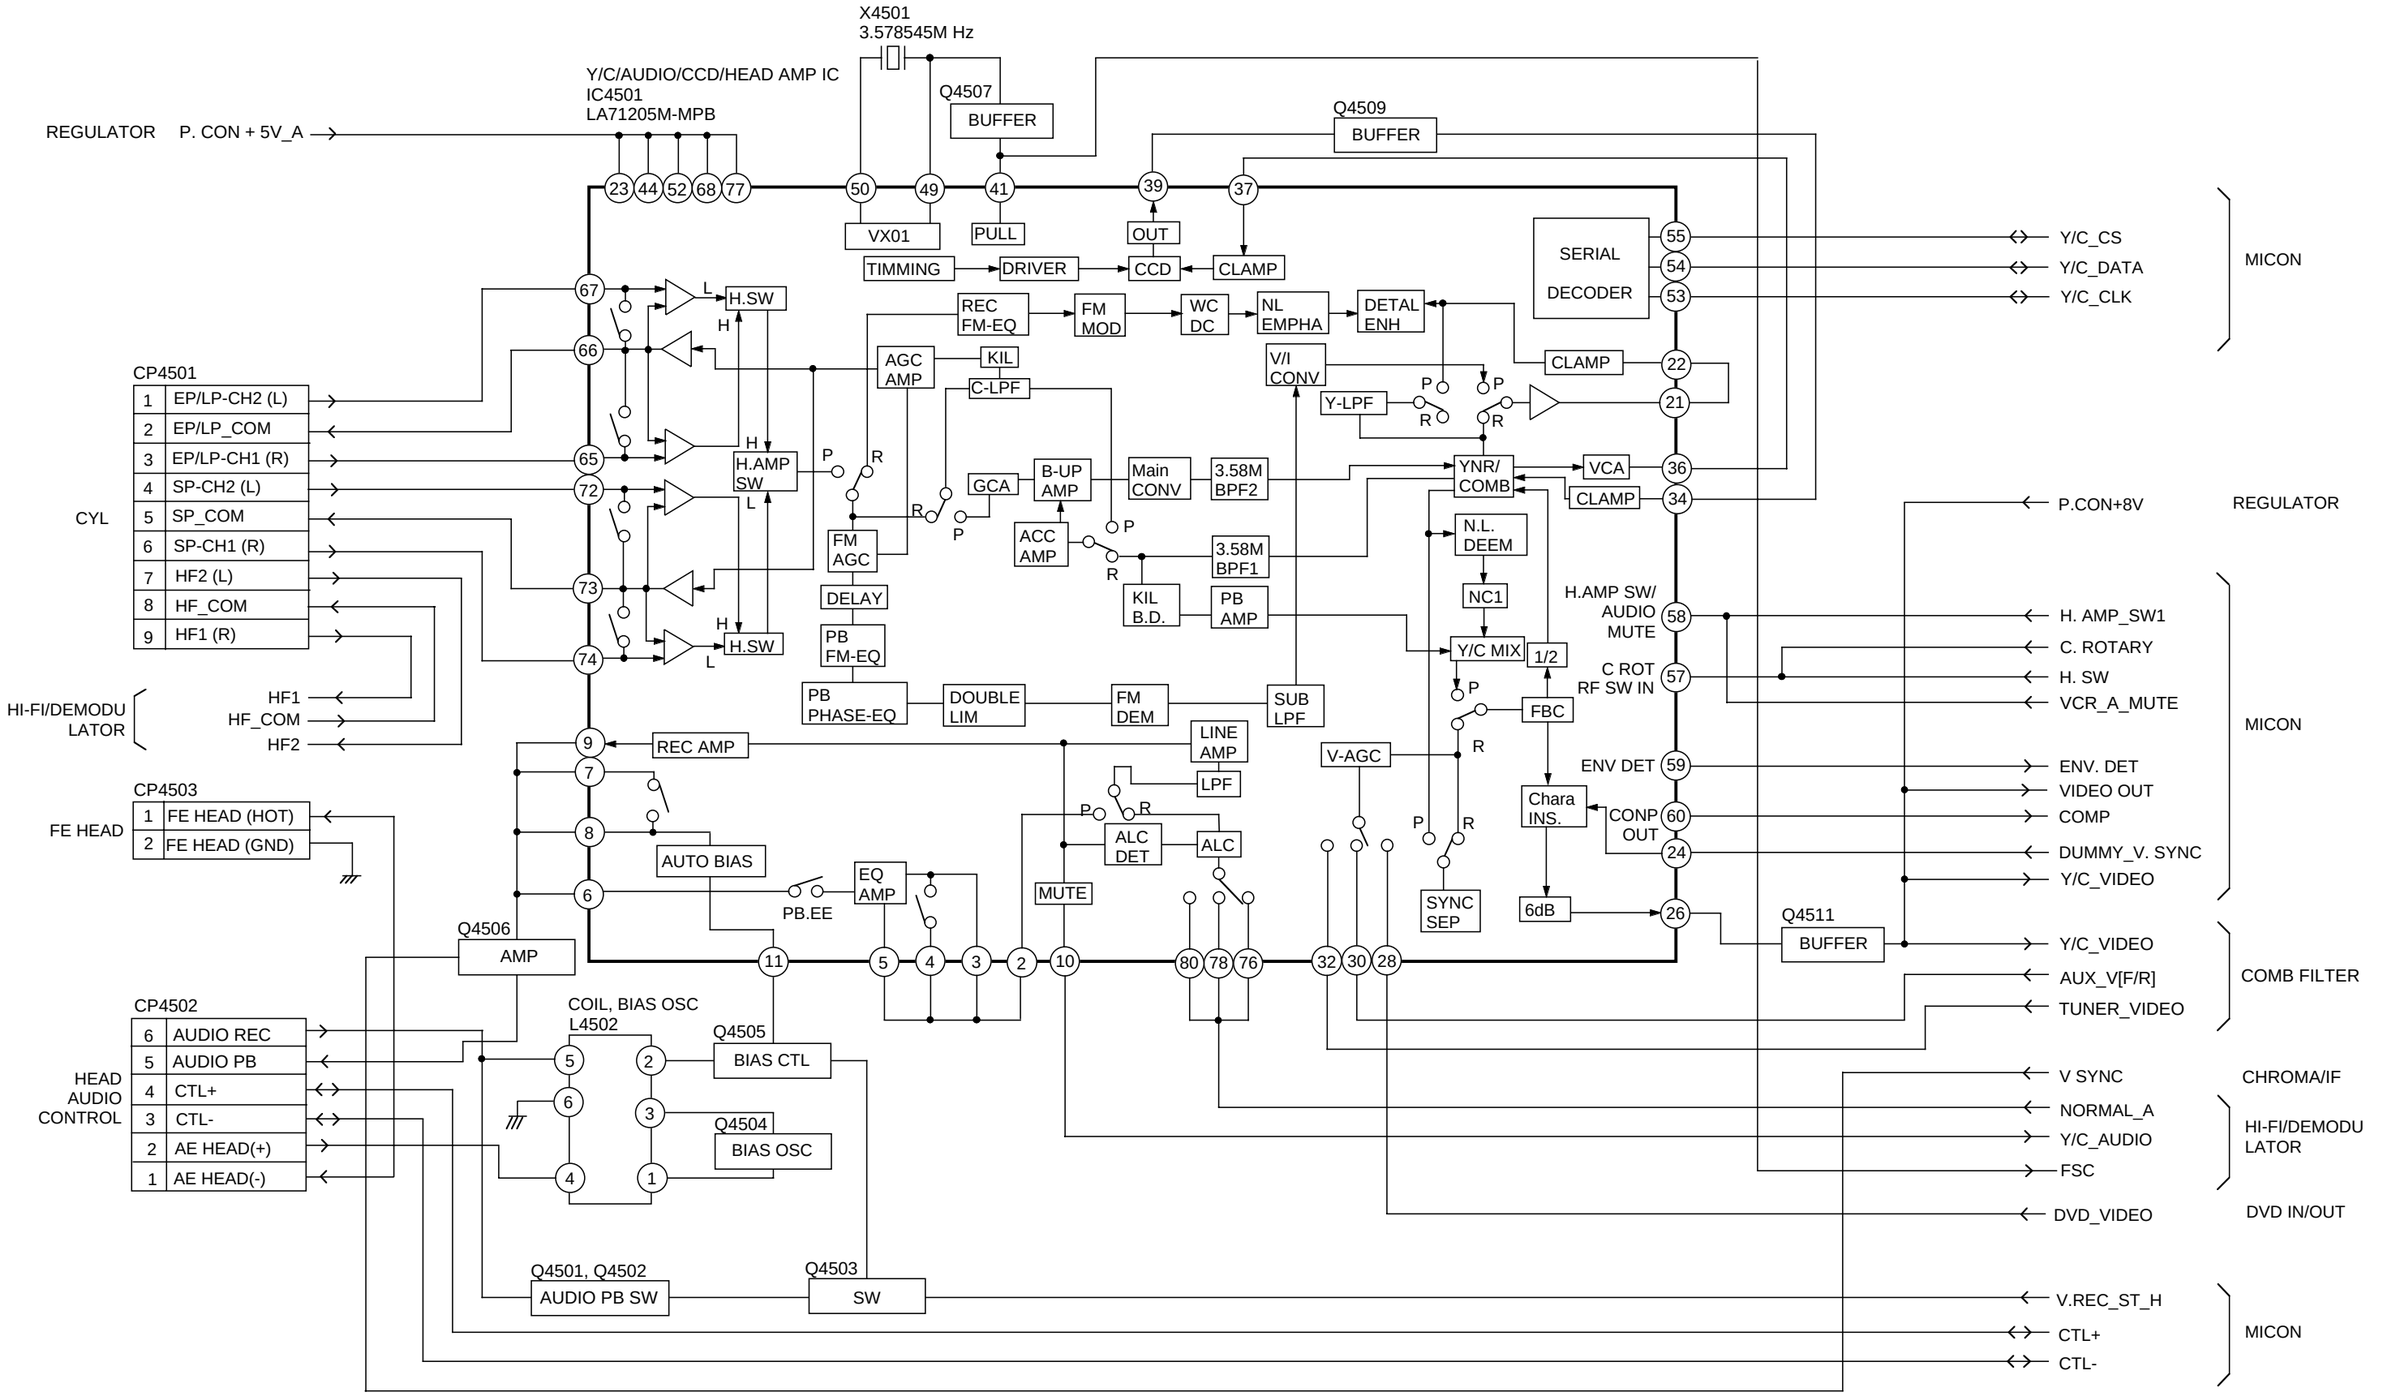

MICON BLOCK DIAGRAM

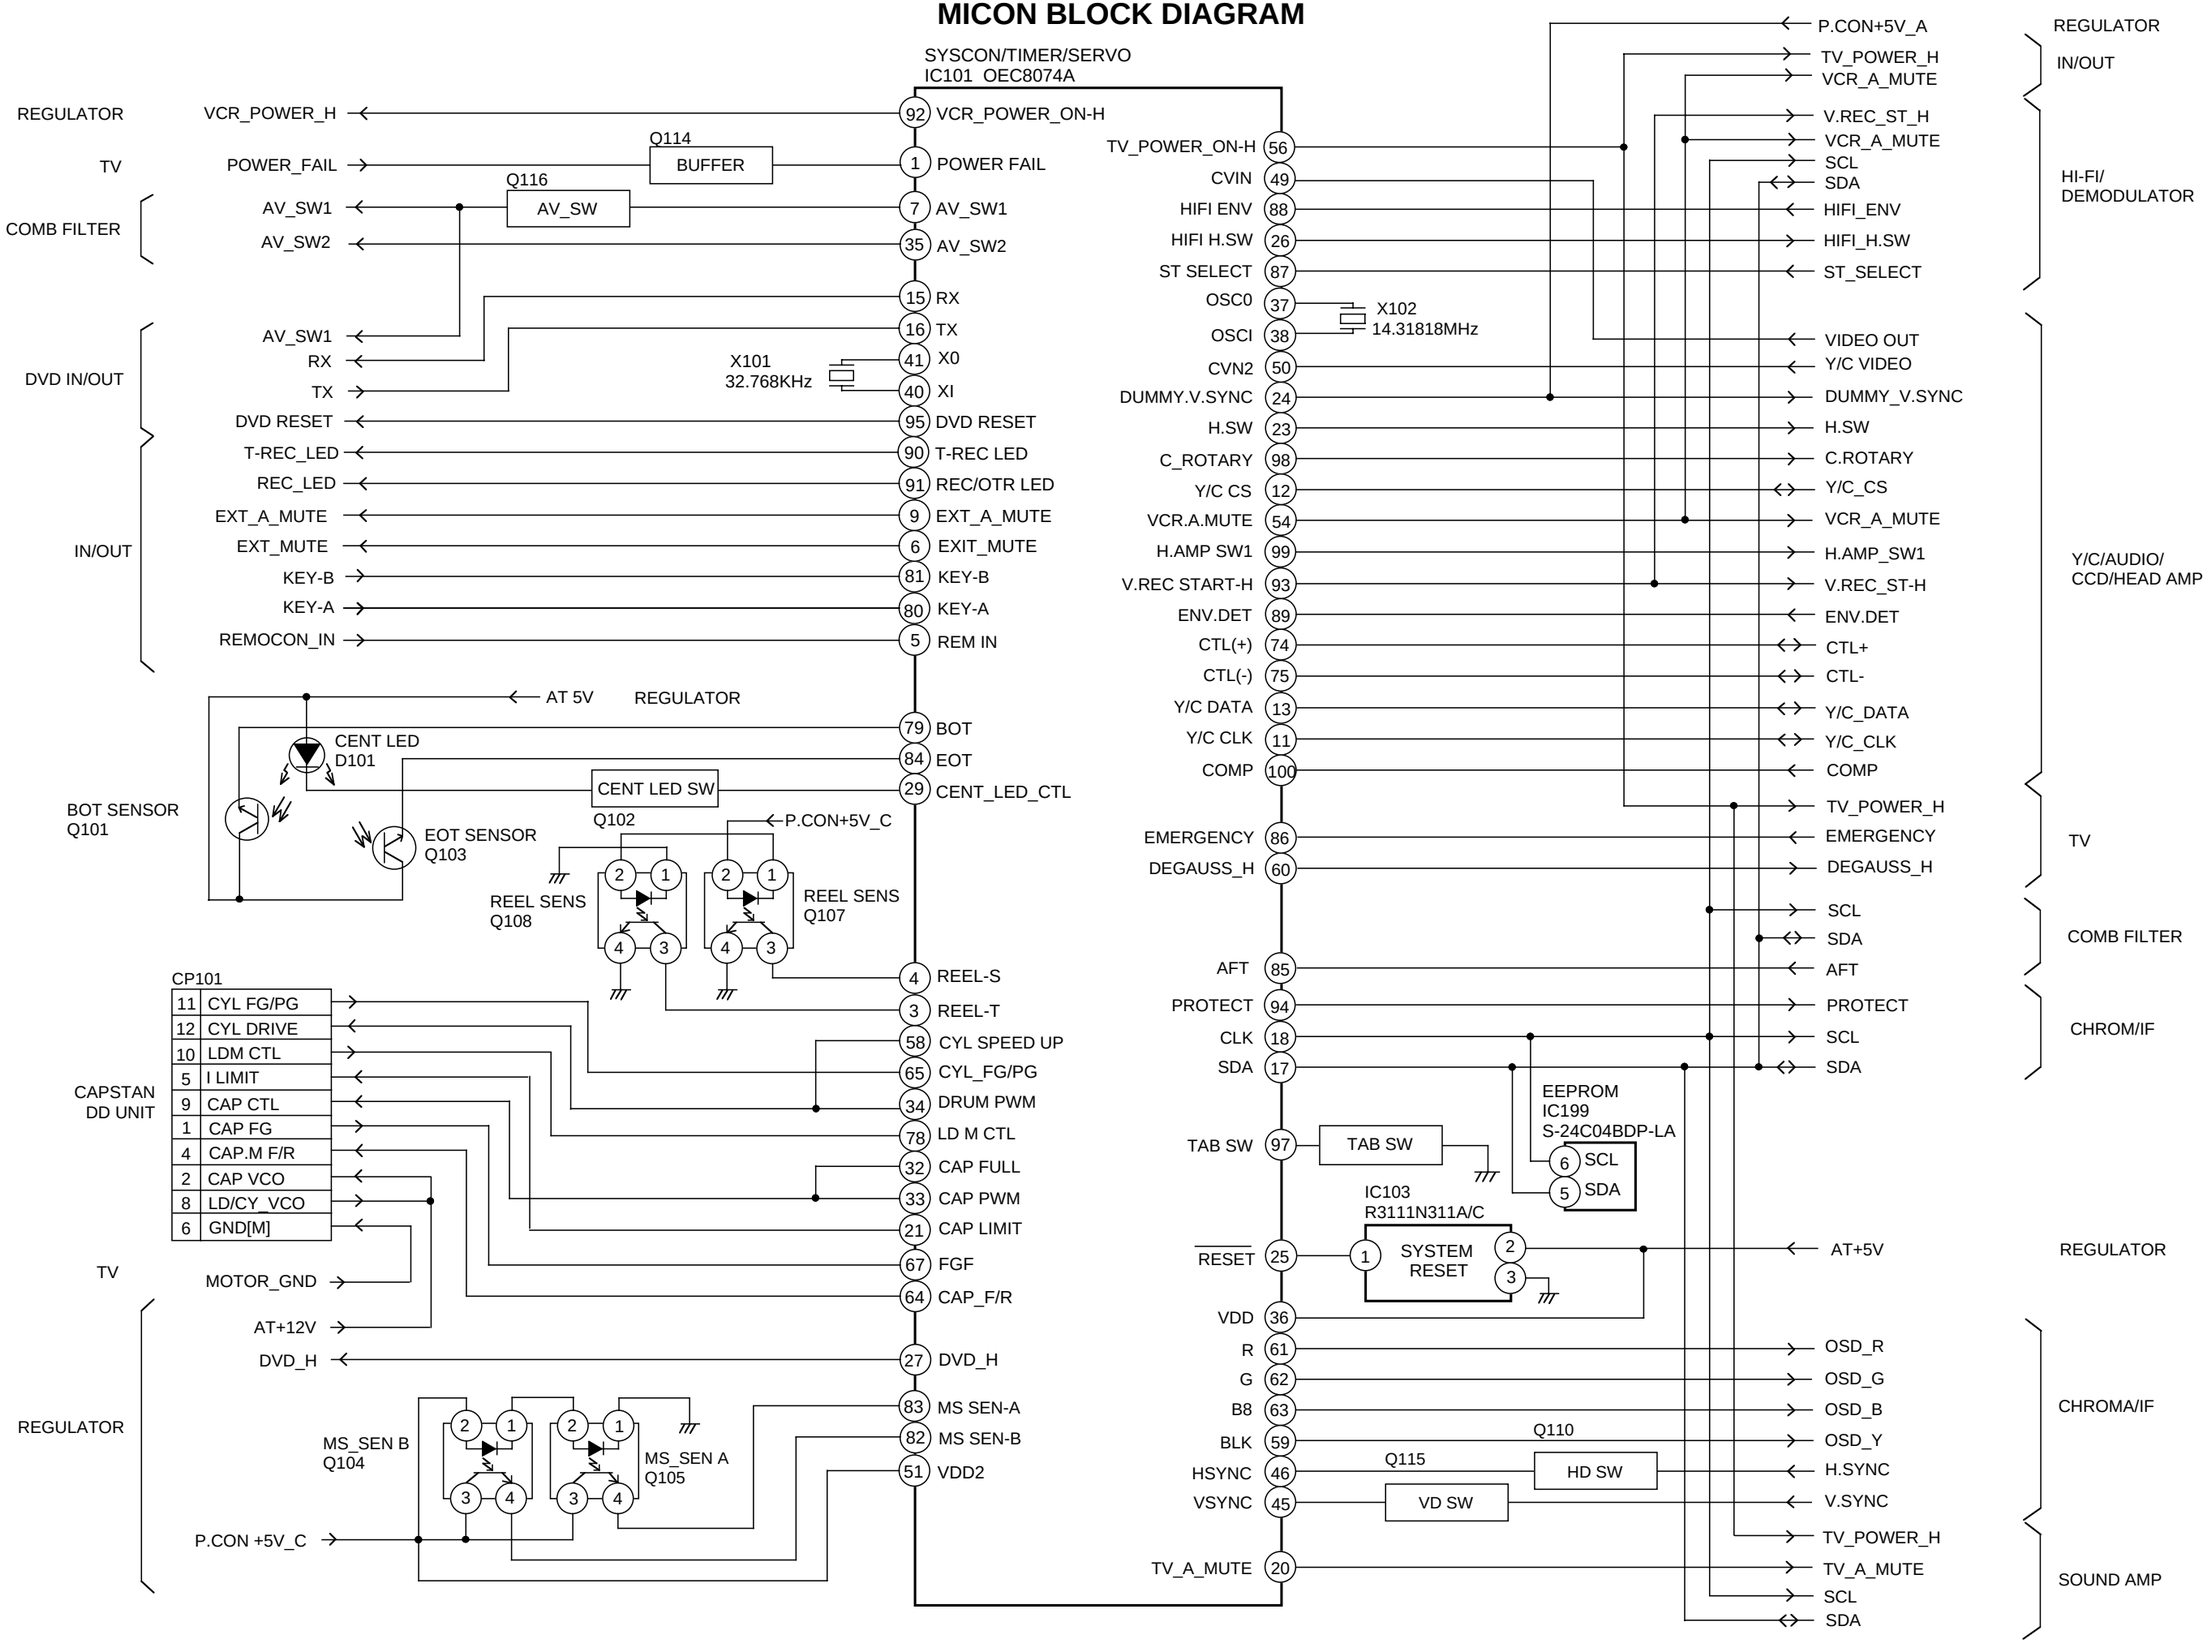

IN/OUT BLOCK DIAGRAM

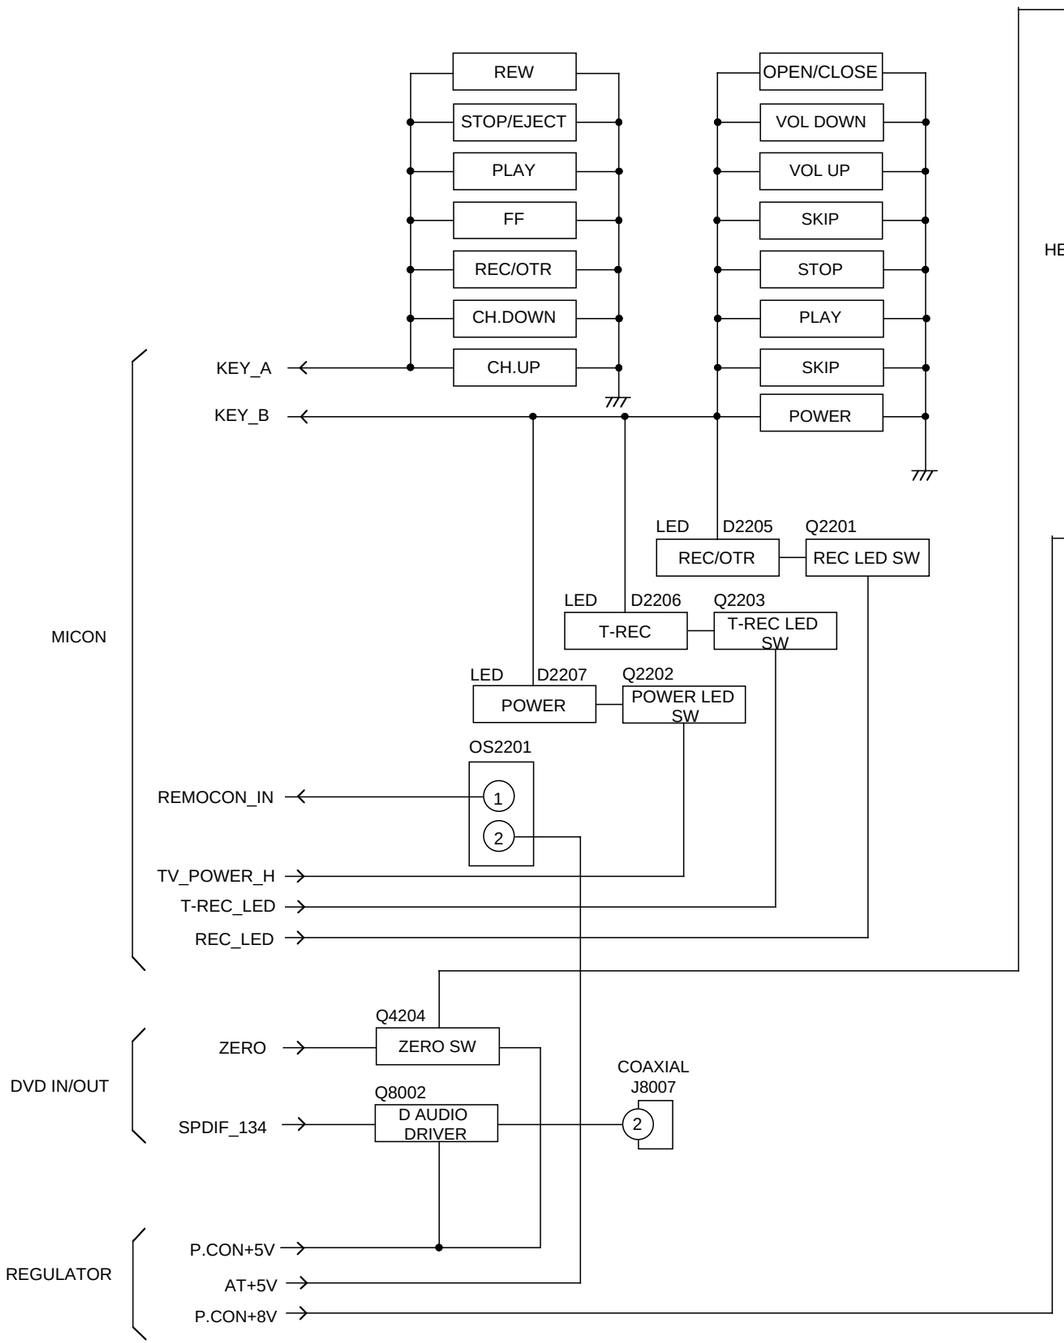

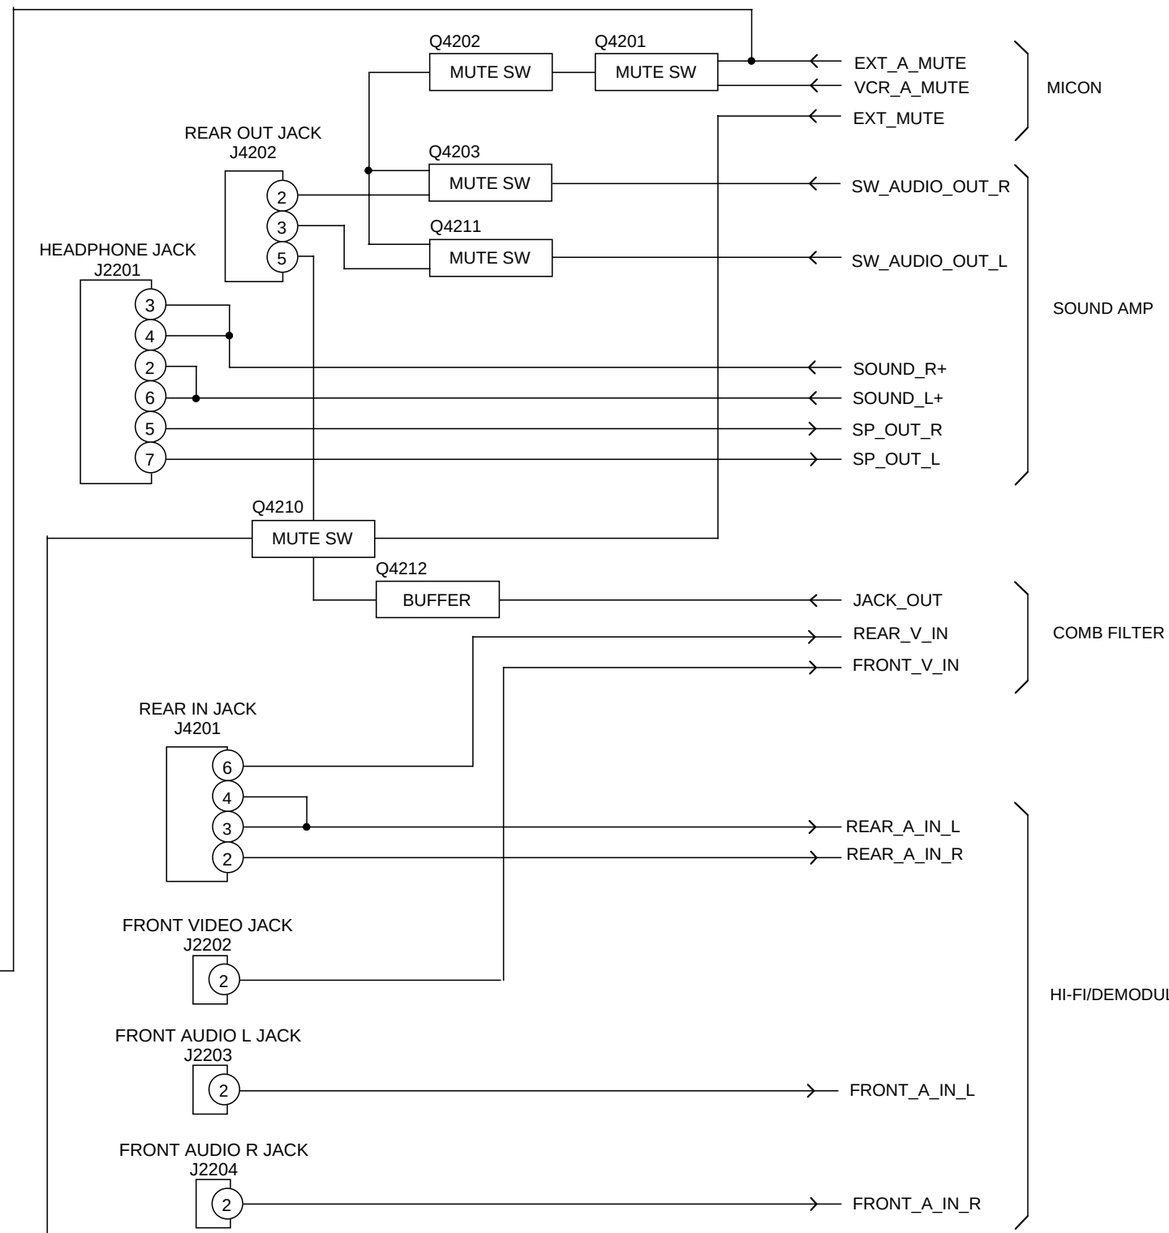

CHROMA/IF BLOCK DIAGRM

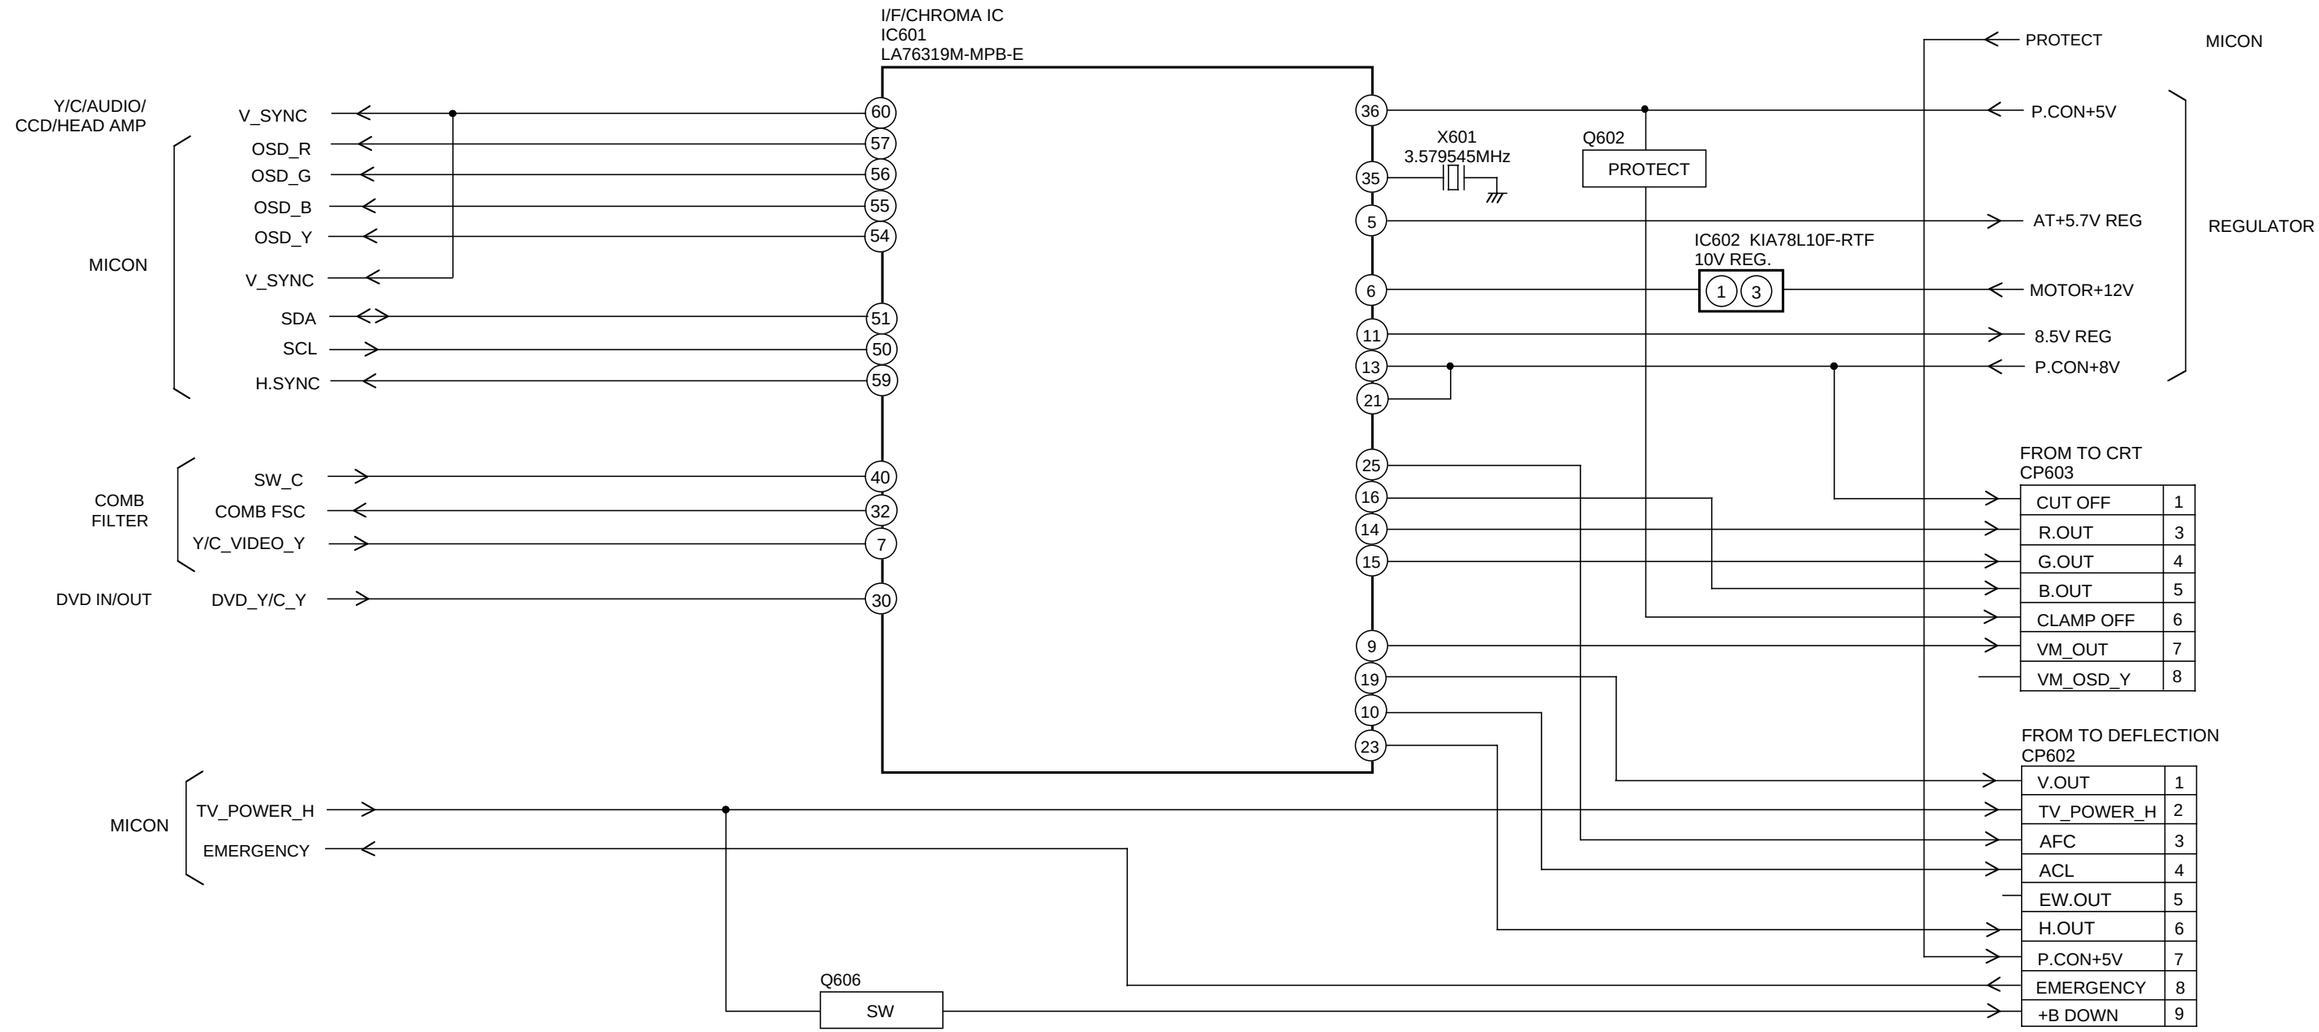

SOUND AMP BLOCK DIAGRAM

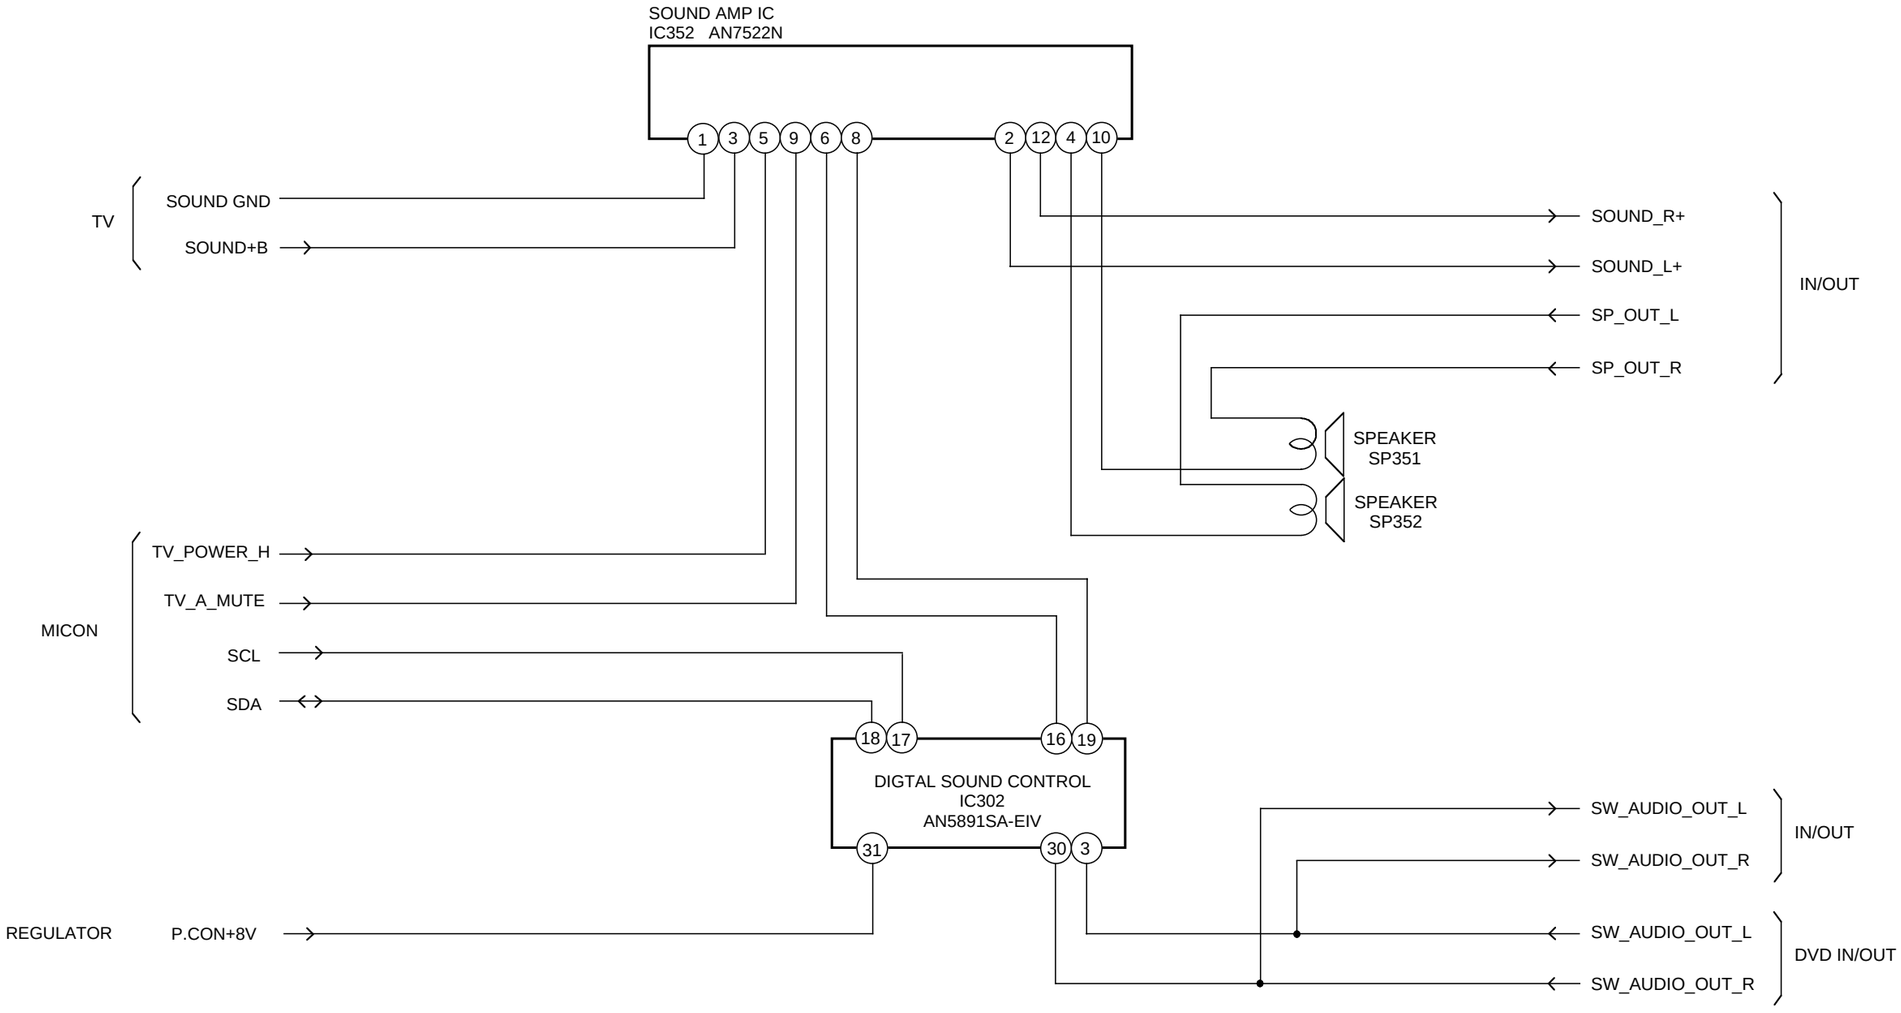

Hi-Fi/DEMODULATOR BLOCK DIAGRM

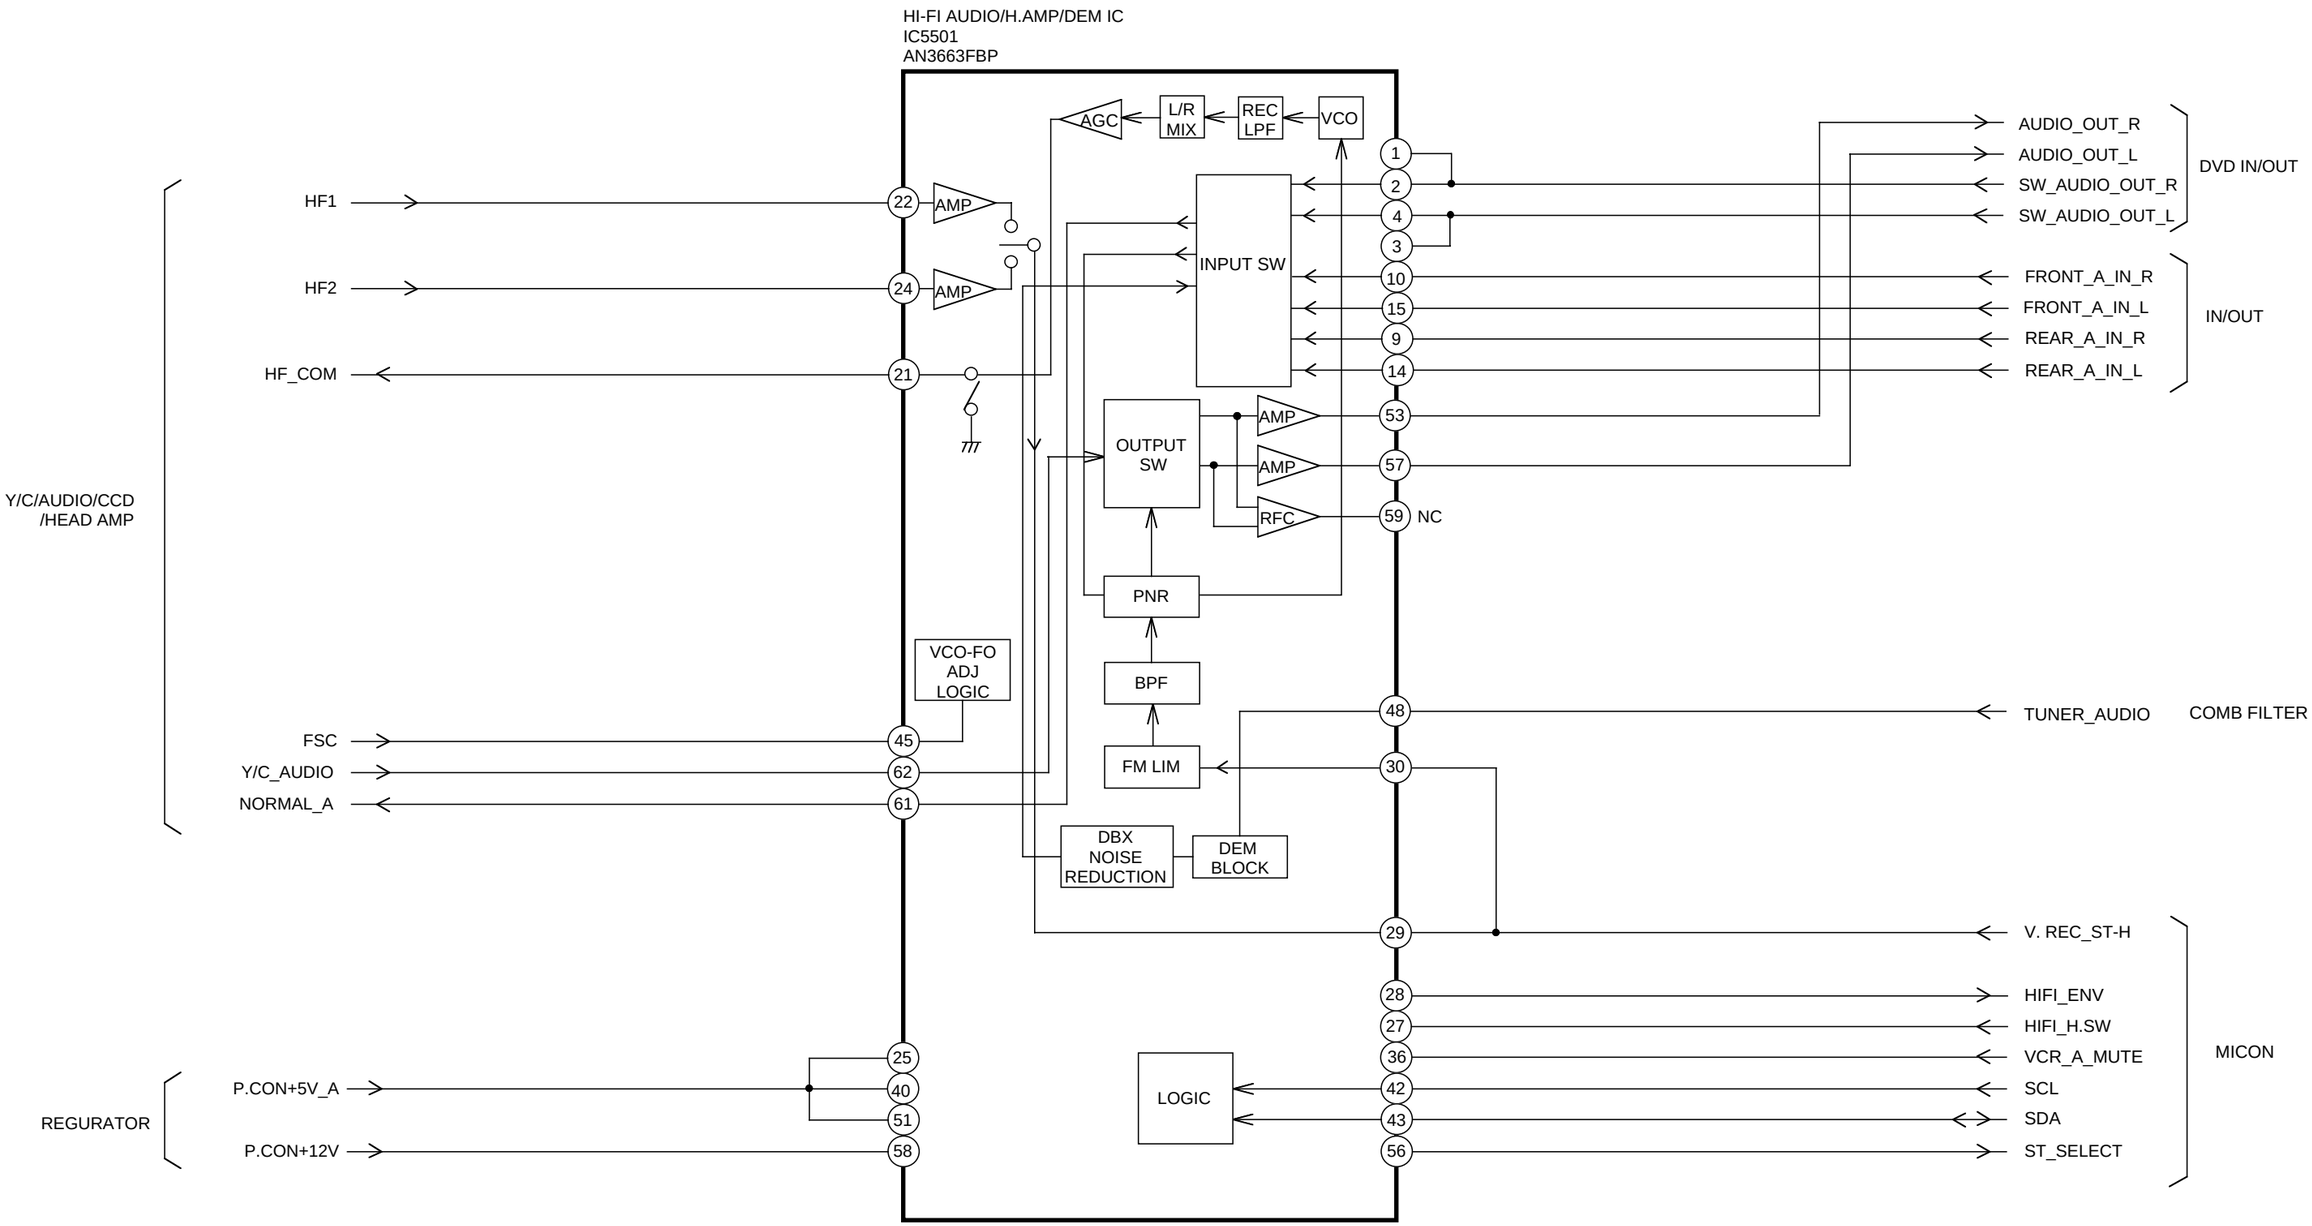

COMB FILTER BLOCK DIAGRAM

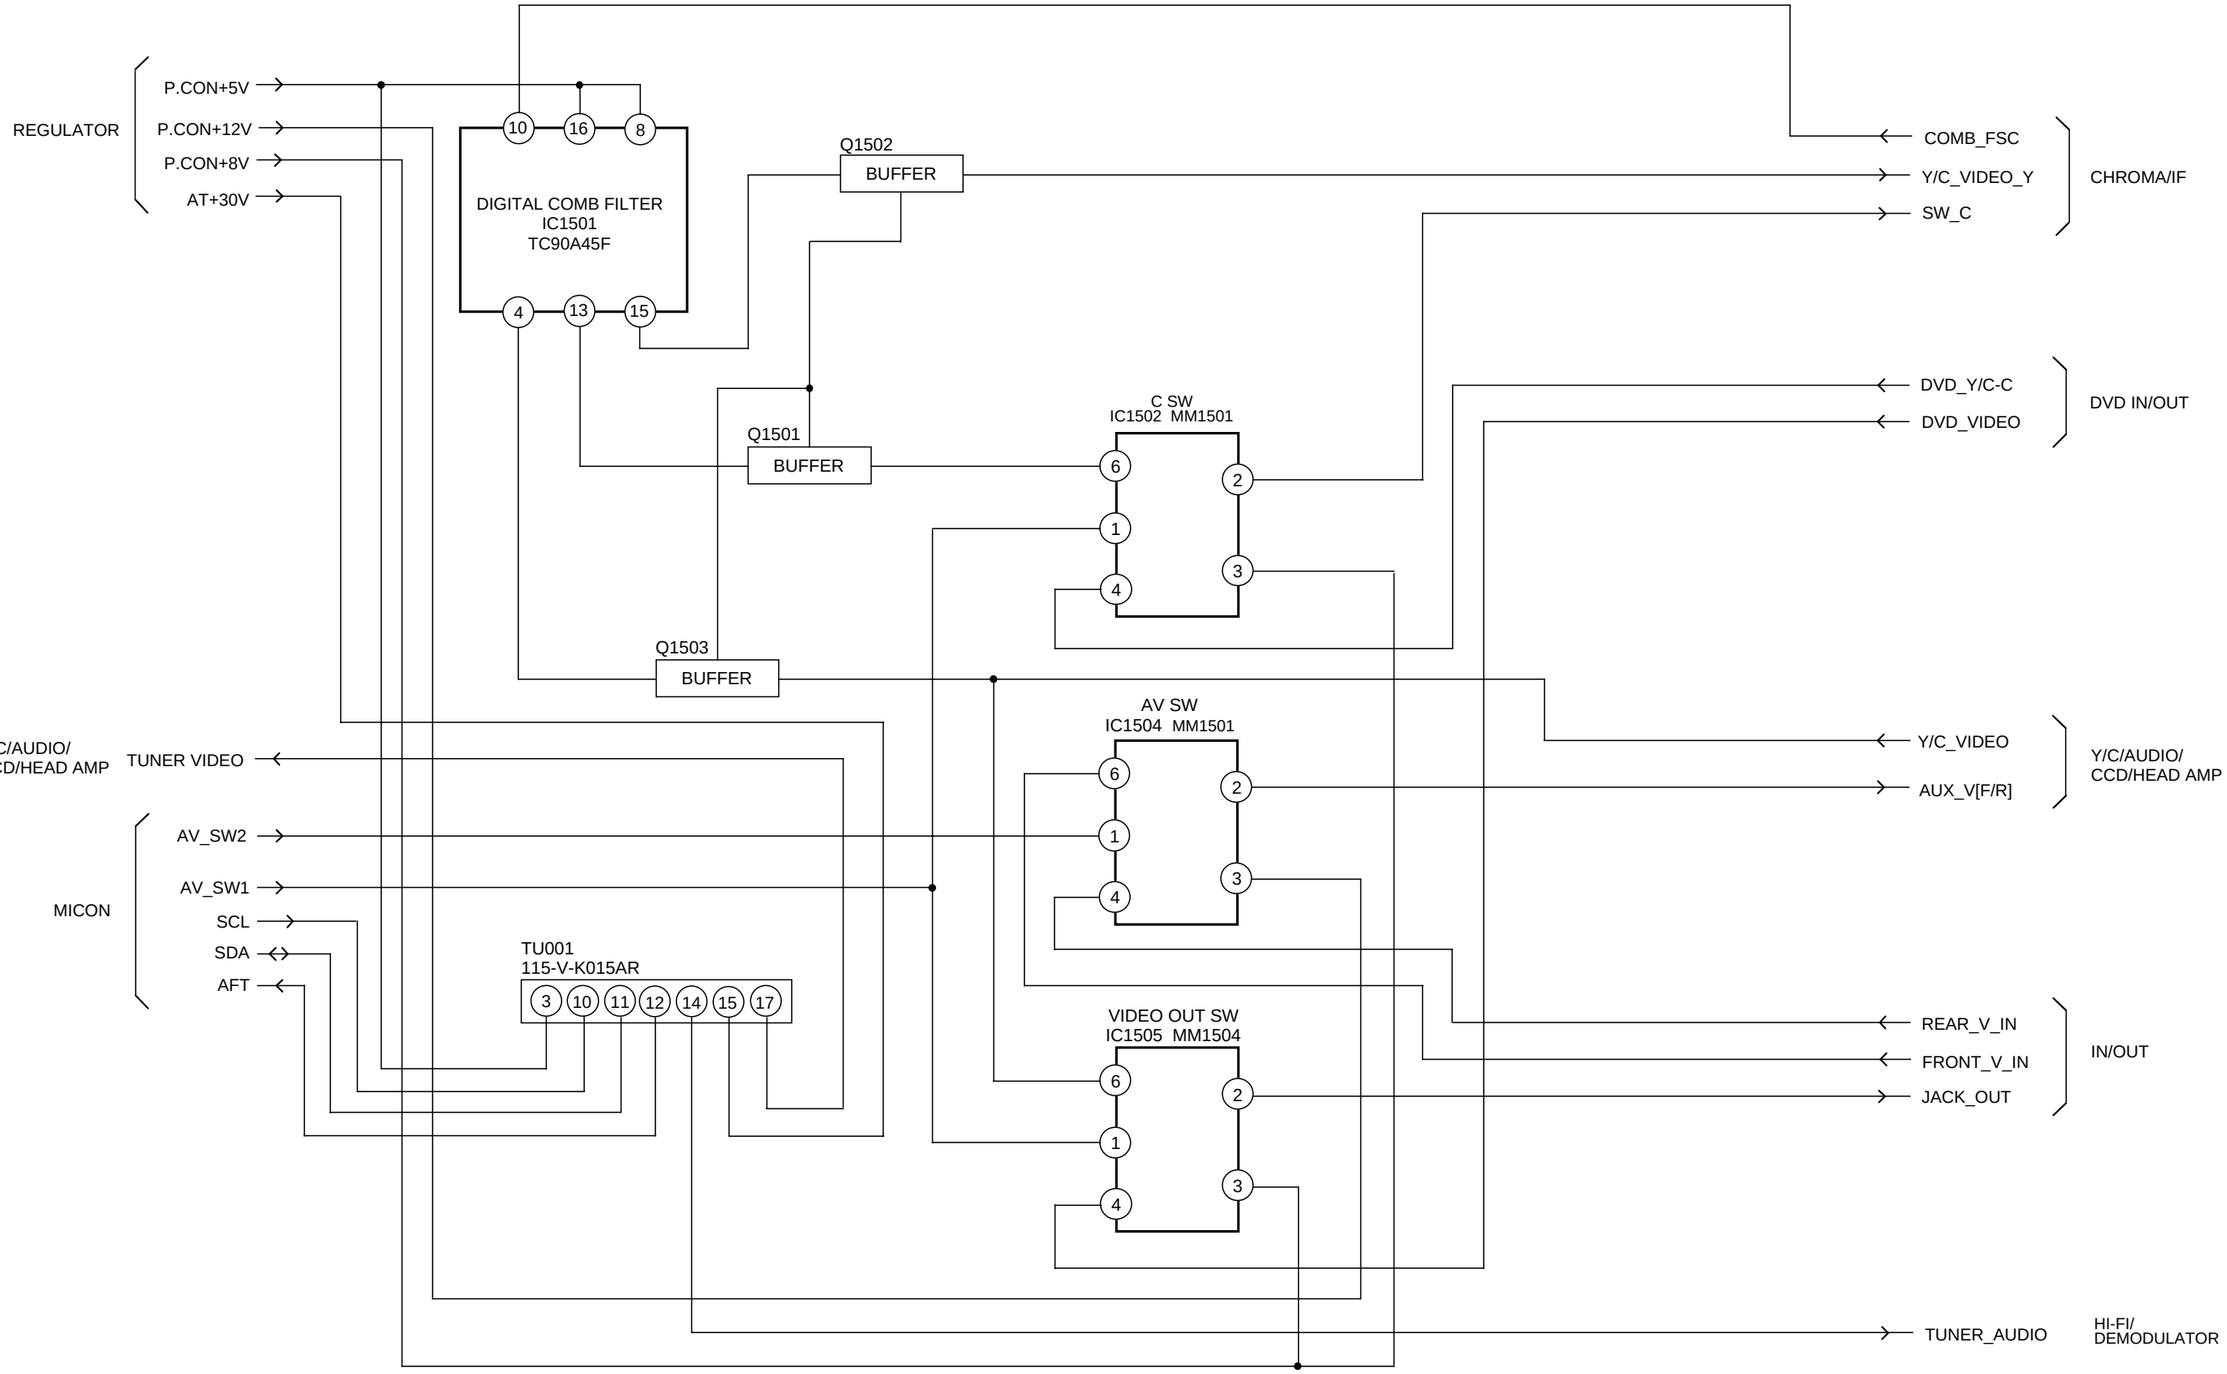

DVD IN/OUT BLOCK DIAGRAM

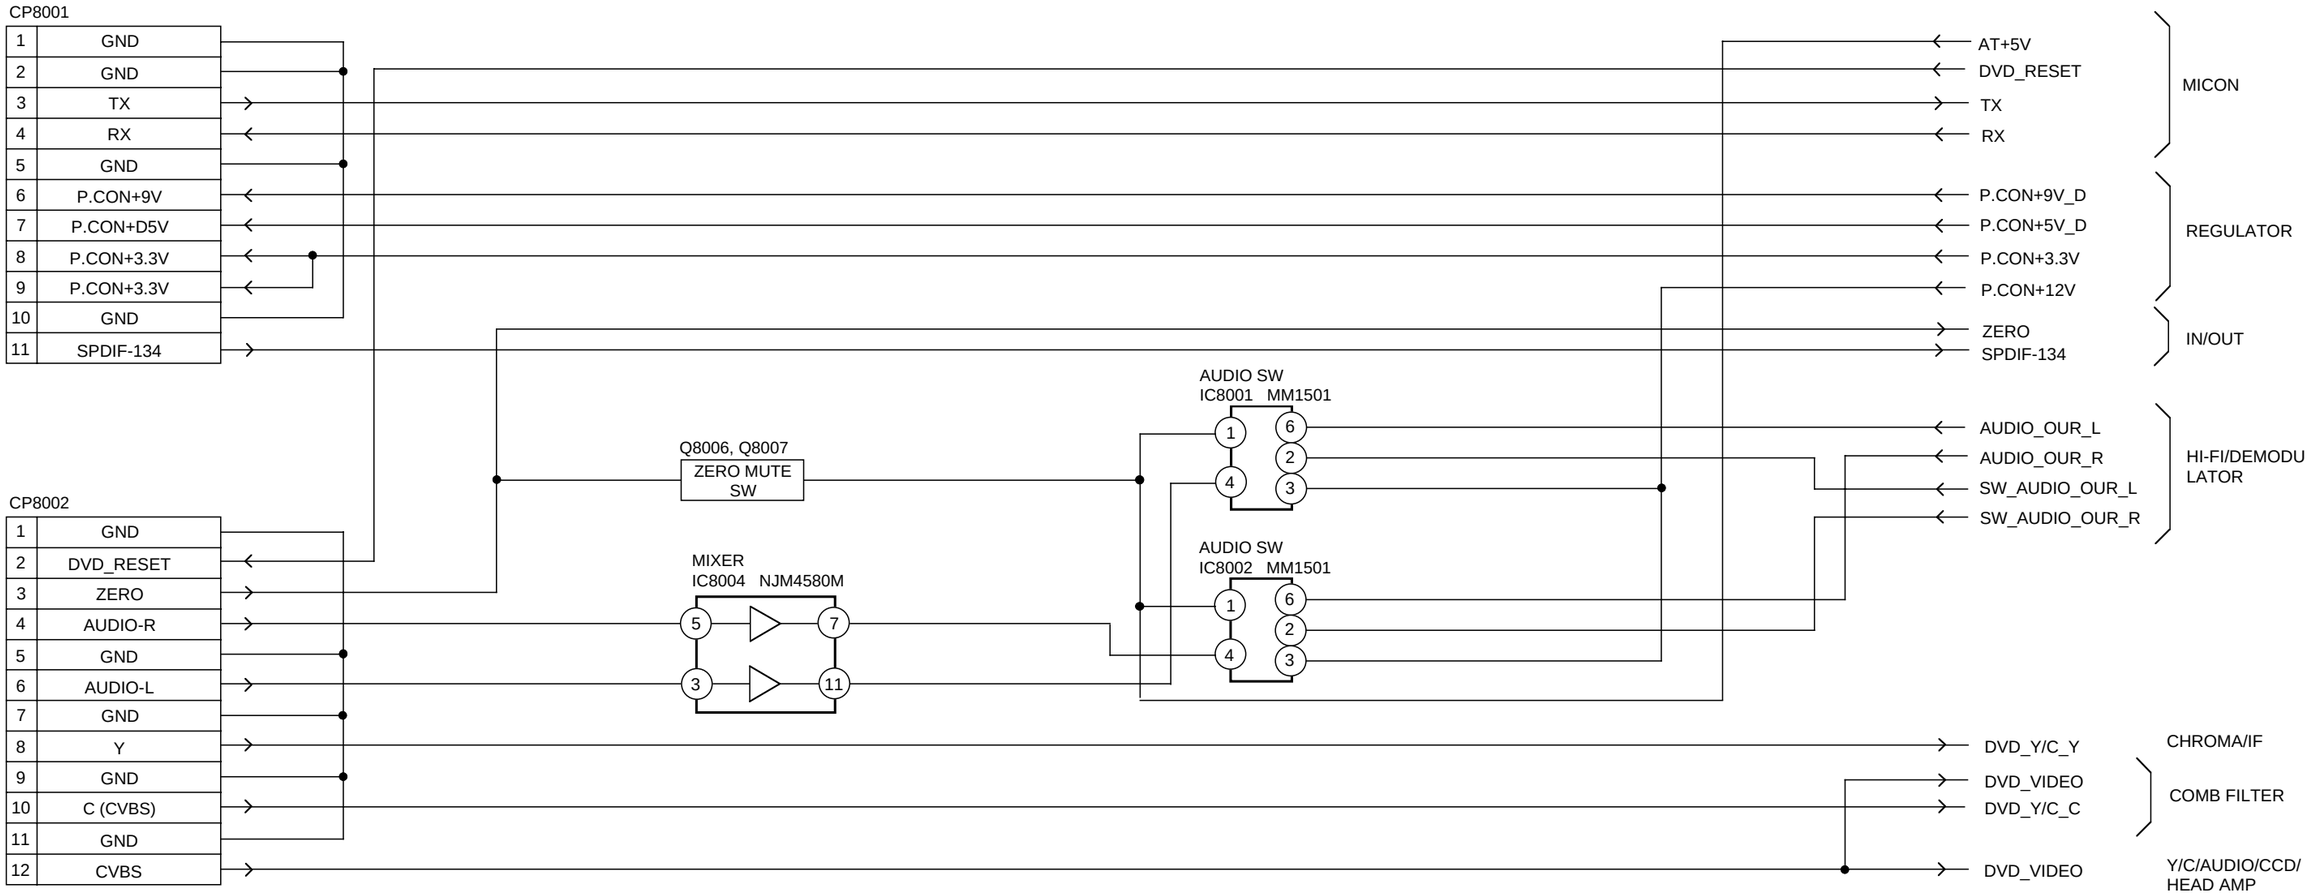

REGULATOR BLOCK DIAGRAM

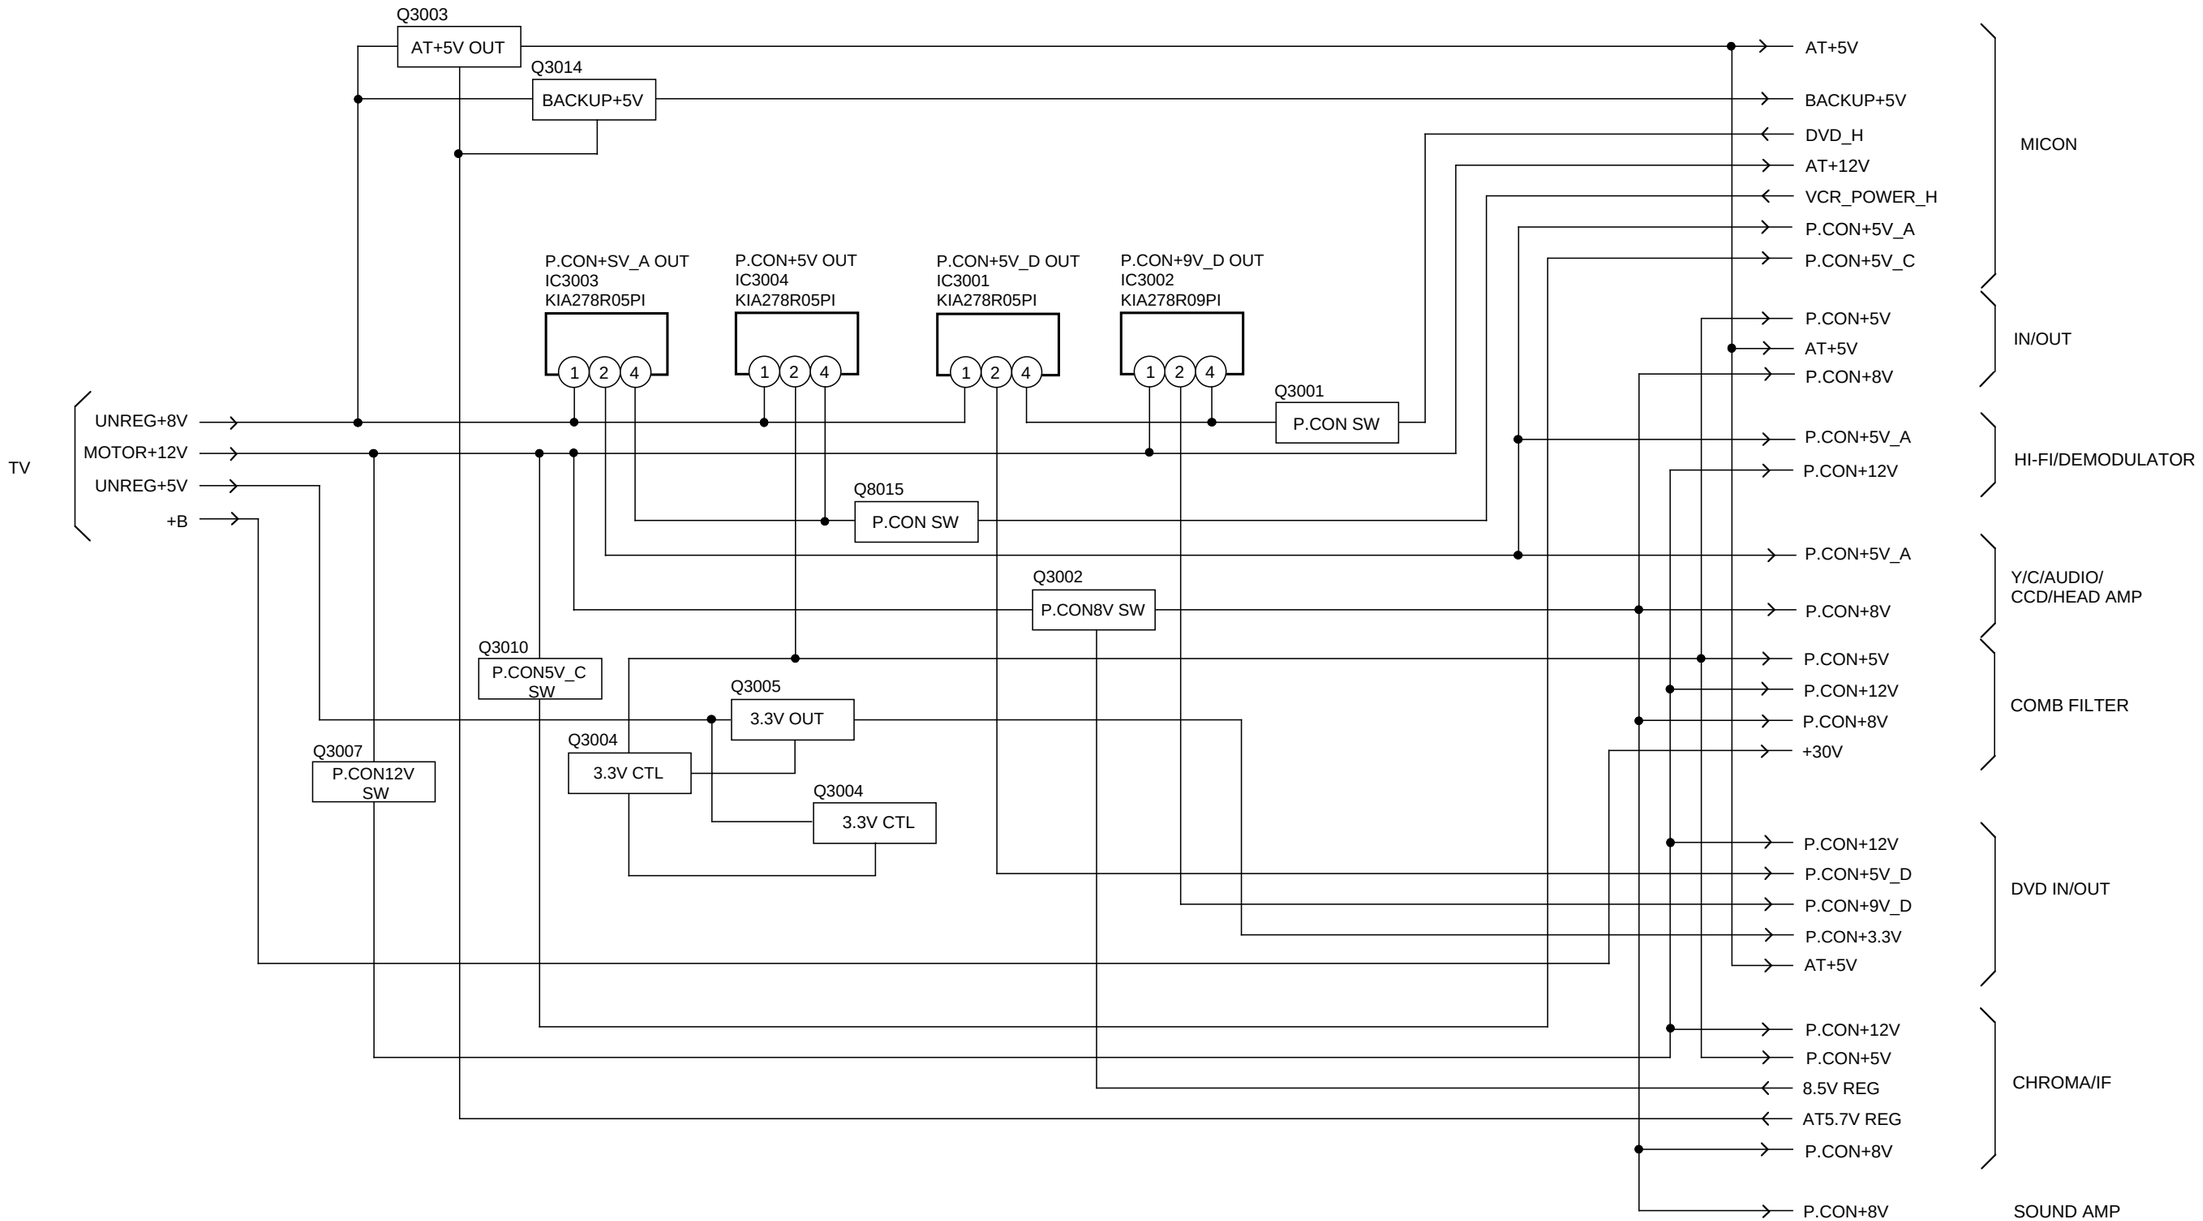

TV BLOCK DIAGRAM

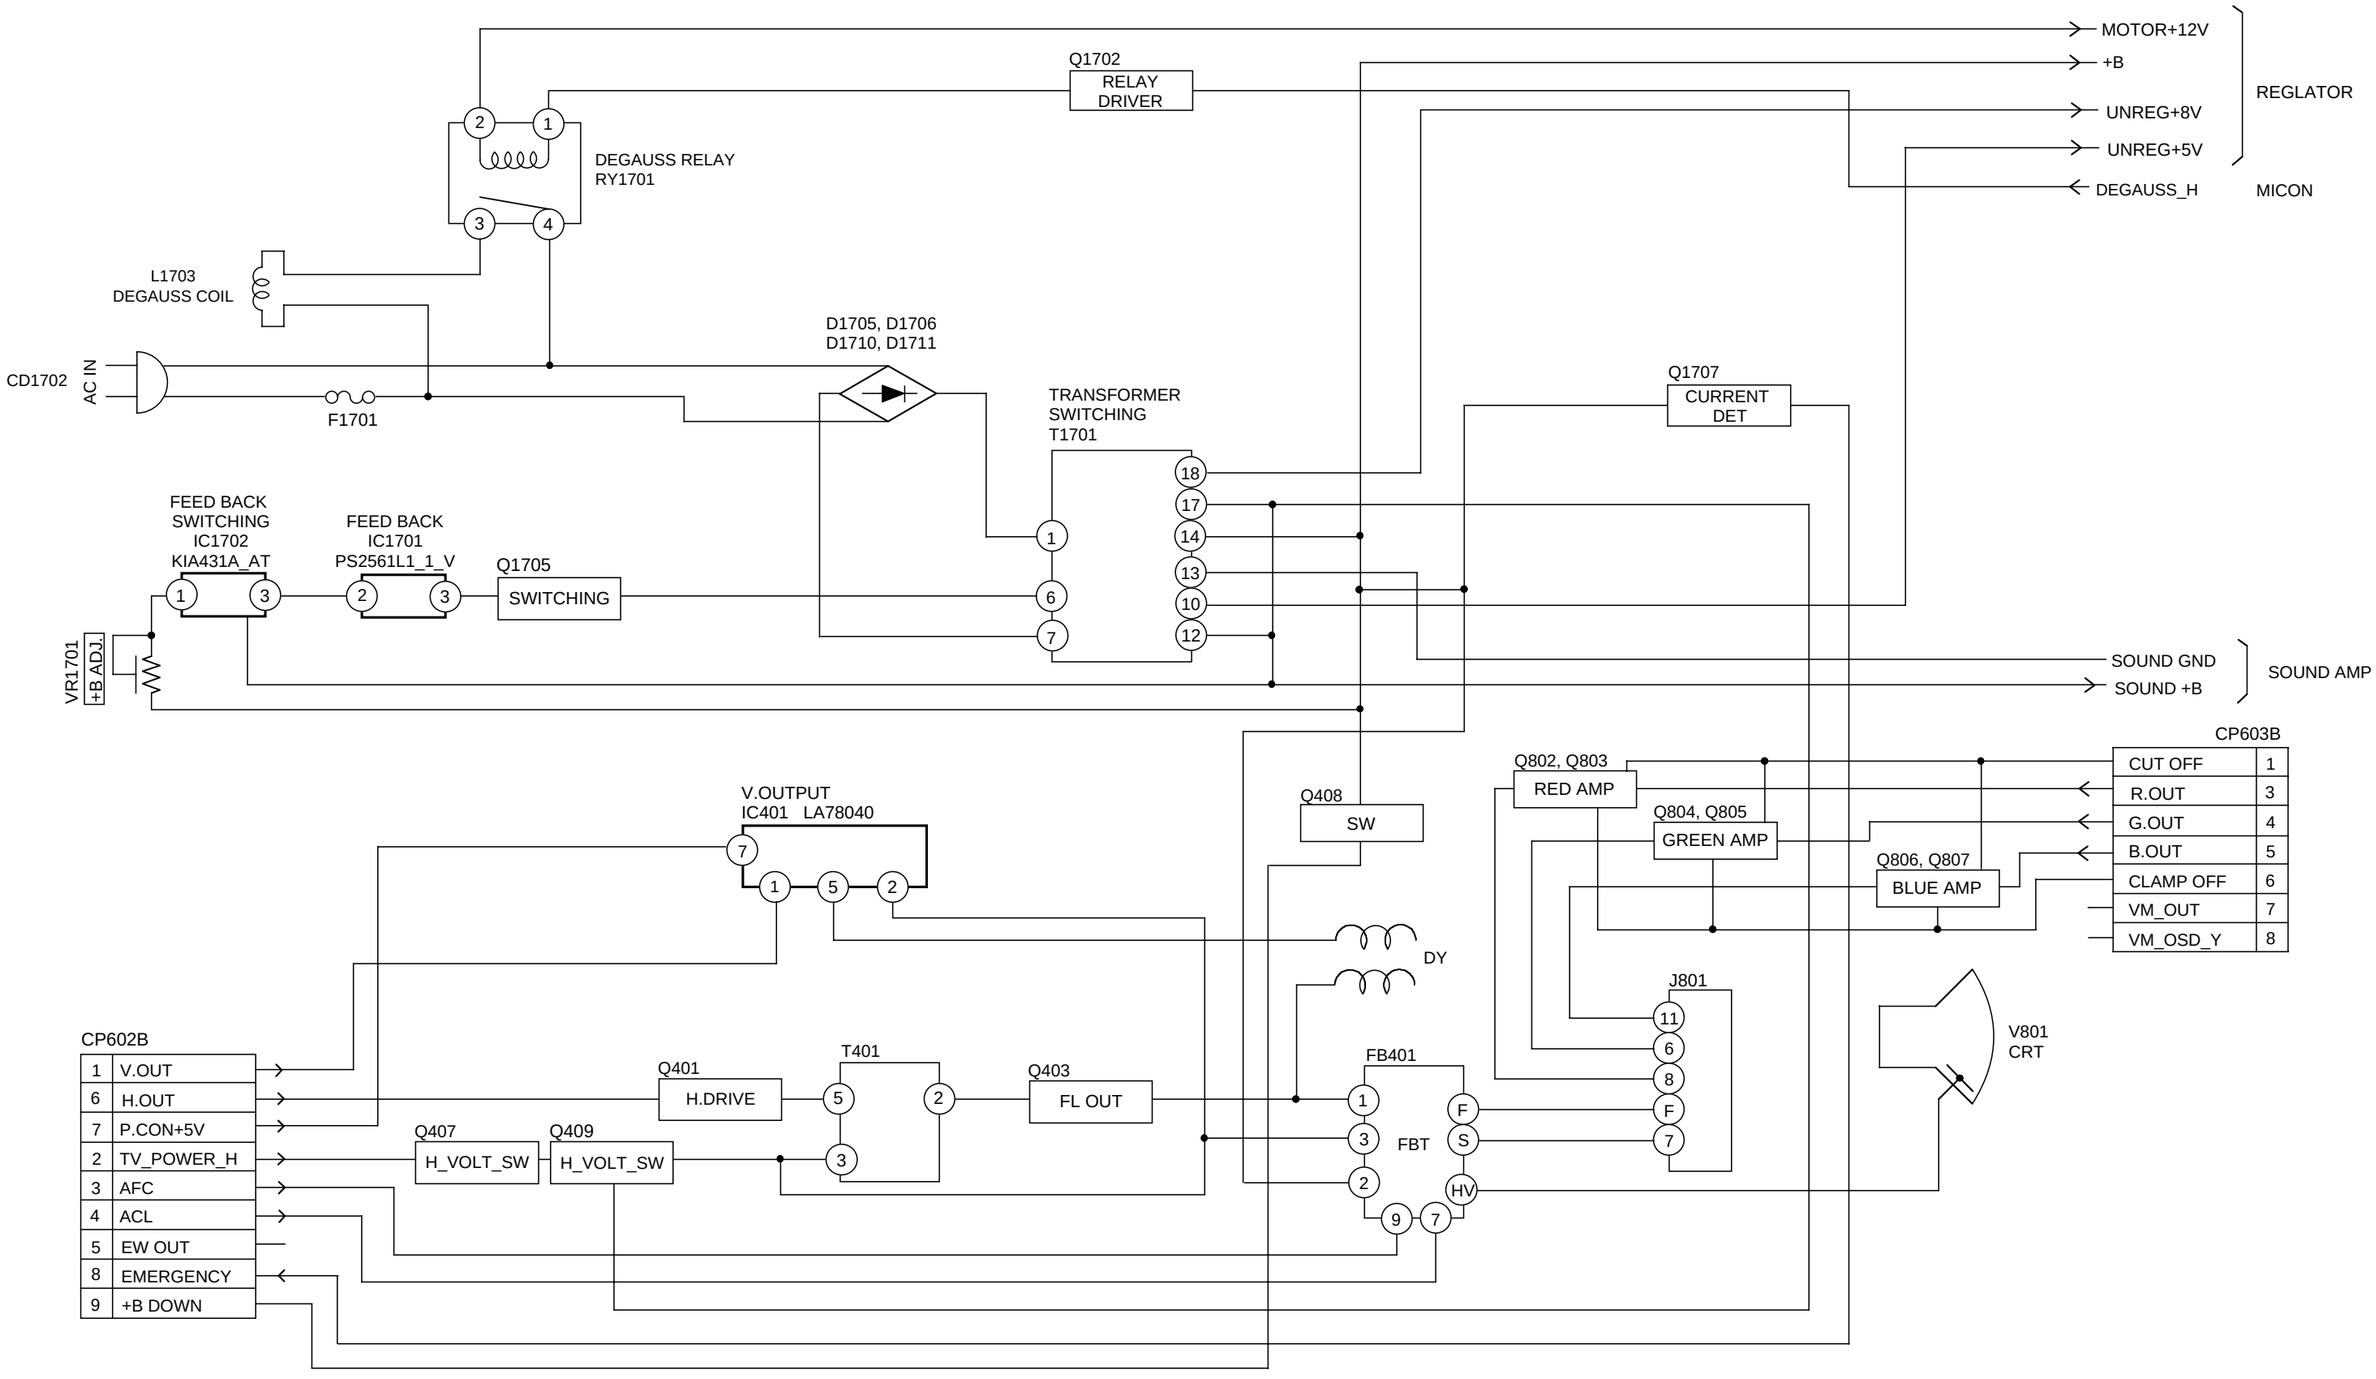

PRINTED CIRCUIT BOARDS

DVD (TOP SIDE)

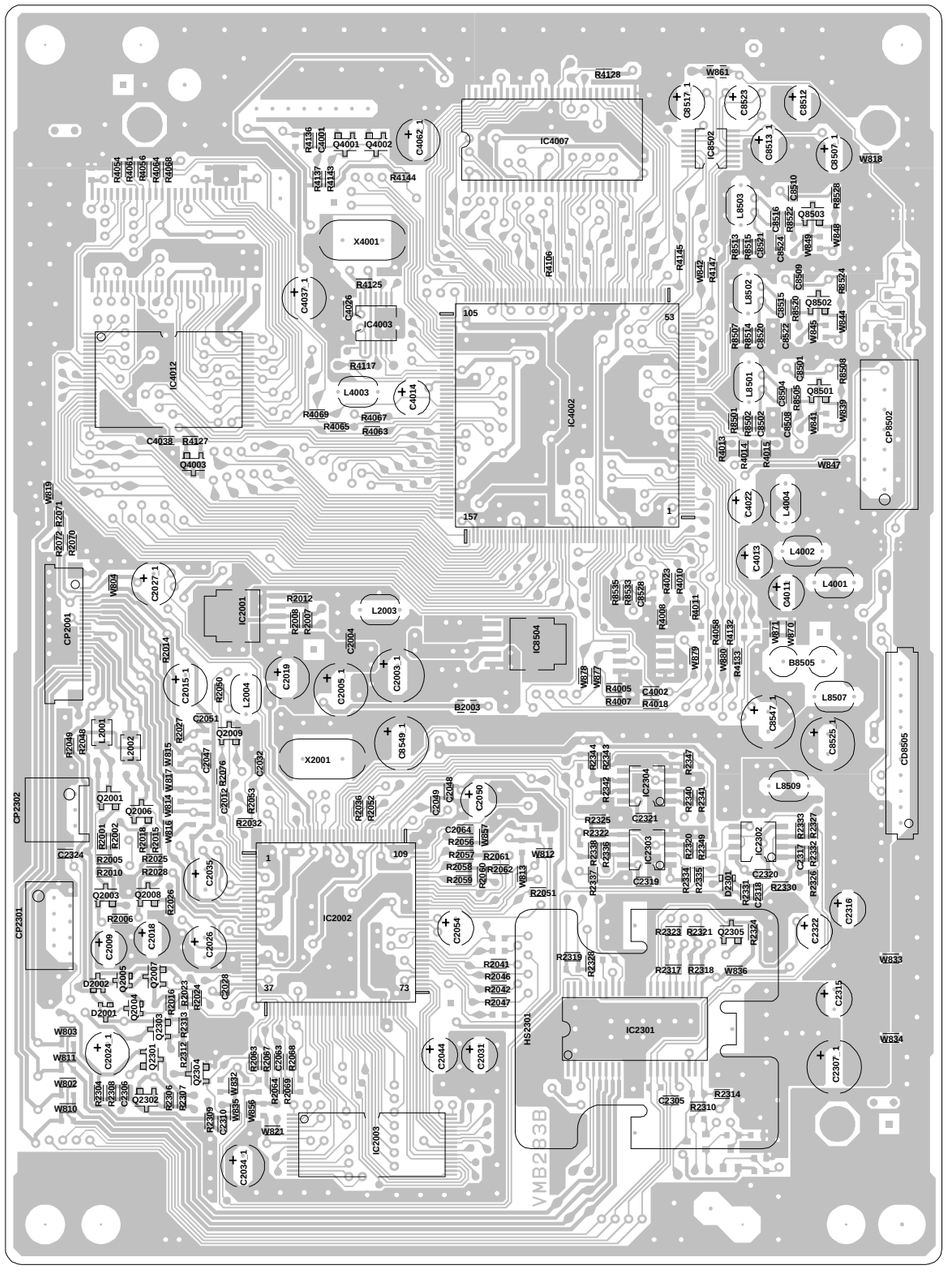

DVD (BOTTOM SIDE)

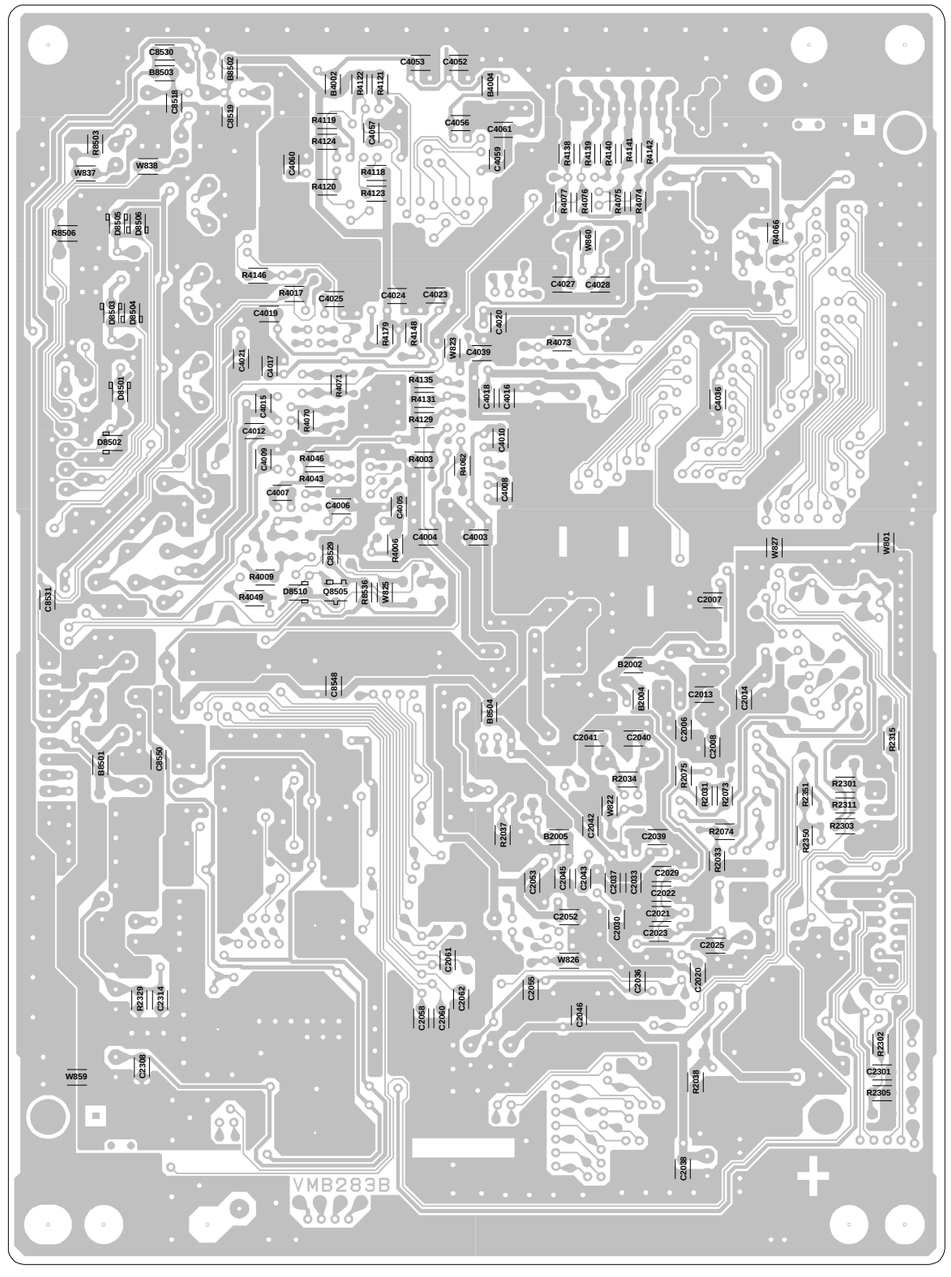

PRINTED CIRCUIT BOARDS
VCR (INSERTED PARTS)
SOLDER SIDE

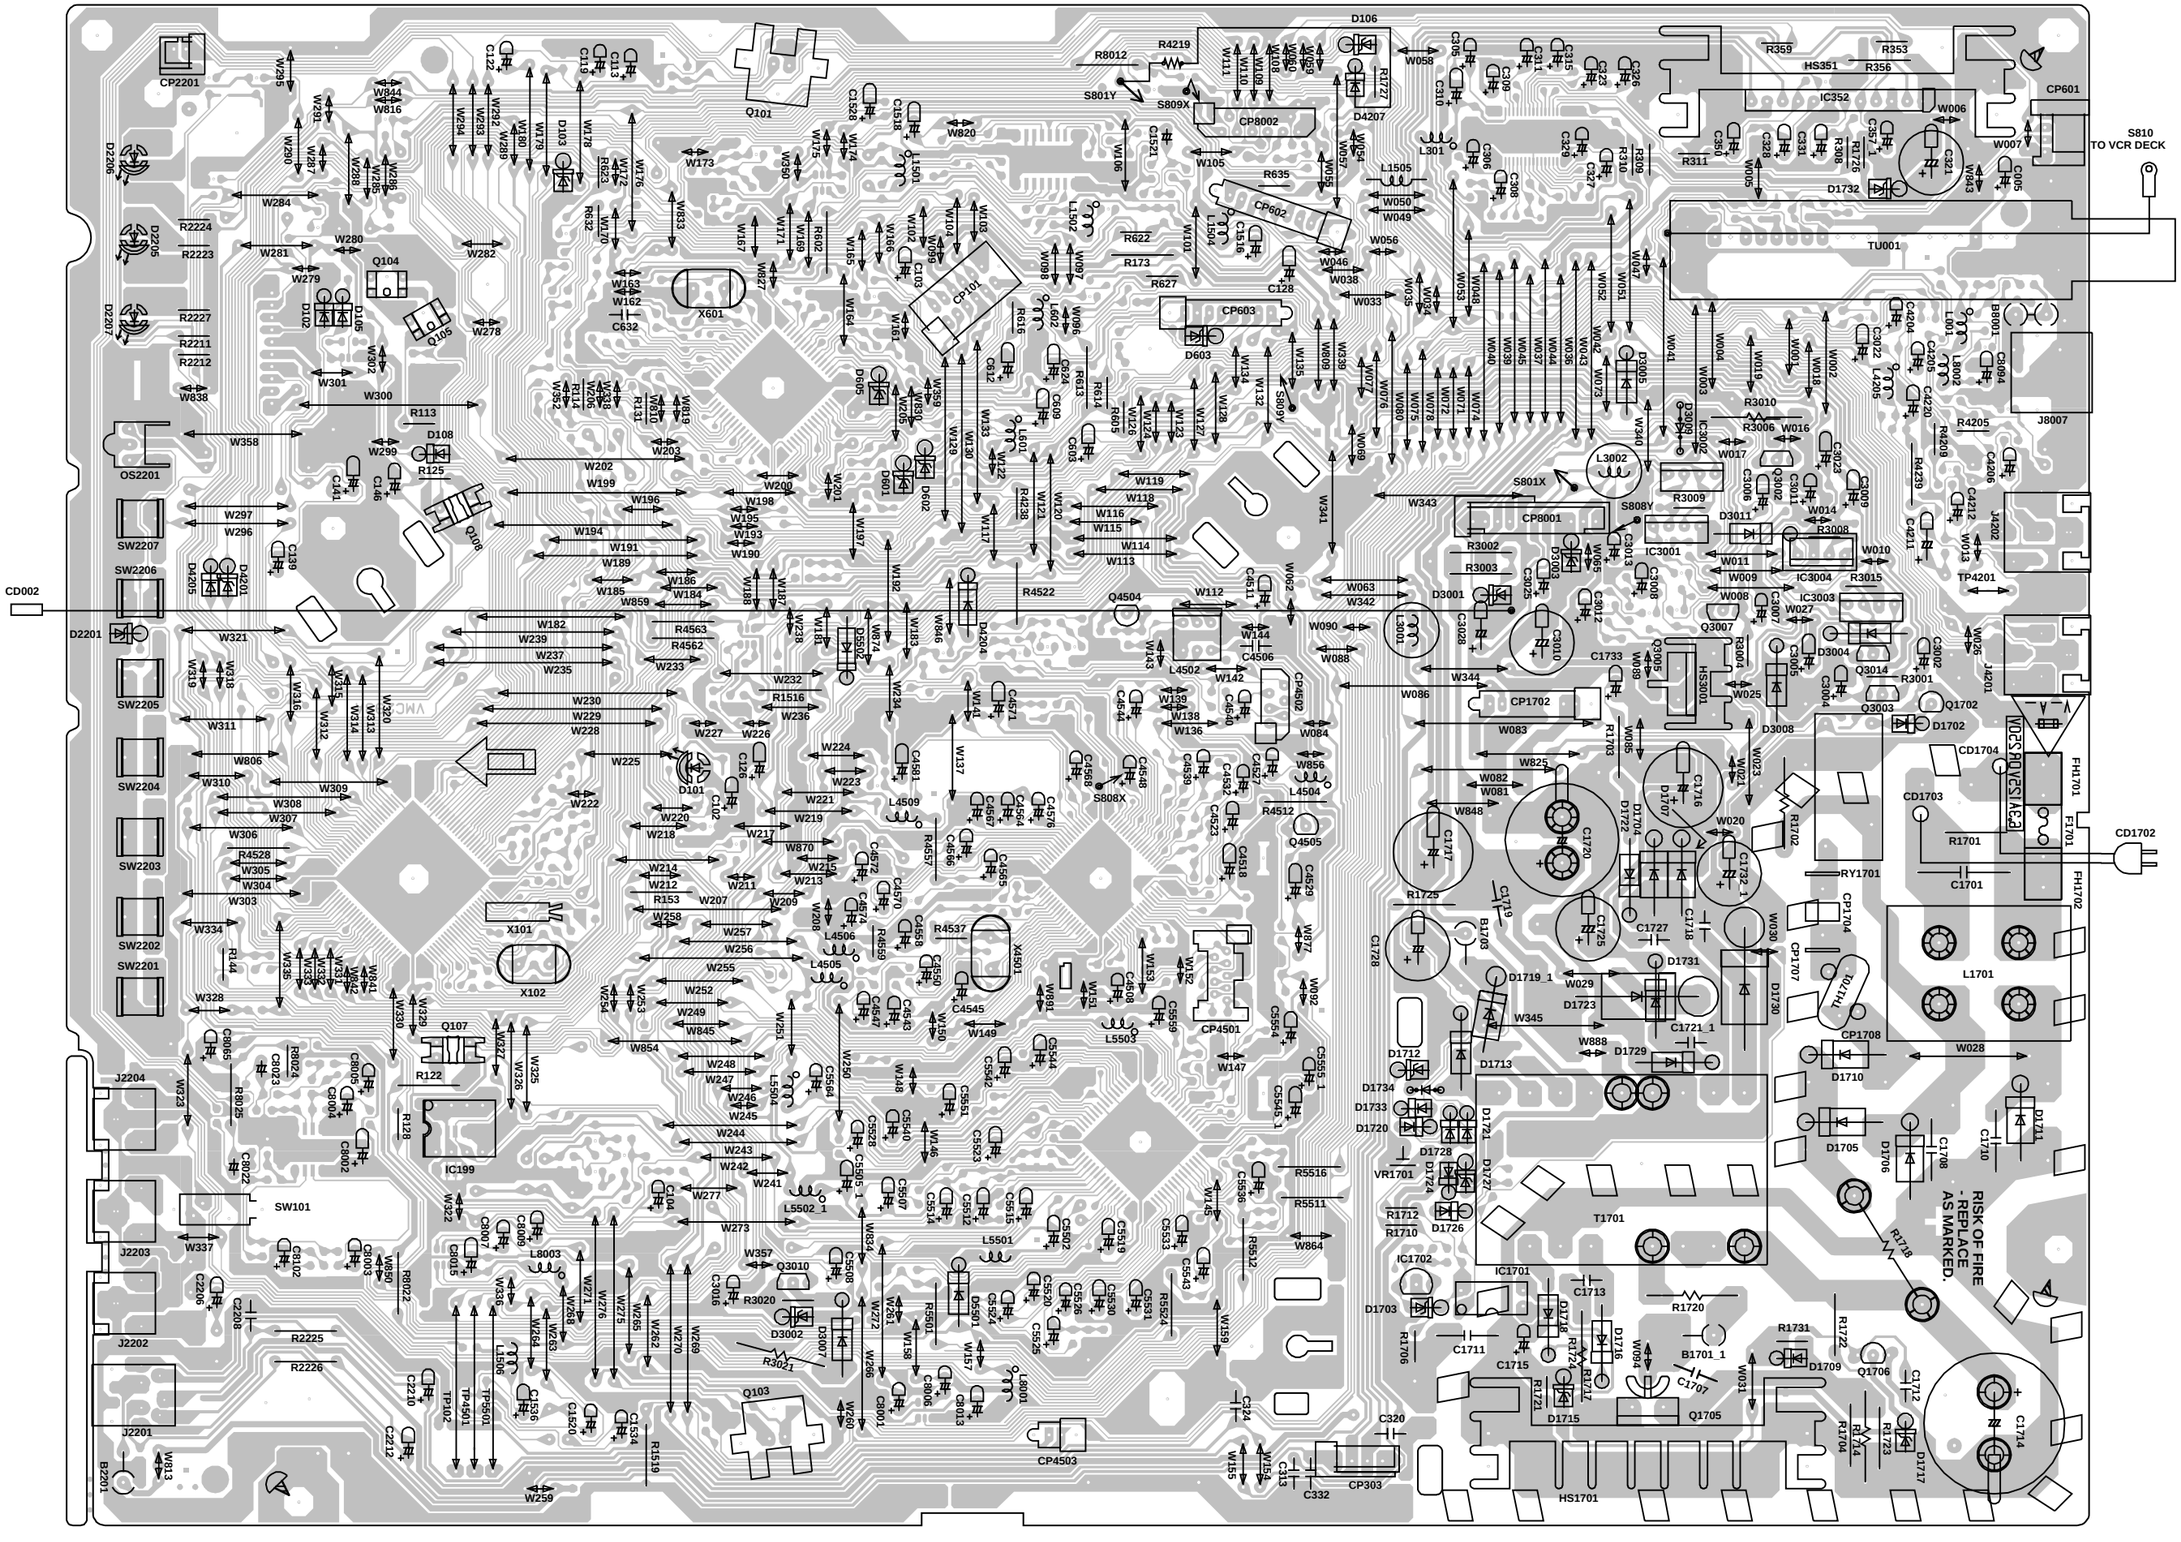
CP2201
D2206
D2205
D2207
R2224
R2223
R2227
R2211
R2212
W838
OS2201
SW2207
SW2206
SW2205
SW2204
SW2203
SW2202
SW2201
J2204
J2203
J2202
J2201
B2201
CD002
D2201
W295
W291
W844
W816
W290
W287
W288
W285
W286
W284
W281
W280
W279
Q104
D102
D105
Q105
W278
W282
W301
W302
W300
R113
W358
W299
D108
R125
C141
C146
W297
W296
C139
D4205
D4201
W321
W319
W318
W315
W316
W312
W314
W313
W320
W311
W806
W310
W309
W308
W307
W306
R4528
W305
W304
W303
W334
R144
W335
W333
W332
W331
W842
W843
W328
W330
W329
Q107
R122
R128
IC199
W323
R8024
C8023
C8005
C8004
R8025
C8002
C8022
SW101
W337
C8102
C8003
C8007
C8015
W322
W327
W326
W325
C8006
L8003
C8001
C8013
C8806
C8801
W336
W268
W264
W263
L1506
C1536
C1520
C1534
R1519
C2206
C2208
R2225
R2226
C2210
C2212
TP102
TP4501
TP5501
W813
W259
W271
W276
W275
W285
W282
W270
W269
W260
W261
W272
W266
W258
W257
W256
W255
W252
W253
W254
W249
W845
W854
W248
W247
W246
W245
W244
W243
W242
W241
W277
W273
W357
Q3010
C3016
R3020
D3002
R3021
D3007
R5501
D5901
D5924
L5501
C5502
C5519
C5520
C5556
C5530
C5531
C5543
R5524
C5508
C5507
C5514
C5512
C5515
C5536
R5516
R5511
W864
W834
W274
W267
W265
W262
W258
W257
W256
W255
W252
W253
W254
W249
W845
W854
W248
W247
W246
W245
W244
W243
W242
W241
W277
W273
W357
W359
W155
W154
C313
C332
CP303
C320
C324
CP4503
Q103
W813
W259
W271
W276
W275
W285
W282
W270
W269
W260
W261
W272
W266
W158
W157
W156
W155
W154
W153
W152
W151
W150
W149
W148
W147
W146
W145
W144
W143
W142
W141
W140
W139
W138
W137
W136
W135
W134
W133
W132
W131
W130
W129
W128
W127
W126
W125
W124
W123
W122
W121
W120
W119
W118
W117
W116
W115
W114
W113
W112
W111
W110
W109
W108
W107
W106
W105
W104
W103
W102
W101
W100
W099
W098
W097
W096
W095
W094
W093
W092
W091
W090
W089
W088
W087
W086
W085
W084
W083
W082
W081
W848
W825
W856
L4504
R4512
Q4505
C4529
W877
C4528
C4527
C4532
C4539
C4548
S808X
C4568
C4576
C4584
C4567
C4581
L4509
C4572
C4570
C4574
R4559
C4558
C4565
C4547
C4543
C4545
C4546
C4544
C4571
C4540
C4541
C4542
C4523
C4518
C4506
CP4502
CP4501
L5503
C5559
C5564
C5544
C5555_1
C5545_1
C5551
C5540
C5528
C5523
C5502_1
L5502_1
L5504
L4505
L4506
R4537
X4501
C4553
C4554
C4555
C4556
C4557
C4558
C4559
C4560
C4561
C4562
C4563
C4564
C4565
C4566
C4567
C4568
C4569
C4570
C4571
C4572
C4573
C4574
C4575
C4576
C4577
C4578
C4579
C4580
C4581
C4582
C4583
C4584
C4585
C4586
C4587
C4588
C4589
C4590
C4591
C4592

PRINTED CIRCUIT BOARDS
VCR (CHIP MOUNTED PARTS)
SOLDER SIDE

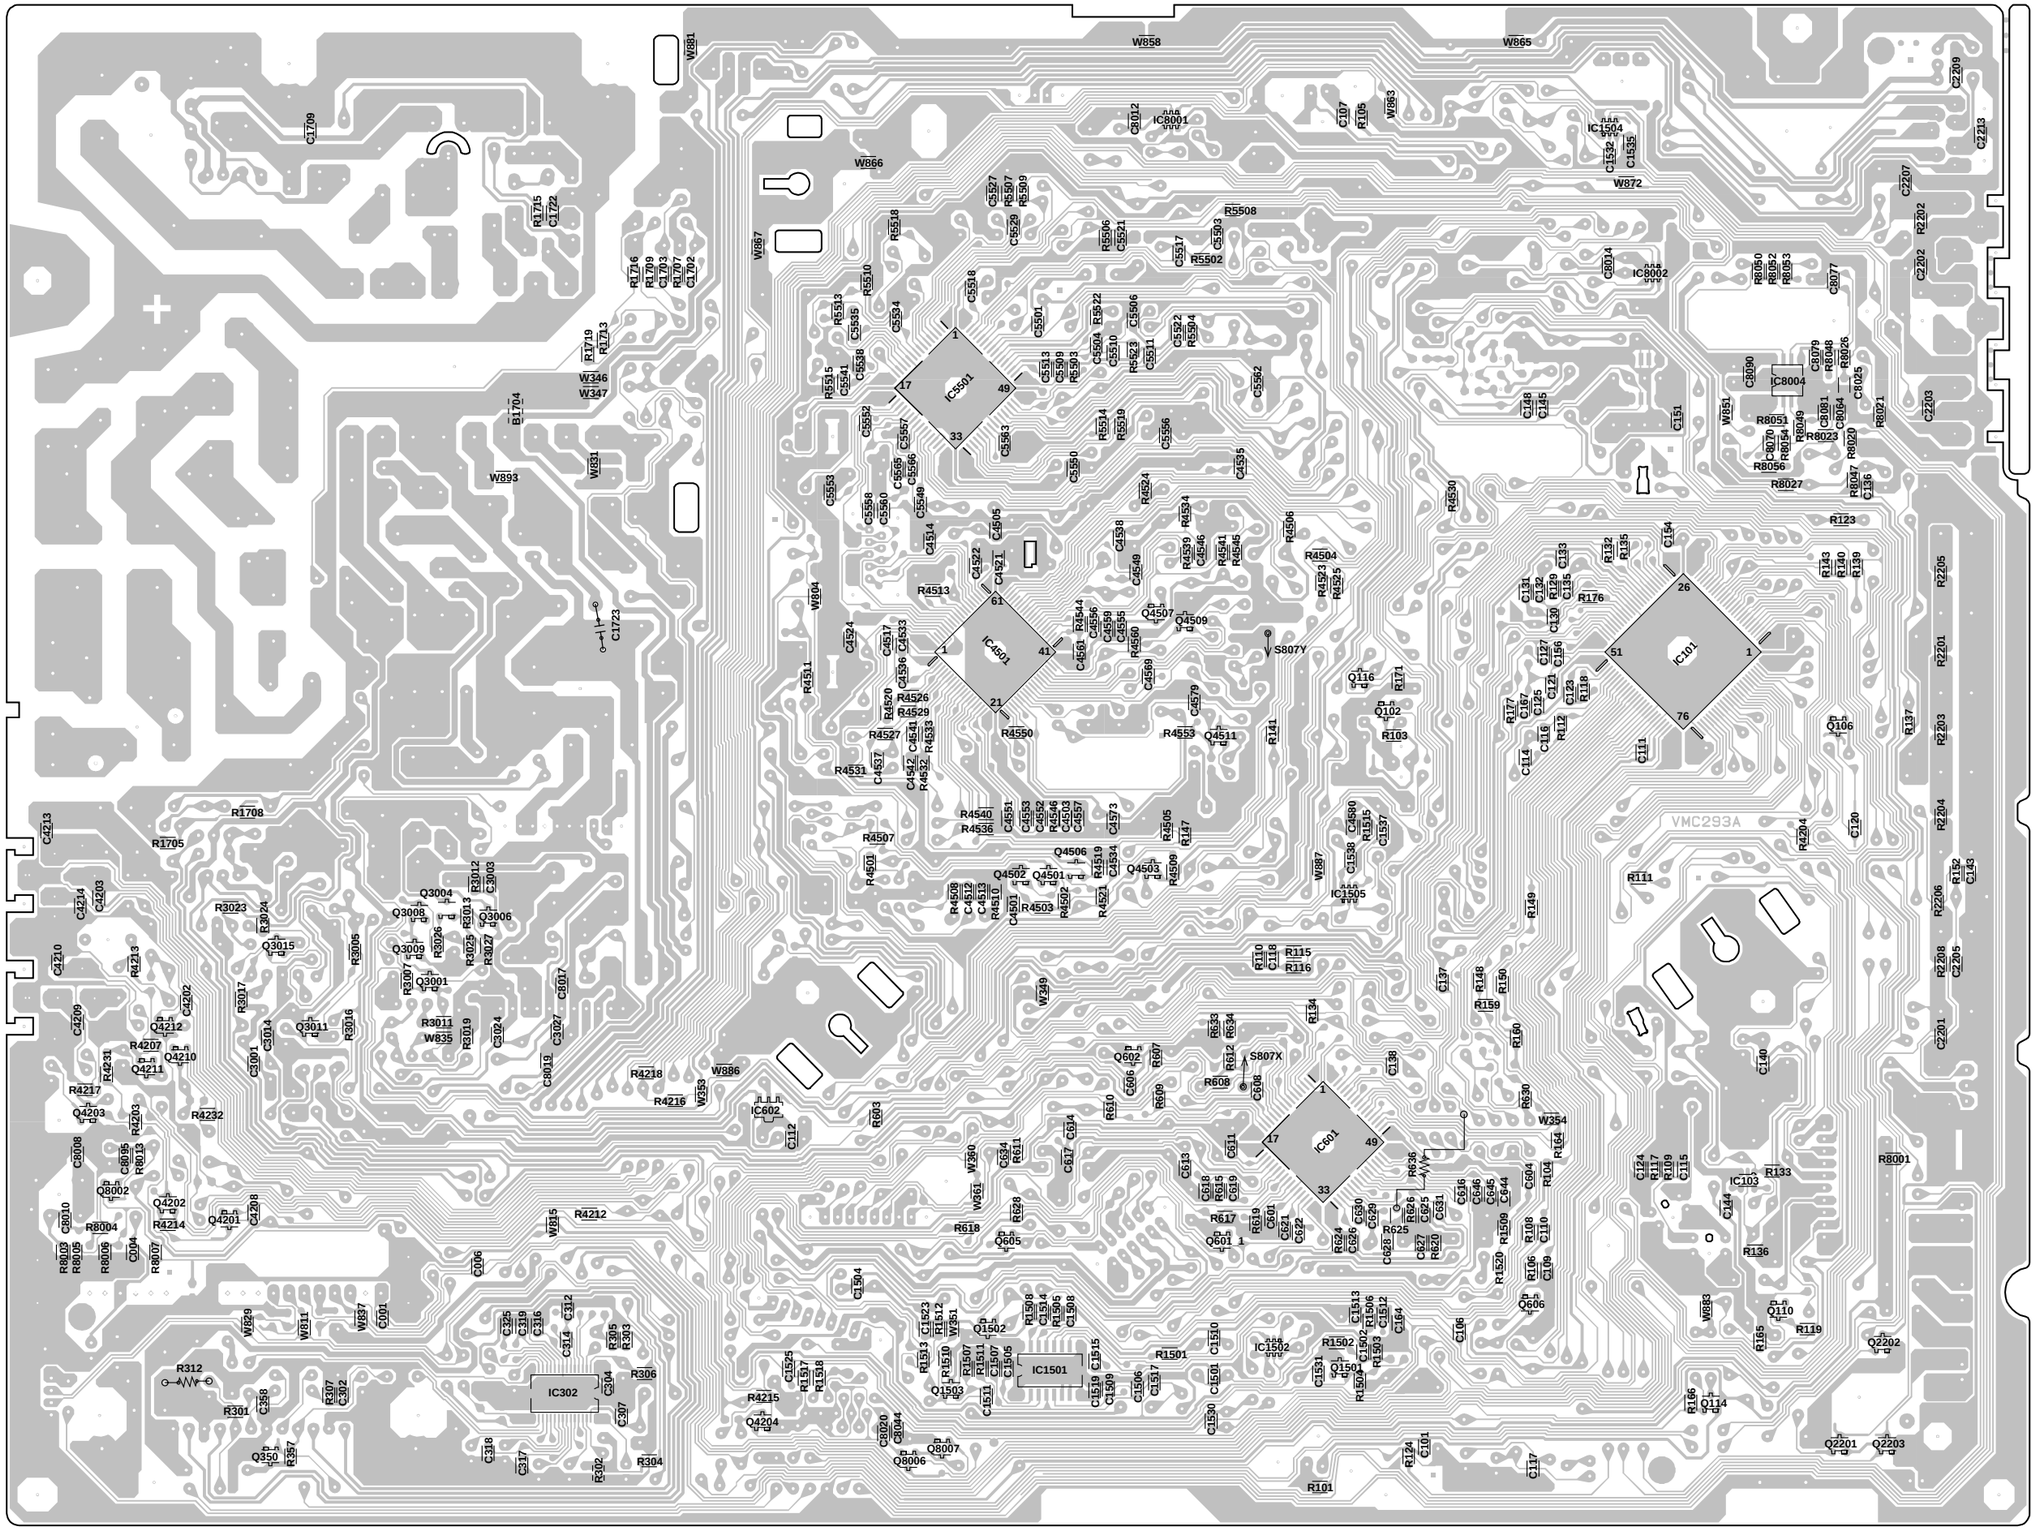

DEFLECTION/CRT/OPERATION
SOLDER SIDE

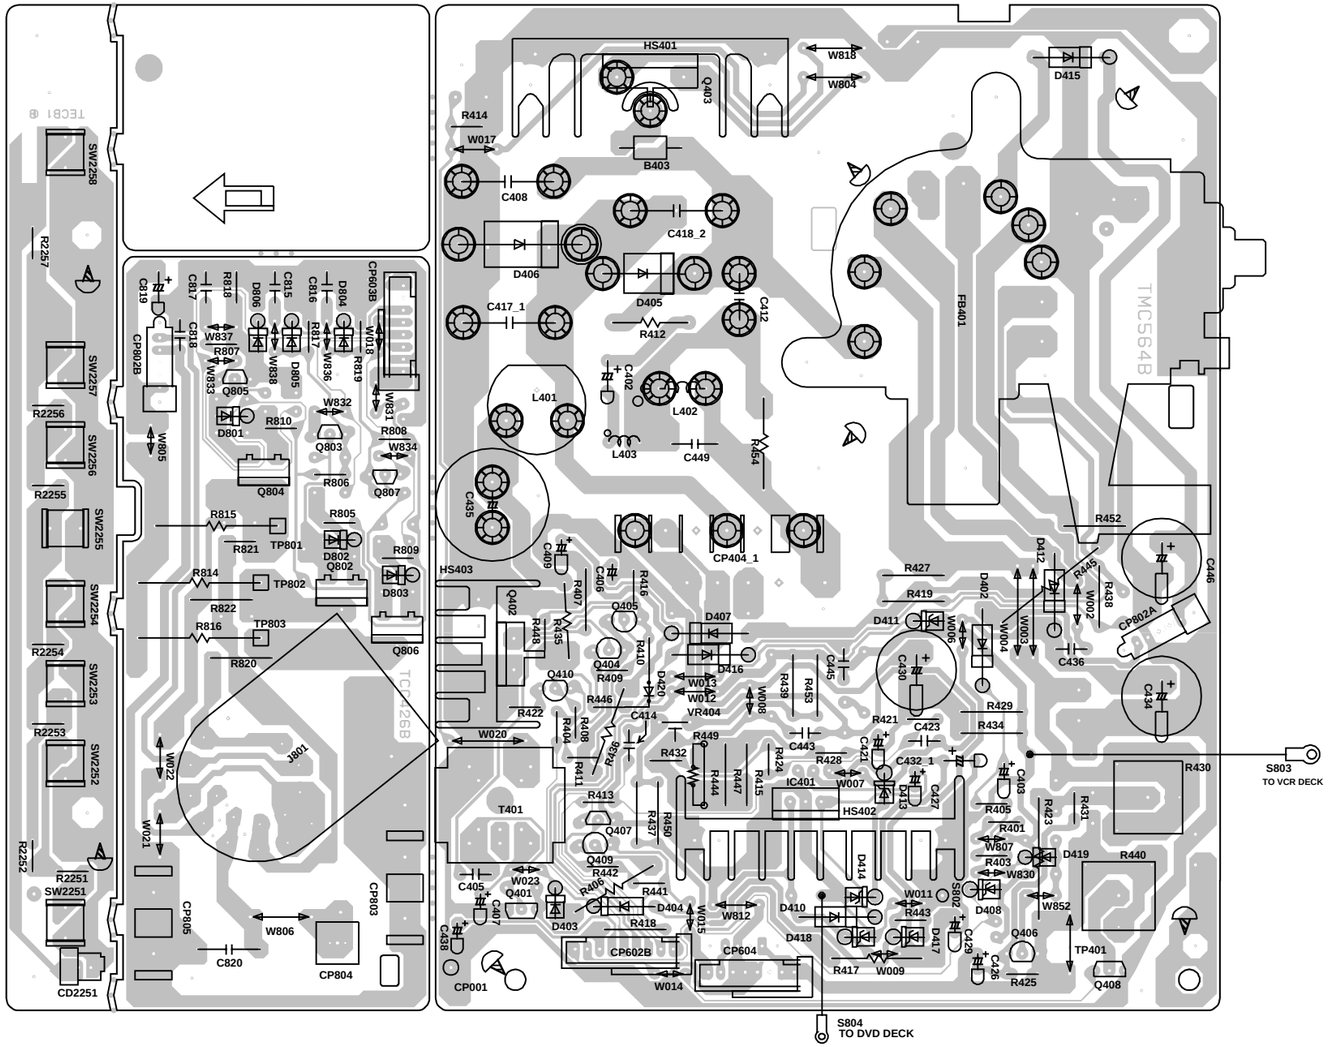

RELAY/SW (INSERTED PARS)
SOLDER SIDE

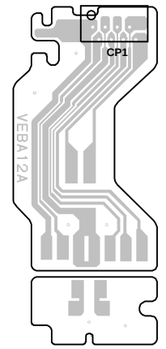

RELAY/SW (CHIP MOUNTED PARS)
SOLDER SIDE

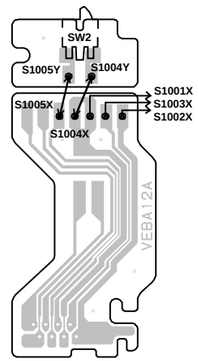

RF_AMP/DSP SCHEMATIC DIAGRAM (DVD PCB)

CD2001 2H002303
FFC(230mm)

FROM/TO LOADER

CP2001 24FLZ-SM1-TB

24	T-	NC	
23	T+	W803	TR+
22	F-	W811	TR-
21	F+	W802	FO+
20	MON(DVD)	W810	FO-
19	NC(SW)		LMD1
18	VOL(DVD)	NC	
17	GND(DVD)		VR-DVD
16	LD(DVD)		LD-DVD
15	LD(CD)		LD-CD
14	VOL(CD)		VR-CD
13	GND(CD)		
12	MON(COM)		LMD2
11	GND(NC)	NC	
10	RF	NC	
9	C		C
8	B		B
7	A		A
6	D		D
5	F		F
4	E		E
3	VCC		
2	VREF	W804	REFD
1	GND(PDIC)	NC	

R2070 1K, R2071 1K, R2072 390, C2027_1 16V 22 KA

JG2001 JG2002 JG2004

R2001 18, R2002 18, R2015 18, R2018 18

DVD_LD_CTL Q2001 2SA1036K, R2005 220, R2010 6.8K, LD_CTL Q2003 KTC3875S_Y_RTK, L2001 10uH NL3225, R2006 270, C2009 16V 10 KA

CD_LD_CTL Q2006 2SA1036K, R2025 220, R2028 6.8K, LD_CTL Q2008 KTC3875S_Y_RTK, L2002 10uH NL3225, R2026 270, C2018 16V 10 KA

LD-DVD, LD-CD, A, B, REFD, D, C, F, E

W817 W814 W815 W816

JG2013 JG2008 JG2007 JG2011 JG2009 JG2010

C2014 0.1 B, C2015_1 6.3V 47 KA, C2047 0.0039 B, R2014 1K +-1%, R2027 1K +-1%, C2051 0.0039 B, C2024_1 6.3V 47 KA

C2006 56P CH, C2008 18P CH, L2004 2.2uH 0305, C2013 7P CH, C2012 100 150P CH, R2033 1M, R2074 1M, R2031 1M, R2073 1M, C2032 0.01 B, LMD2, LMD1, C2033 0.01 B, JG2027

R2053 680 +-1%, R2050 100, R2032 12K +-1%, R2075 1K, JG2014, BUFFER Q2009, 2SA1037AK, C2029 0.01 B, R2076 0.9, JG2015, JG2016, JG2017

C2026 6.3V 47 KA, C2022 0.01 B, C2021 0.01 B, C2023 0.01 B, C2025 0.01 B, C2019 6.3V 47 KA, C2020 0.01 B, C2028 0.01 B

C2035 6.3V 47 KA, C2040 15P CH, C2041 15P CH, R2034 1M, W822 15P CH, X2001 20MHz, C2042 0.01 B, C2037 0.01 B, C2039 0.01 B, C2027 0.01 B, JG2028, JG2029

TD, FD, REFDAC, SLD, SPD, FE_RESET, C2030 0.1 B, JG2030, C2048 0.01 B, C2049 0.1 B, R2037 10K, C2050 16V10 KA, C2045 0.01 B, C2043 0.01 B

W857, W813, B2005 FCM2012H-102T04, OPN_SW, C2053 0.01 B, C2064 0.1 B, R2055 10K, R2057 10K, R2058 10K, R2059 10K, R2060 10K, R2061 10K, R2062 10K

RF_AMP/DSP IC2002 L6315ATXXTY

1	IREF	144	VBGRLT
2	GNDAI	143	GNDAI
3	RFSACD	142	LMDATA
4	RFIN	141	LMDCK
		140	LCREF
		139	VCCA33
		138	LD2
		137	LD1
		136	SREG2
		135	VCCR33
		134	SREG1
		133	VCCPLL
		132	RREIN
		131	FREOUT
		130	PLLOFF
		129	GNDPLL
		128	NC12
		127	VCC33DAC
		126	NC11
		125	GNDDAC
		124	TACT
		123	FACT
		122	RERDAC
		121	REFGND
		120	REFEXT
		119	SLEDGE
		118	SPINDLE
		117	VCC18DAC
		116	RESET_N
		115	VDD3
		114	VSS
		113	VDD3S
		112	VSS
		111	VCCD_OUT
		110	VCCD_BYP
		109	VPP_TEST
5	RFOUT	108	PD0
6	VCCA18	107	PD1
7	TST_ADC	106	PD2
8	TST_SLICE	105	PD3
9	TST_PM	104	PD4
10	A	103	PD5
11	GNDMN	102	PD6
12	B	101	PD7
13	VCC33MN	100	VSS
14	REFD	99	VDD3
15	VCC18MN	98	PE4
16	D	97	PE3
17	VCCA18IS	96	PE2
18	C	95	PE1
19	VCCA33IS	94	PE0
20	GNDAIS	93	VSS
21	VCC33SD	92	VDD3
22	VCC18SD	91	OUT_DATA7
23	GNDSD	90	OUT_DATA6
24	F	89	OUT_DATA5
25	E	88	OUT_DATA4
26	VSHIELDIS	87	OUT_DATA3
27	VDDADC	86	OUT_DATA2
28	VSSADC	85	OUT_DATA1
29	VCCADC	84	OUT_DATA0
30	GNDADC	83	OUT_CLK
31	VSHIELDADC	82	OUT_DVALID
32	NC	81	OUT_SYNC
33	BOOT MODE	80	OUT_ERR
34	VSS	79	OUT_REQ
35	VDD3	78	VSS
36	PC0	77	VDD18
37	PC1	76	RAM_DQ7
38	PC2	75	RAM_DQ6
39	PC3	74	RAM_DQ5
40	PC4	73	RAM_DQ4
41	PC5	72	RAM_DQ3
42	PC6	71	RAM_DQ2
43	PC7	70	RAM_DQ1
44	VSS	69	RAM_DQ0
45	VDD18	68	VSS
46	VSS_SPL	67	VDD3
47	RAM_DQM	66	VDD_SPL
48	RAM_WEN	65	RAM_CLK
49	RAM_CASN	64	RAM_A9
50	RAM_RASN	63	RAM_A8
51	RAM_A13	62	RAM_A7
52	RAM_A12	61	RAM_A6
53	RAM_A11	60	RAM_A5
54	RAM_A10	59	RAM_A4
55	RAM_A0	58	RAM_A3
56	RAM_A1	57	RAM_A2

+1.8VD

SRAM_DQM, SRAM_WEN, SRAM_ADD14, SRAM_ADD15, SRAM_ADD13, SRAM_ADD12, SRAM_ADD11, SRAM_ADD10, SRAM_ADD0, SRAM_ADD1, SRAM_ADD2, SRAM_ADD3, SRAM_ADD4, SRAM_ADD5, SRAM_ADD6, SRAM_ADD7, SRAM_ADD8, SRAM_ADD9, SRAM_ADD16, C2045 0.01 B, SRAM_DATA0, SRAM_DATA1, SRAM_DATA2, SRAM_DATA3, SRAM_DATA4, SRAM_DATA5, SRAM_DATA6, SRAM_DATA7

C2044 16V10 KA

DMUTE, PC2I, CLS_SW, LSW, JG2024

C2036 0.01 B, C2031 16V10 KA, JG2022, JG2023

R2063 10K, R2067 10K, R2064 10K, R2068 10K, C2063 0.1 B, R2069 10K, W856

IC2001 PQ070XZ01ZP
REG+1.8V
V_IN 3.11, V_C 3.11, V_OUT 1.89, V_ADJ 1.24, GND 0

C2003_1 6.3V 100 KA, L2003 2.2uH 0305, C2004 0.1 F, R2007 510 +-1%, R2008 10, R2012 1K +-1%, C2005_1 6.3V 100 KA, C2007 0.1 F

B2002 FCM2012H-102T04, B2004 FCM2012H-102T04, B2003 FCM2012H-102T04

+1.8VA2, +1.8VA1, +1.8VD, P.CON+3.3VA, C2034_1 6.3V 47, C2038 0.022 B

W801, W827, W819

P.CON+A5V, P.CON+3.3VA, P.CON+3.3V, GND, D_GND

FROM/TO REGULATOR2

1M SRAM IC2003 CY62128VLL-70ZC

SRAM_ADD11	SRAM_ADD9	SRAM_ADD8	SRAM_ADD13	SRAM_WEN	W821	SRAM_ADD15		NC	SRAM_ADD16	SRAM_ADD14	SRAM_ADD12	SRAM_ADD7	SRAM_ADD6	SRAM_ADD5	SRAM_ADD4
1.5	1.5	1.6	1.5	0	3.2	1.7	3.2	0.1	1.6	1.6	1.6	1.8	1.8	1.6	1.9
A11	A9	A8	A13	WE	CE2	A15	VCC	NC	A16	A14	A12	A7	A6	A5	A4
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
OE	A10	CE1	DQ7	DQ6	DQ5	DQ4	DQ3	GND	DQ2	DQ1	DQ0	A0	A1	A2	A3
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
2.8	1.4	0	1.6	1.6	1.6	1.6	1.6	0	1.6	1.6	1.6	2.3	2.3	1.8	1.9
SRAM_DOM	SRAM_ADD10		SRAM_DATA7	SRAM_DATA6	SRAM_DATA5	SRAM_DATA4	SRAM_DATA3		SRAM_DATA2	SRAM_DATA1	SRAM_DATA0	SRAM_ADD0	SRAM_ADD1	SRAM_ADD2	SRAM_ADD3

R2041 56, R2046 100, R2042 56, R2047 56, JG2037, W826, C2055 0.01 B, C2061 15P CH, C2062 15P CH, C2063 15P CH

FROM/TO MPEG
SCL, SDA, IRQ0, FE_RESET, XDATA, XBCLK, XPCLK, AFEC_SCTST

FROM/TO MOTOR DRV
PC2I, W832
OPN_SW, DMUTE, SPD_FG, CLS_SW, TD, FD, REFDAC, SLD, SPD, TR-, TR+, FO-, FO+, LSW, P.CON+3.3V_1
JG2038, JG2039, JG2040, JG2041, JG2042

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB130
VMB283

MOTOR DRIVE SCHEMATIC DIAGRAM

(DVD PCB)

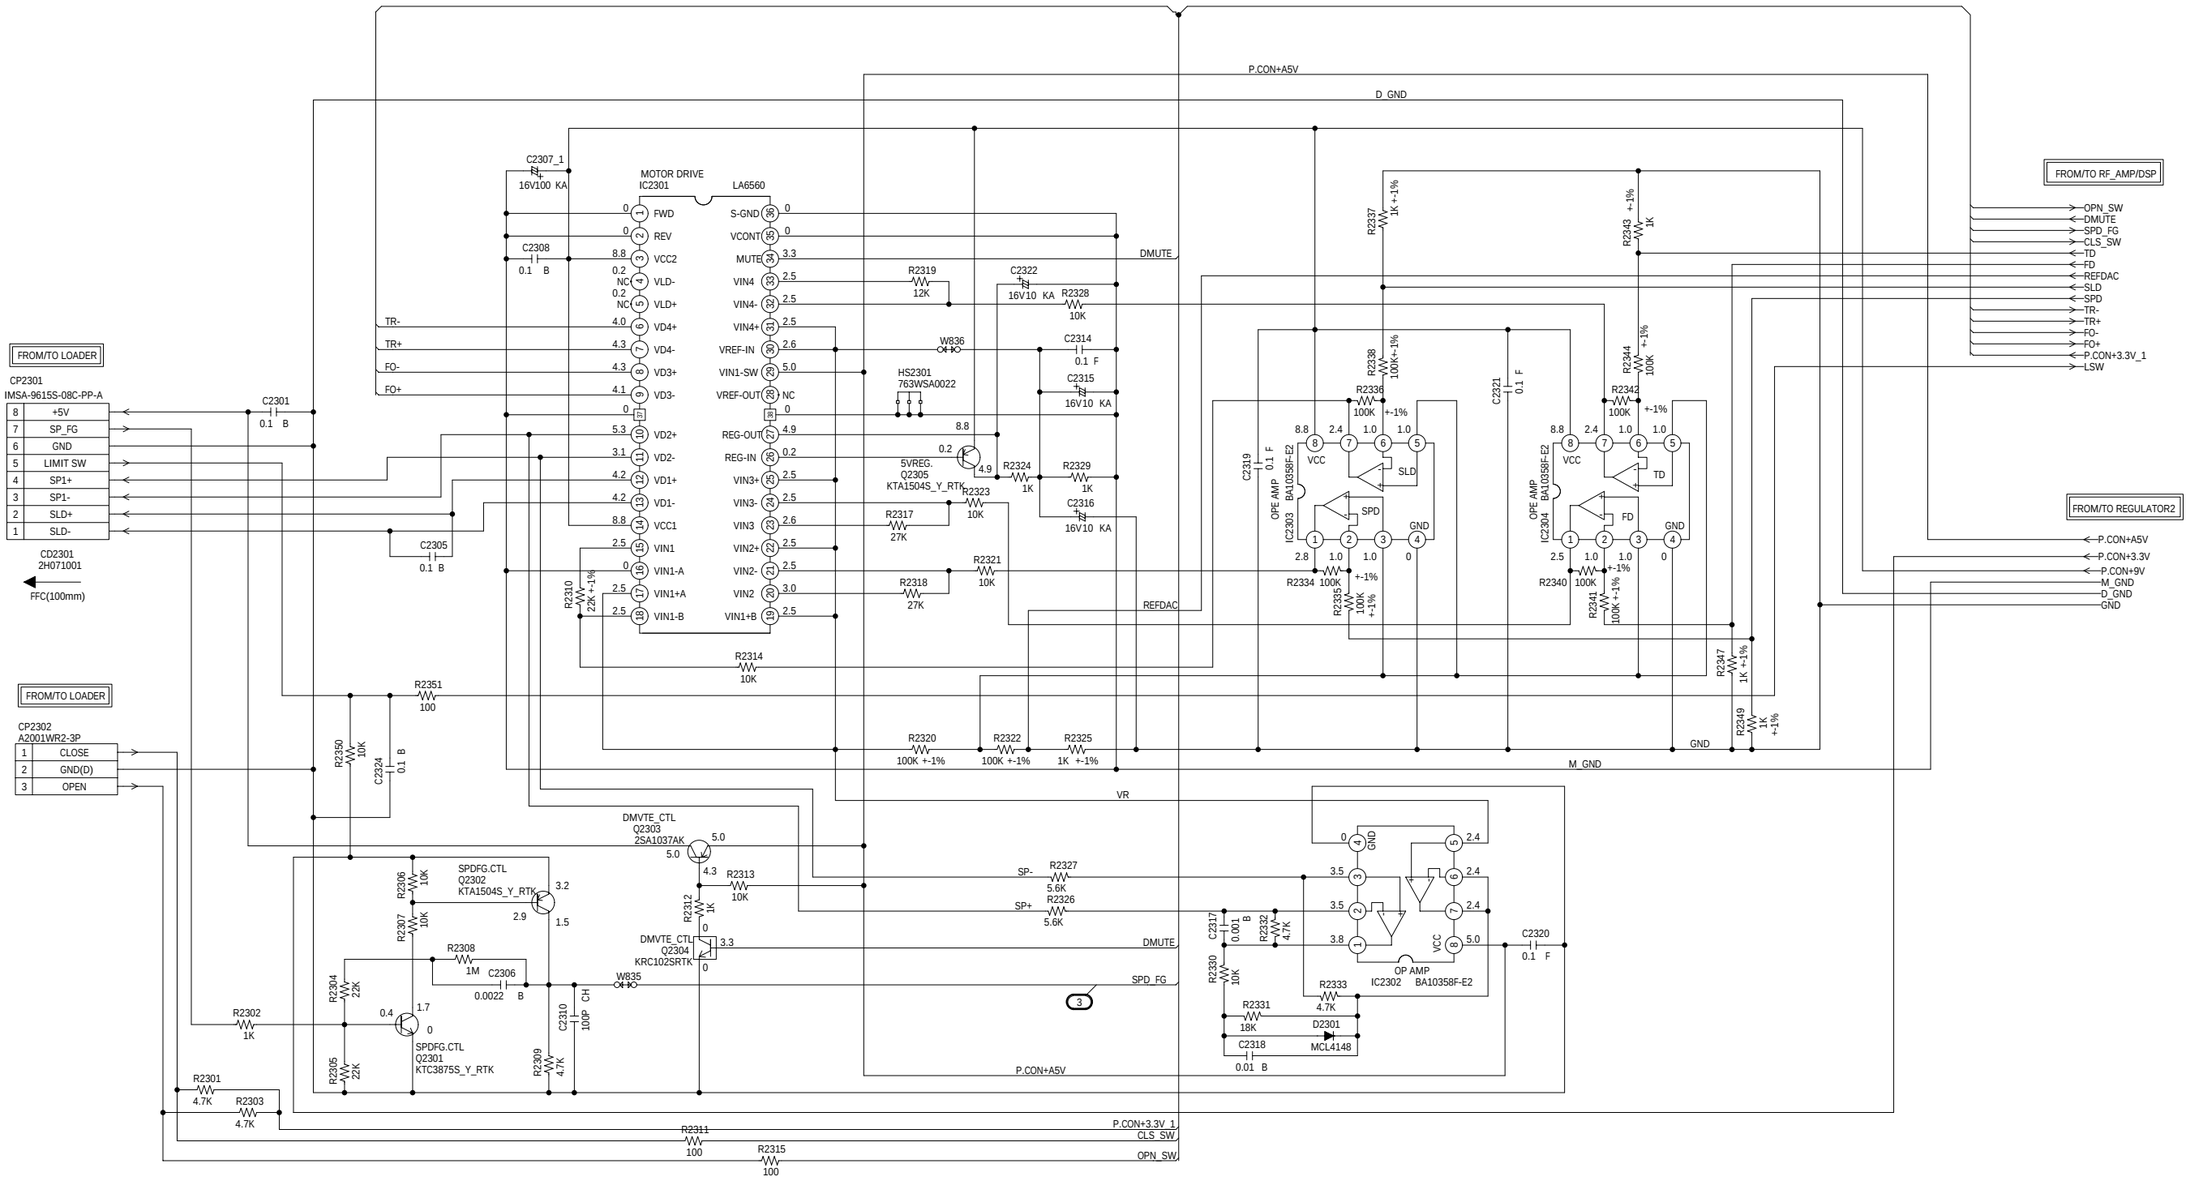

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR



PCB130
VMB283

MPEG SCHEMATIC DIAGRAM

(DVD PCB)

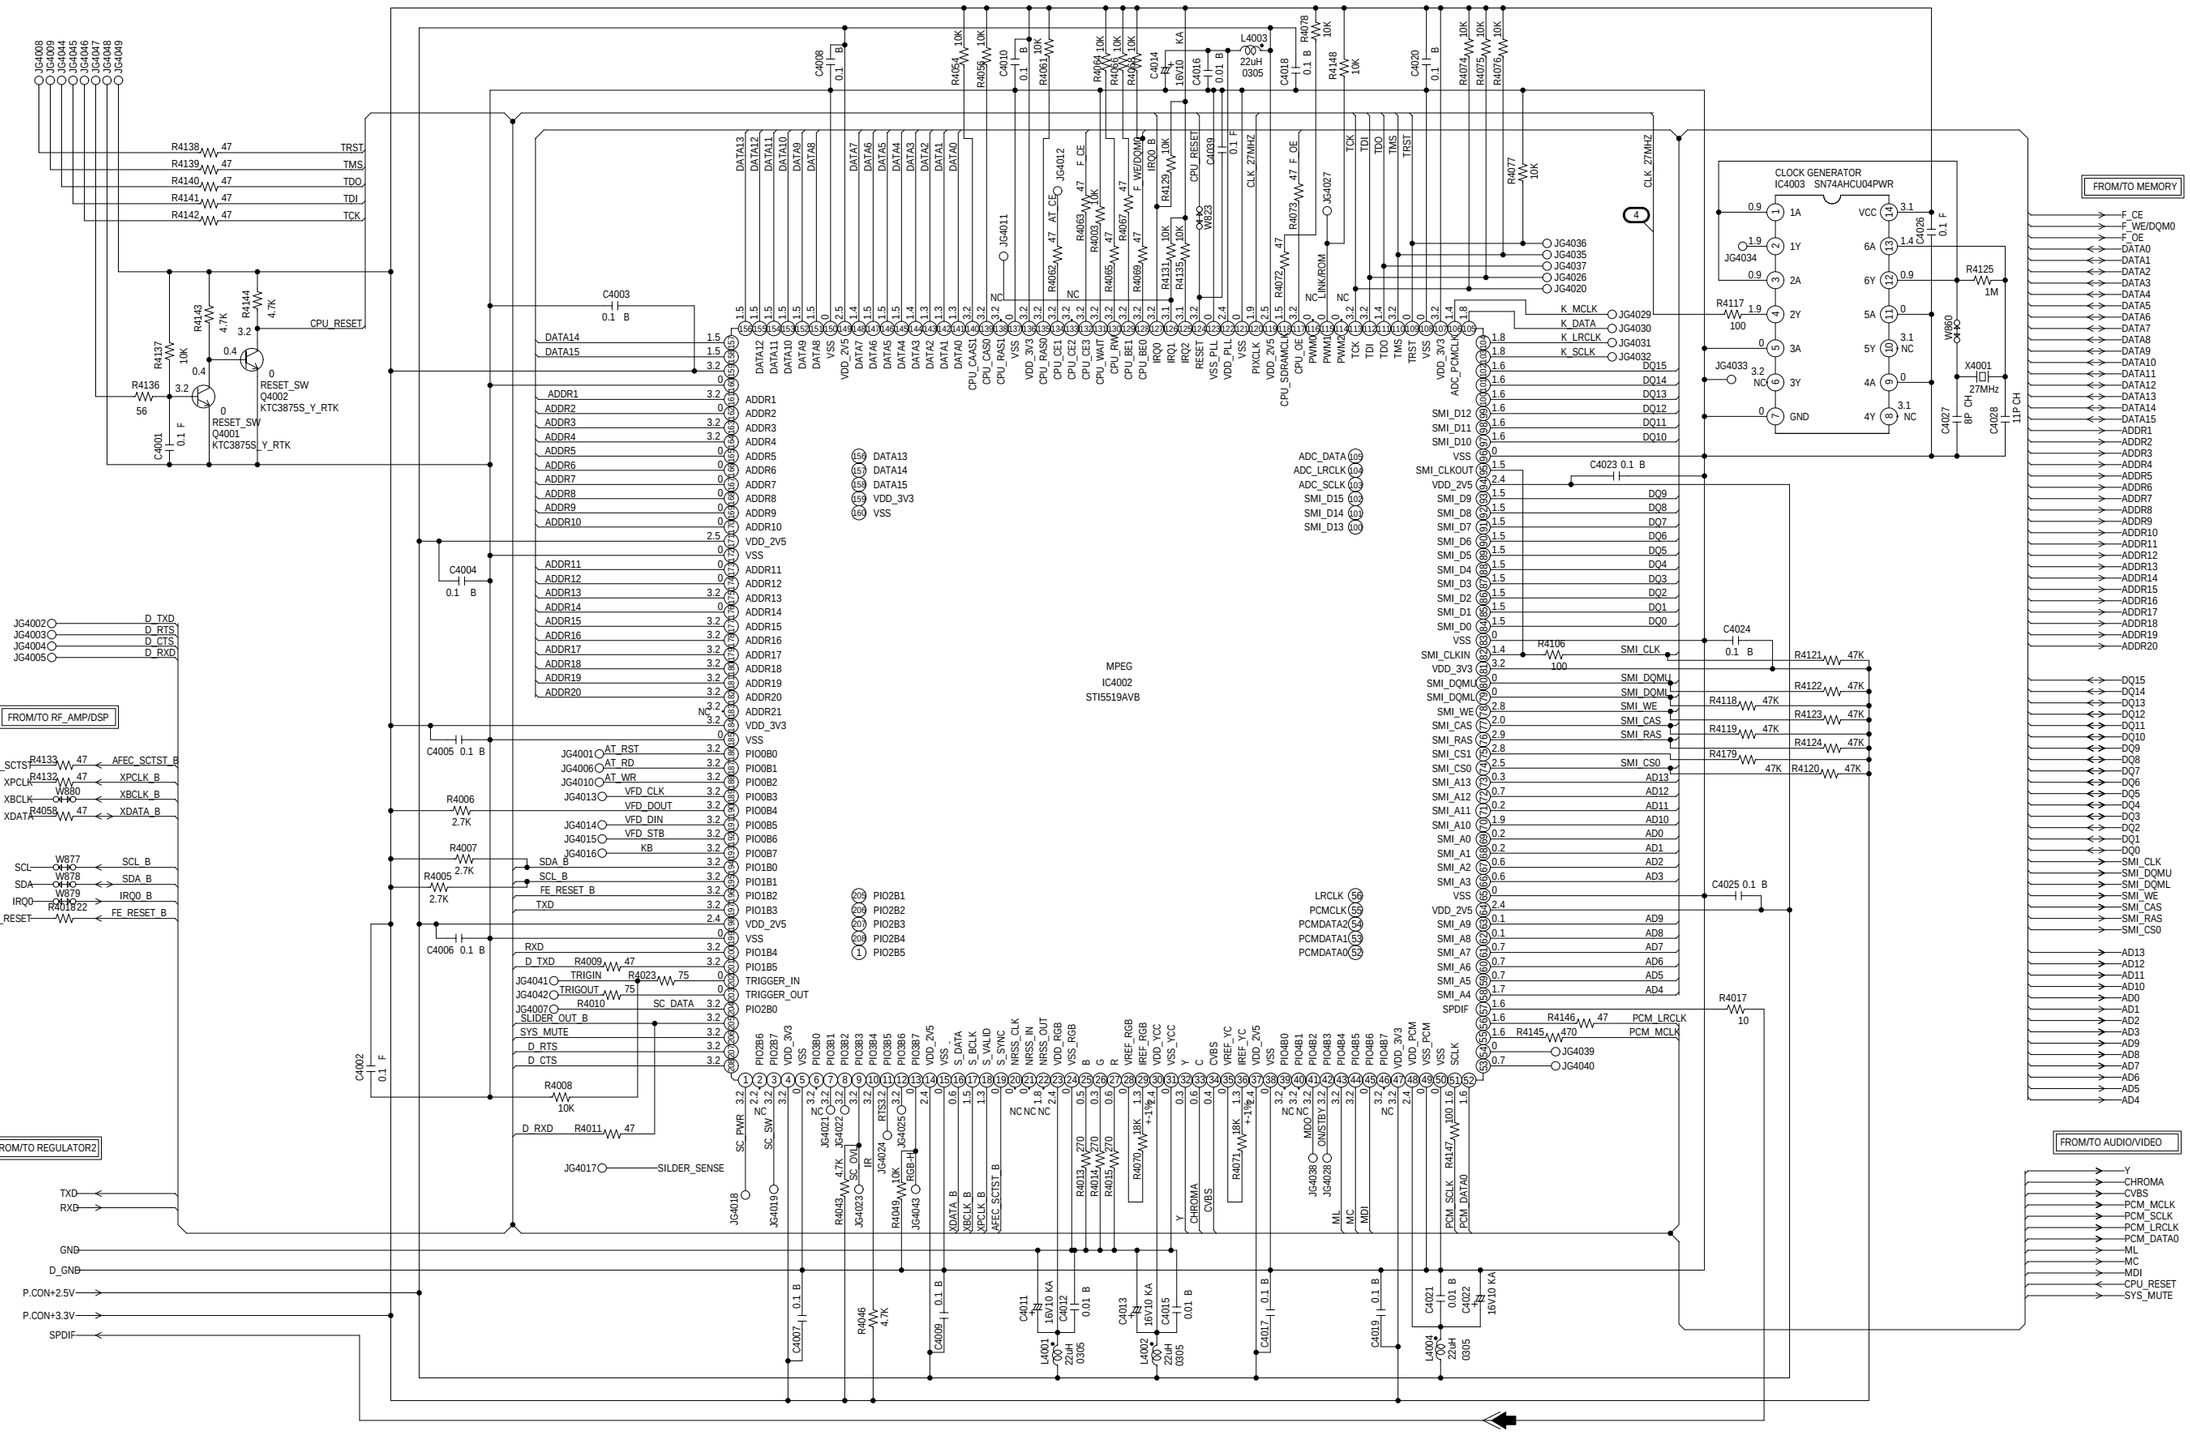

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

DIGITAL AUDIO SIGNAL(PB)

MEMORY SCHEMATIC DIAGRAM

(DVD PCB)

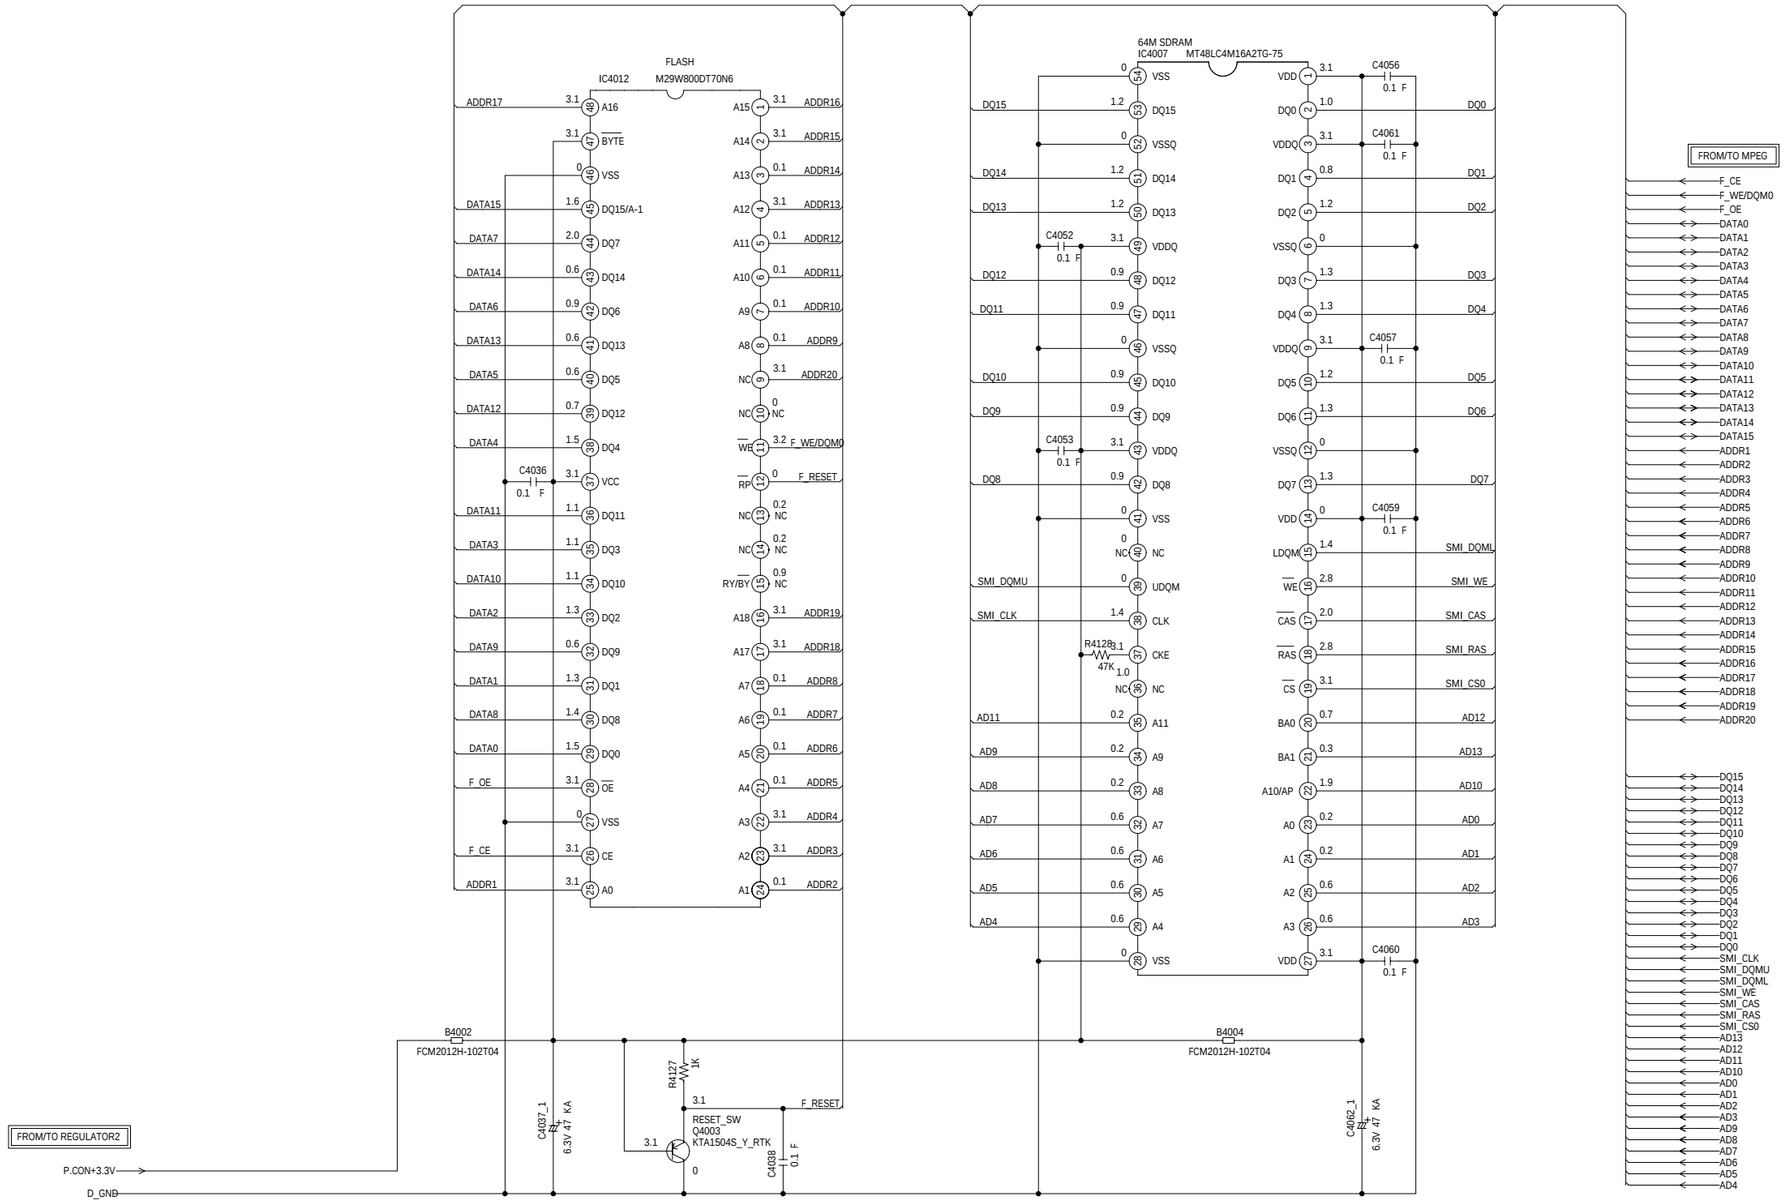

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB130
VMB283

AUDIO/VIDEO SCHEMATIC DIAGRAM

(DVD PCB)

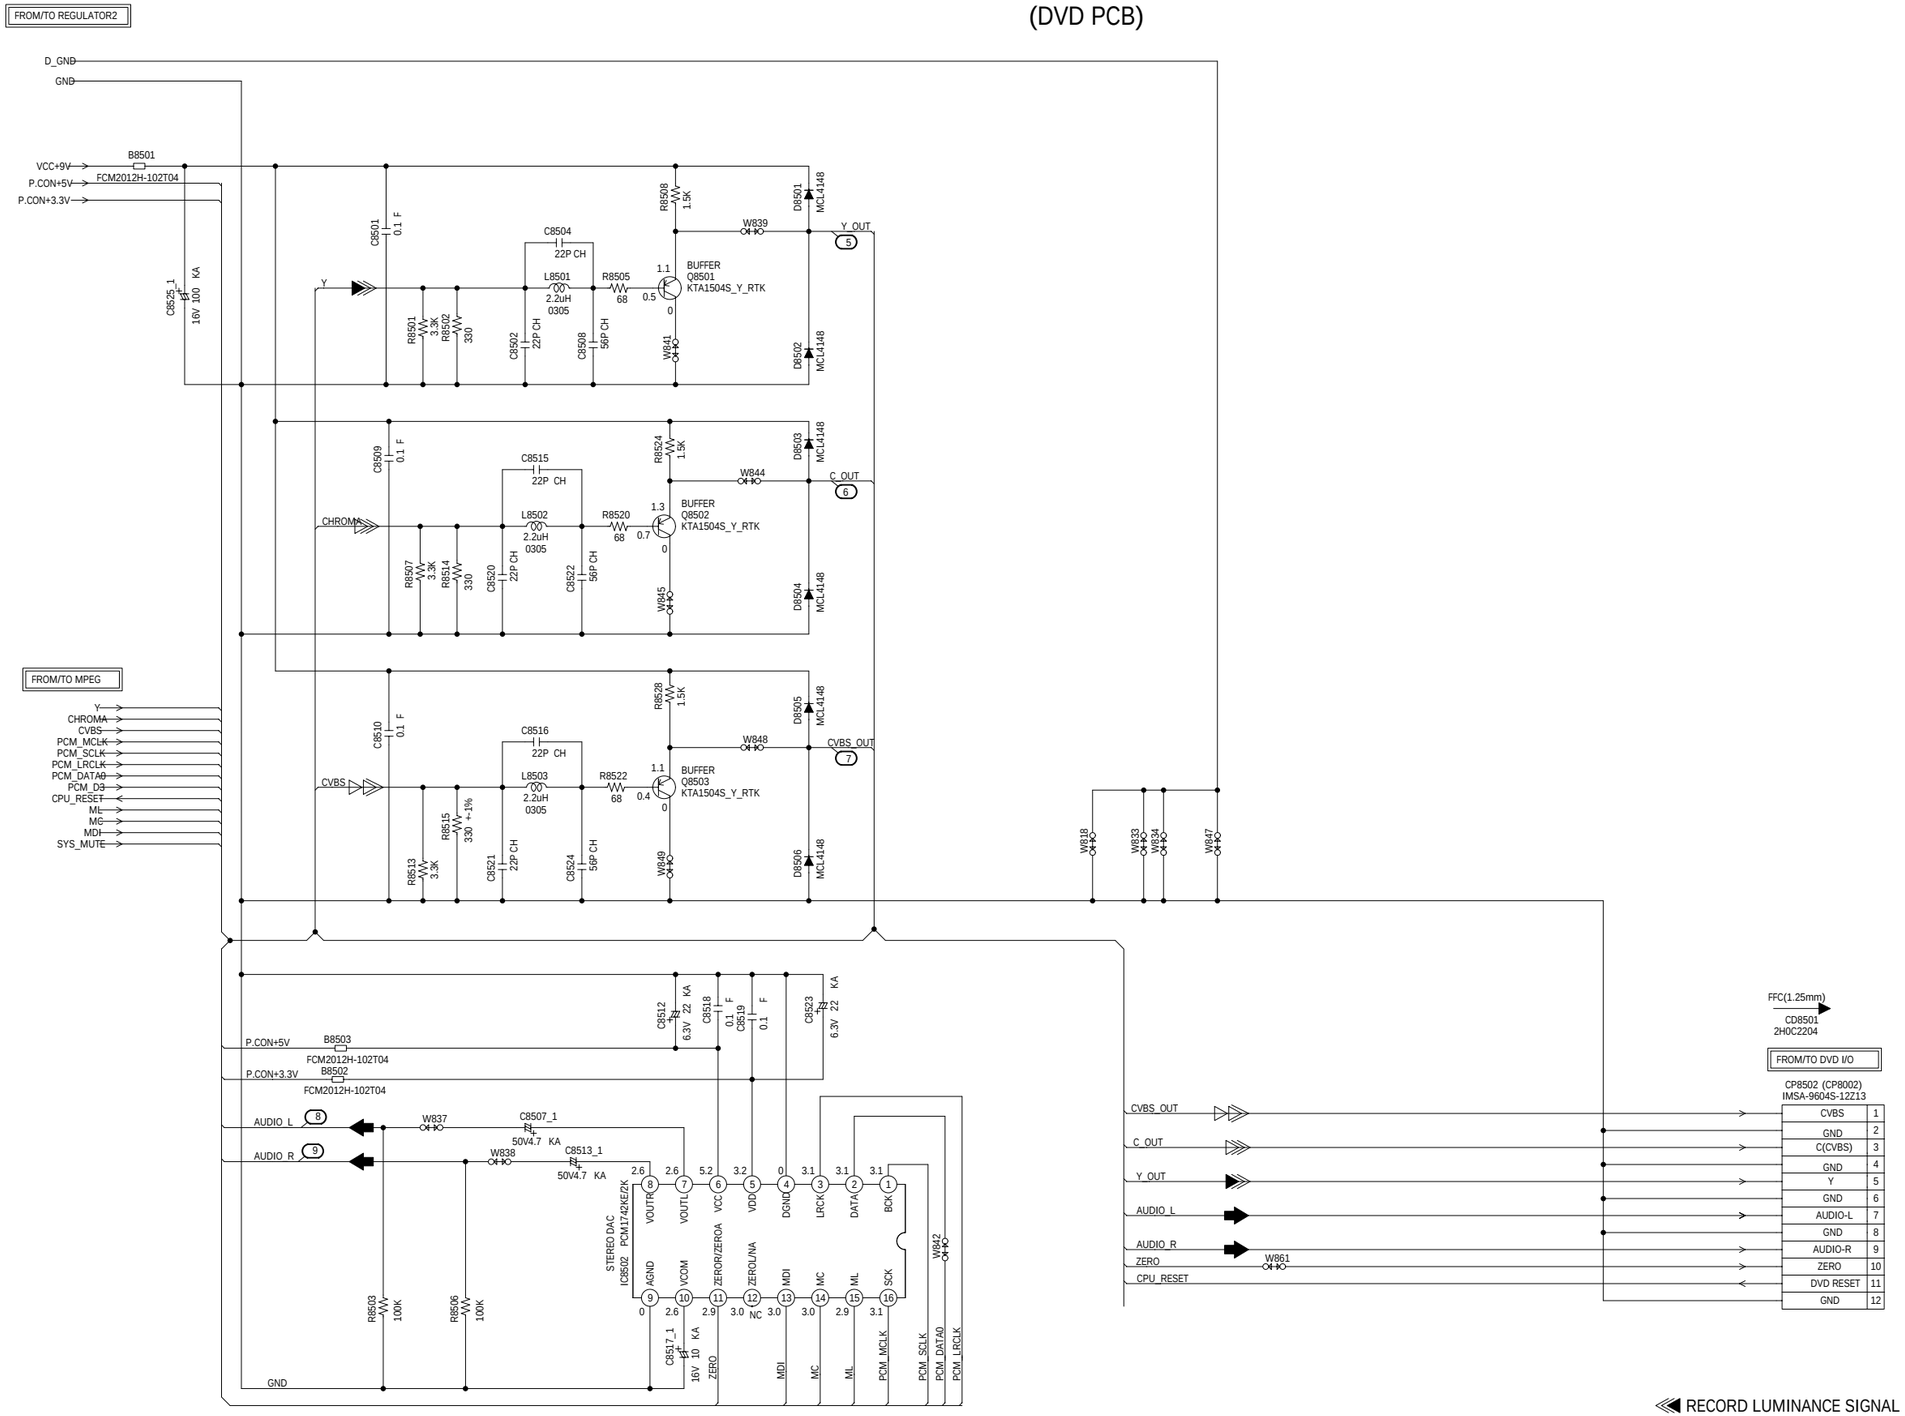

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

REGULATOR2 SCHEMATIC DIAGRAM

(DVD PCB)

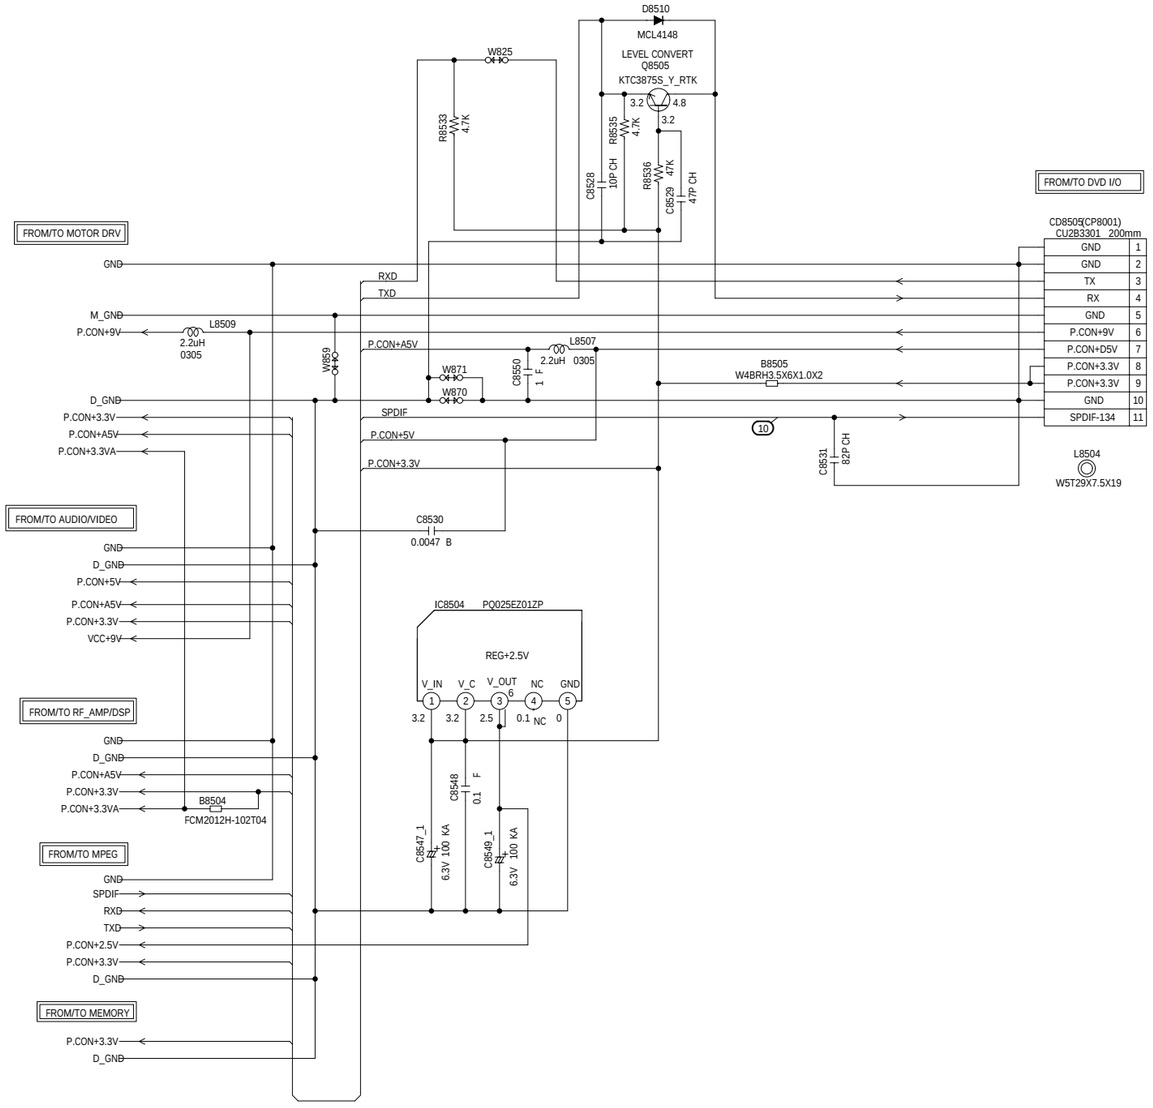

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB130
VMB283

Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM

(VCR PCB)

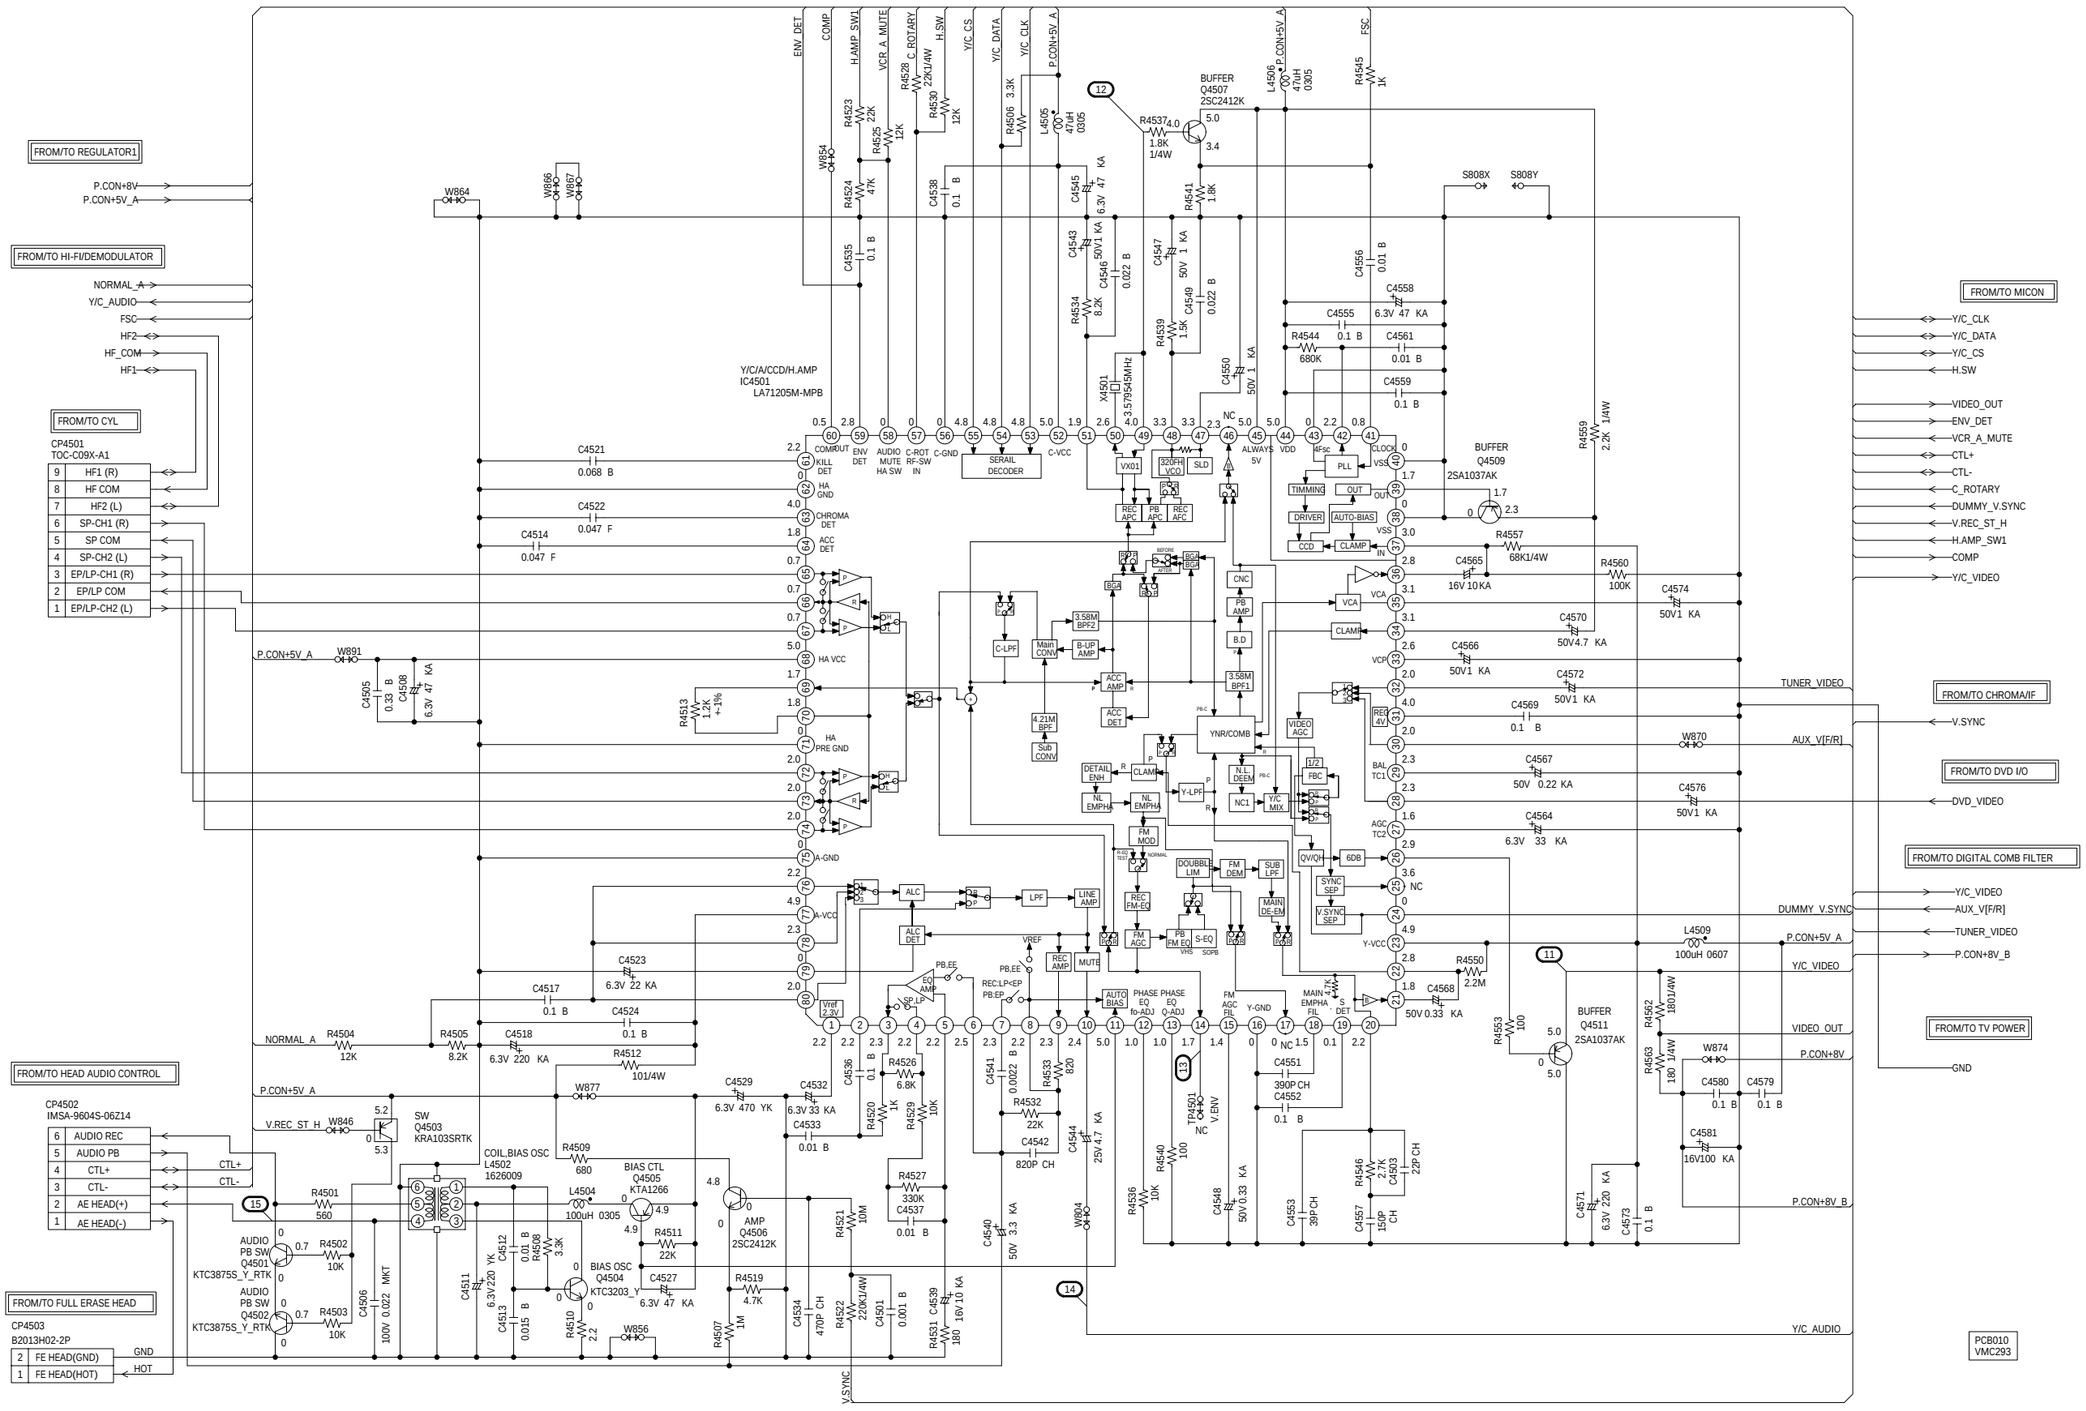

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR



MICON SCHEMATIC DIAGRAM (VCR PCB)

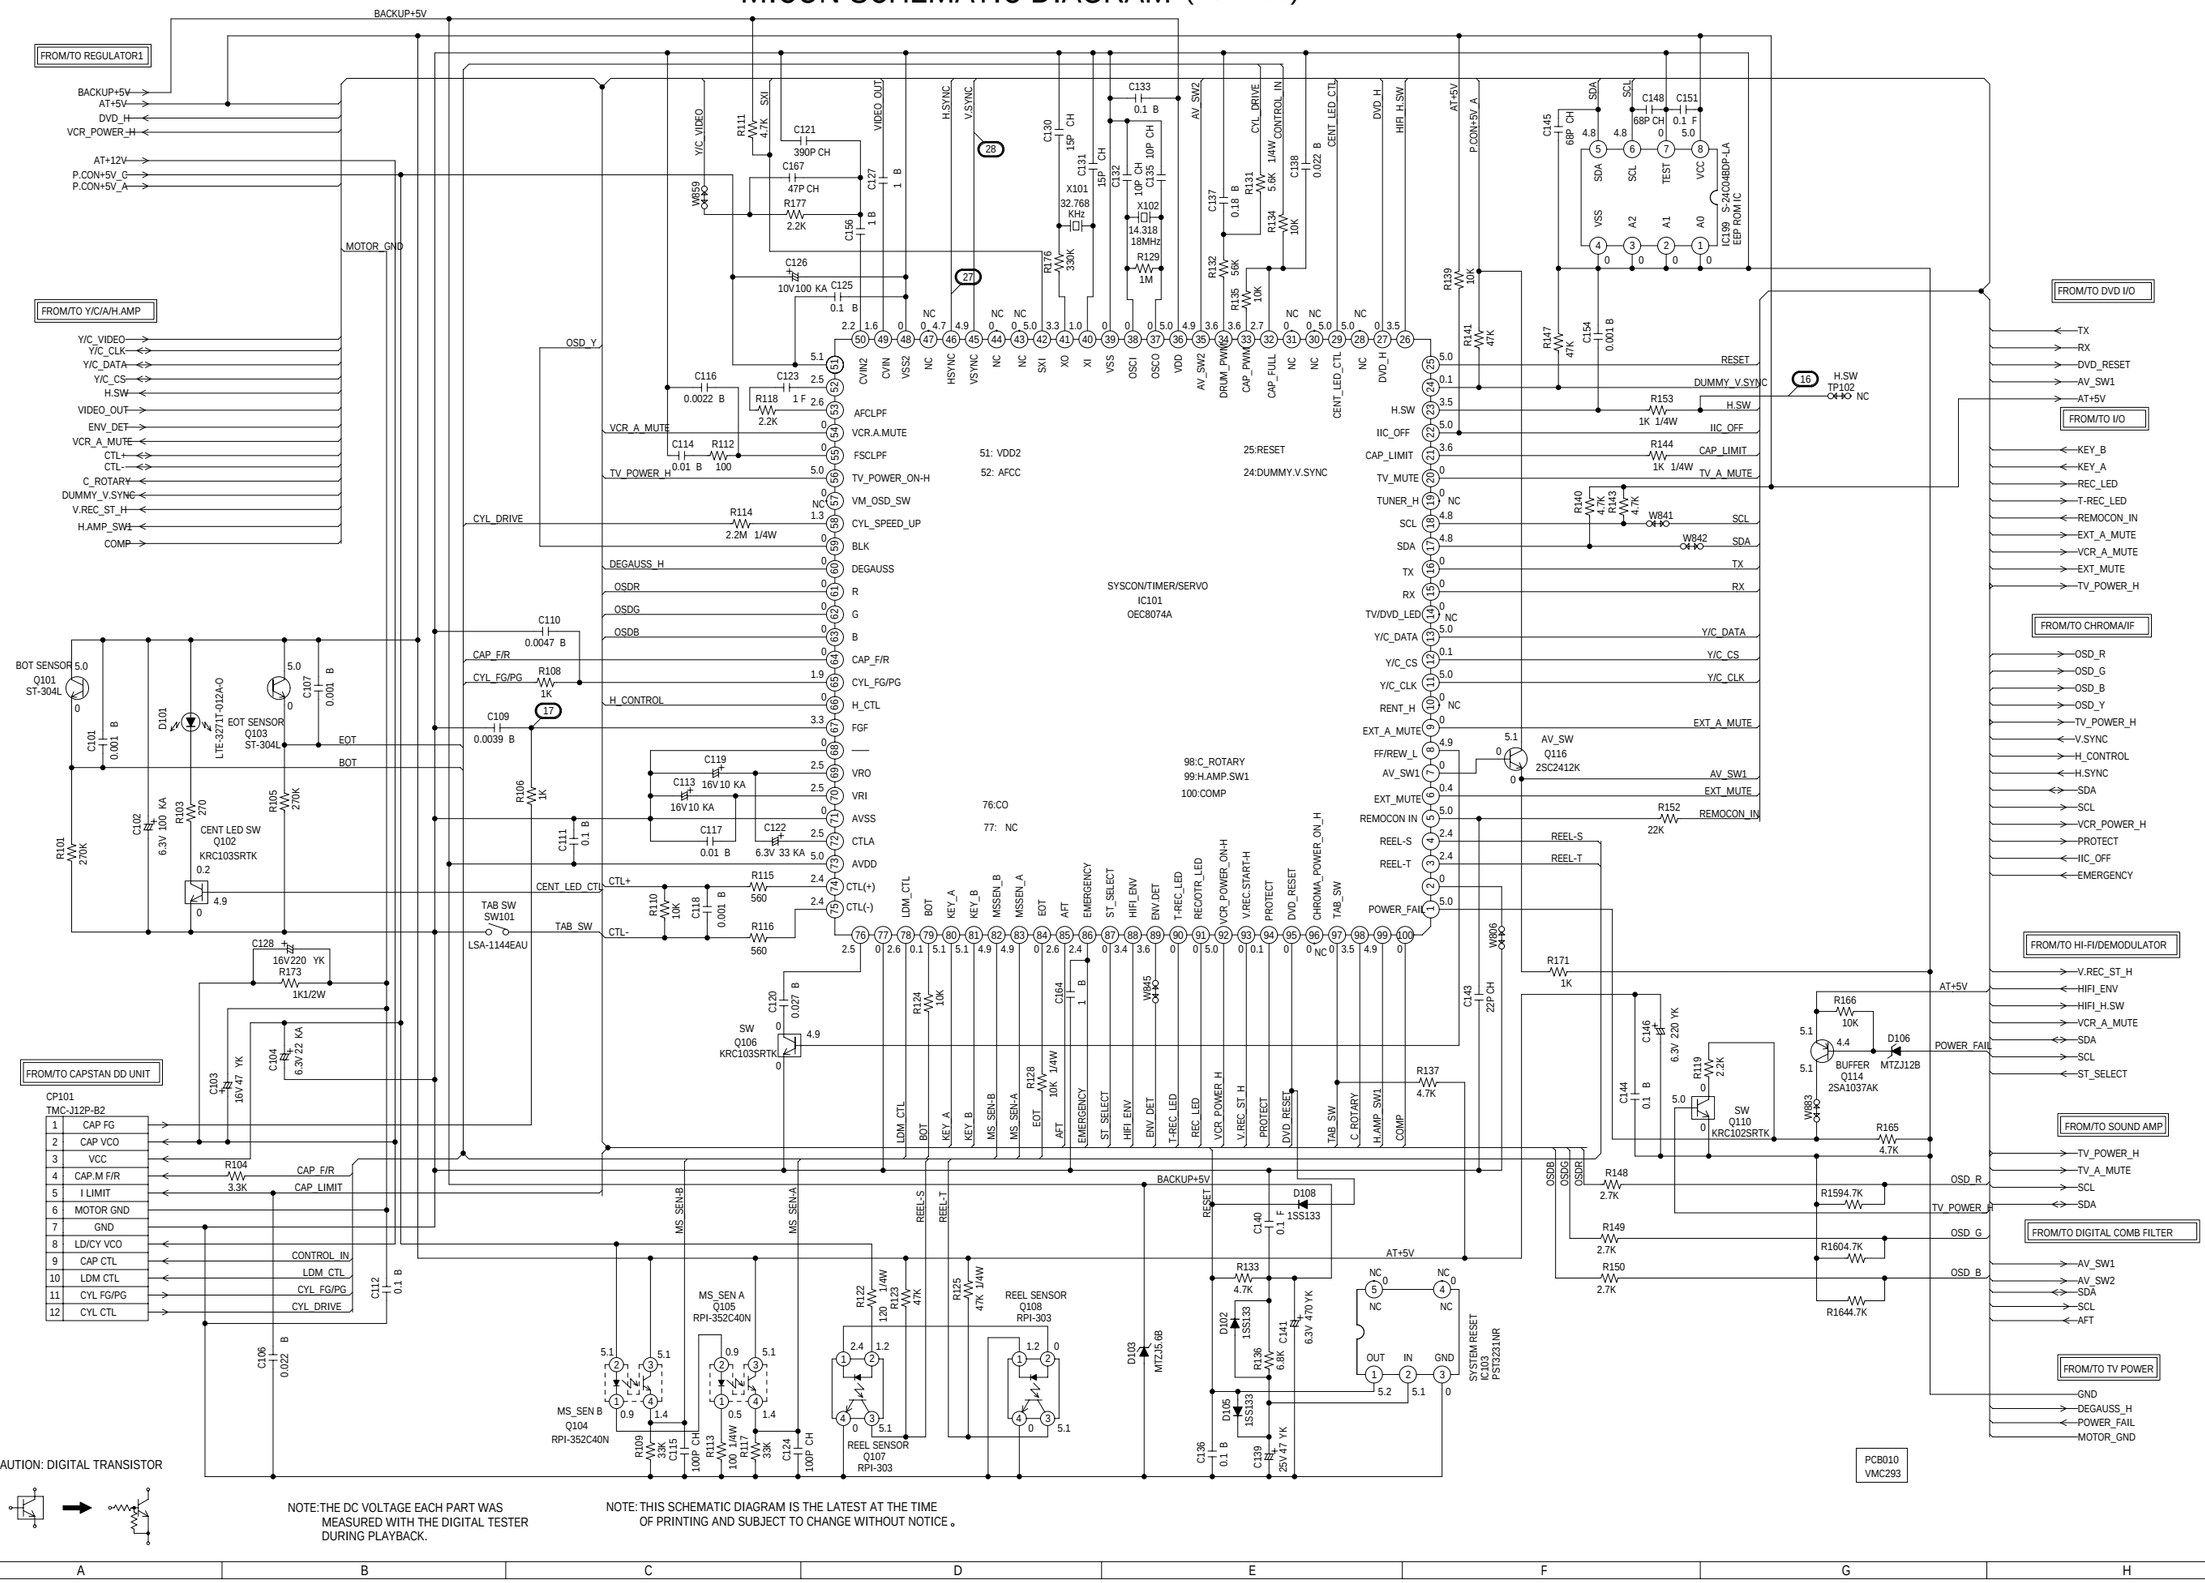

IN/OUT SCHEMATIC DIAGRAM

(VCR PCB)

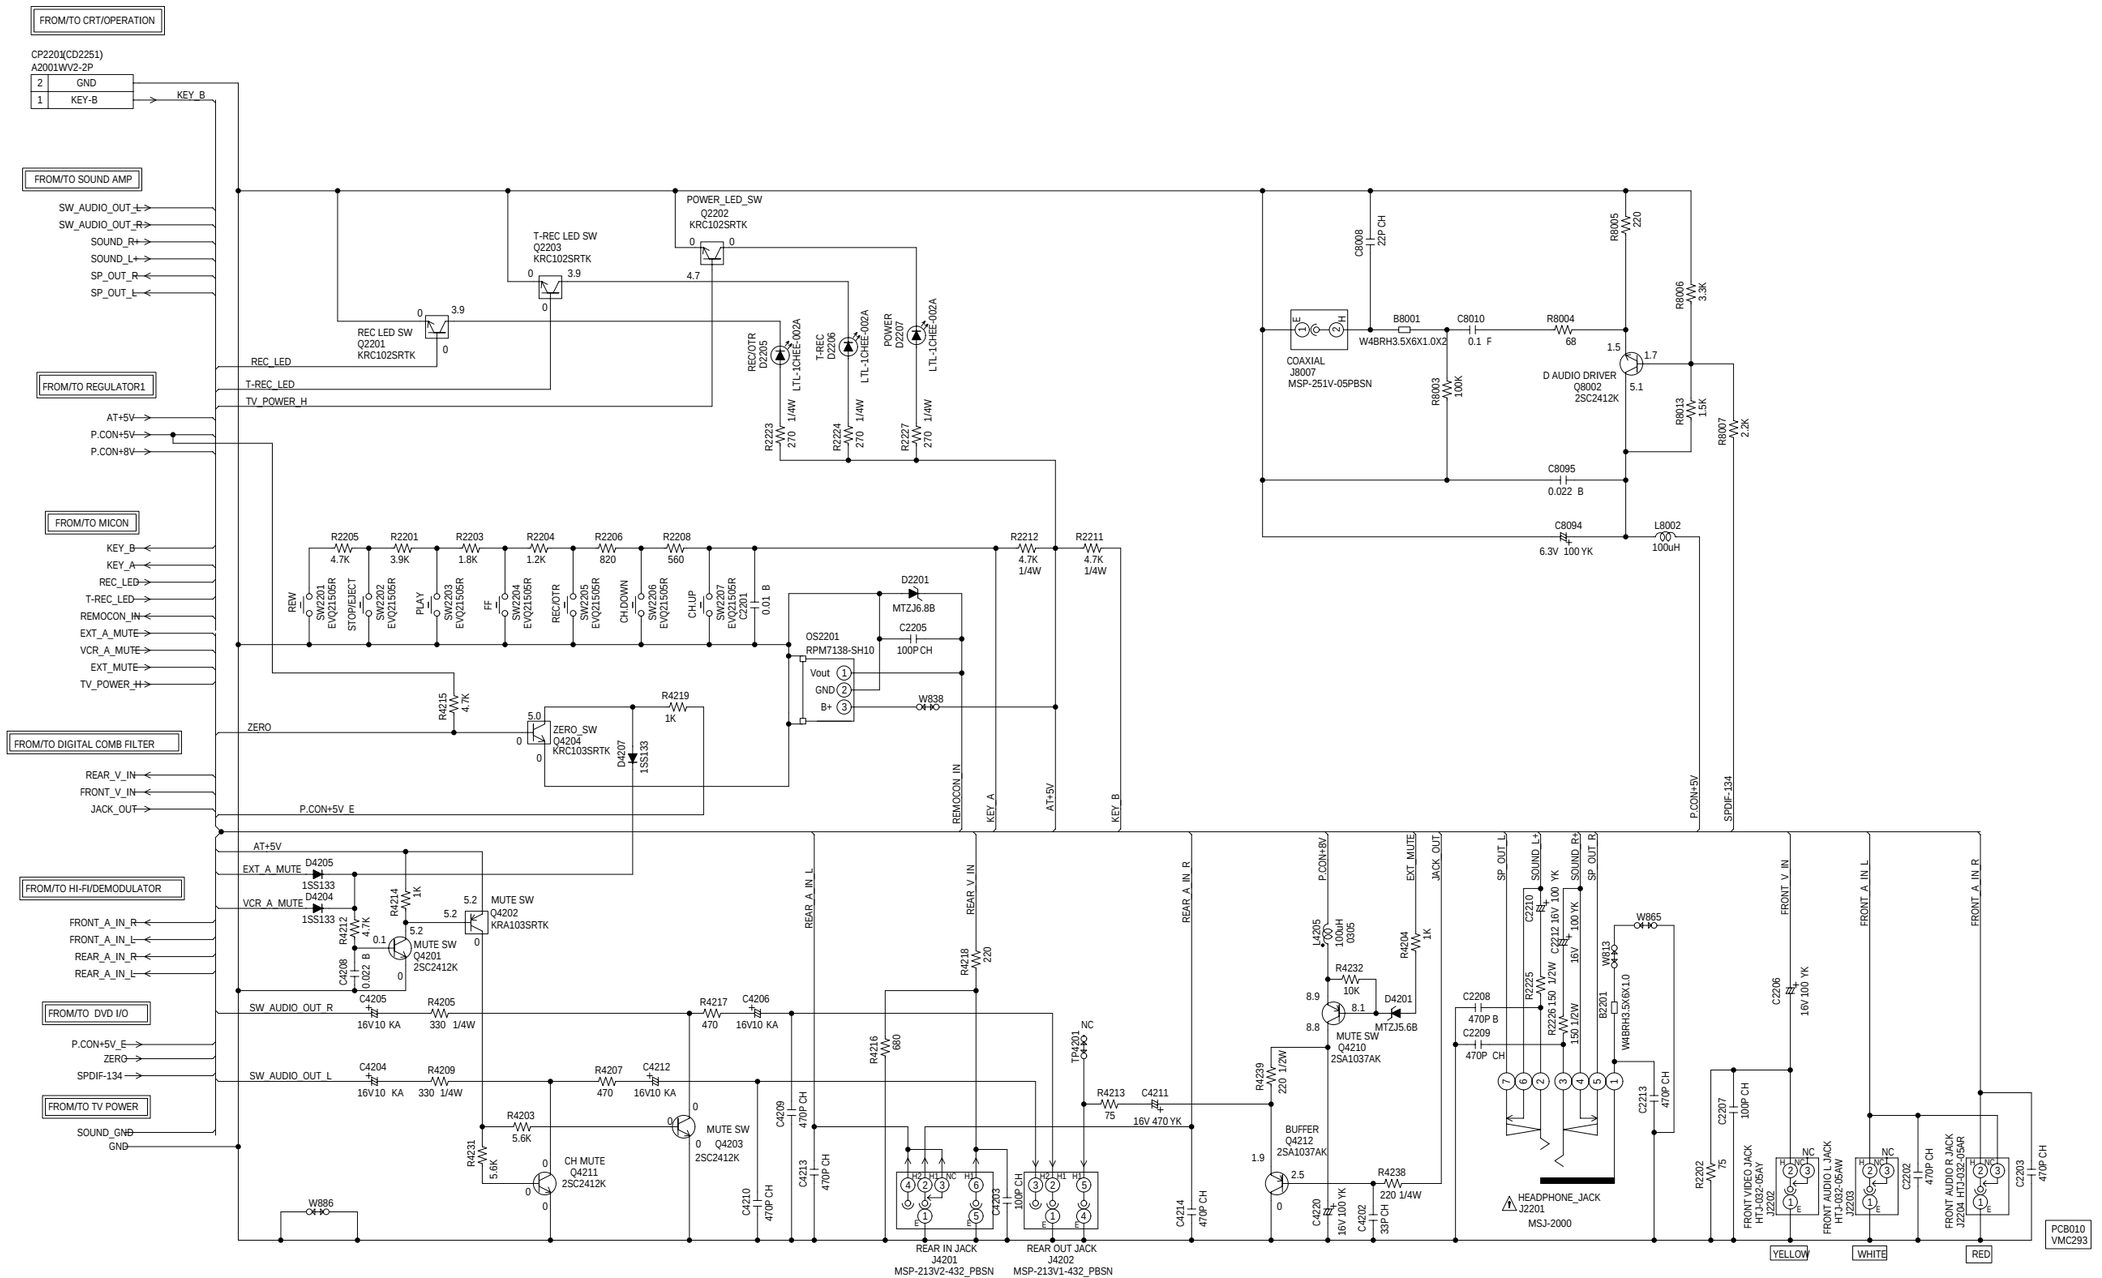

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR



CHROMA/IF SCHEMATIC DIAGRAM
(VCR PCB)

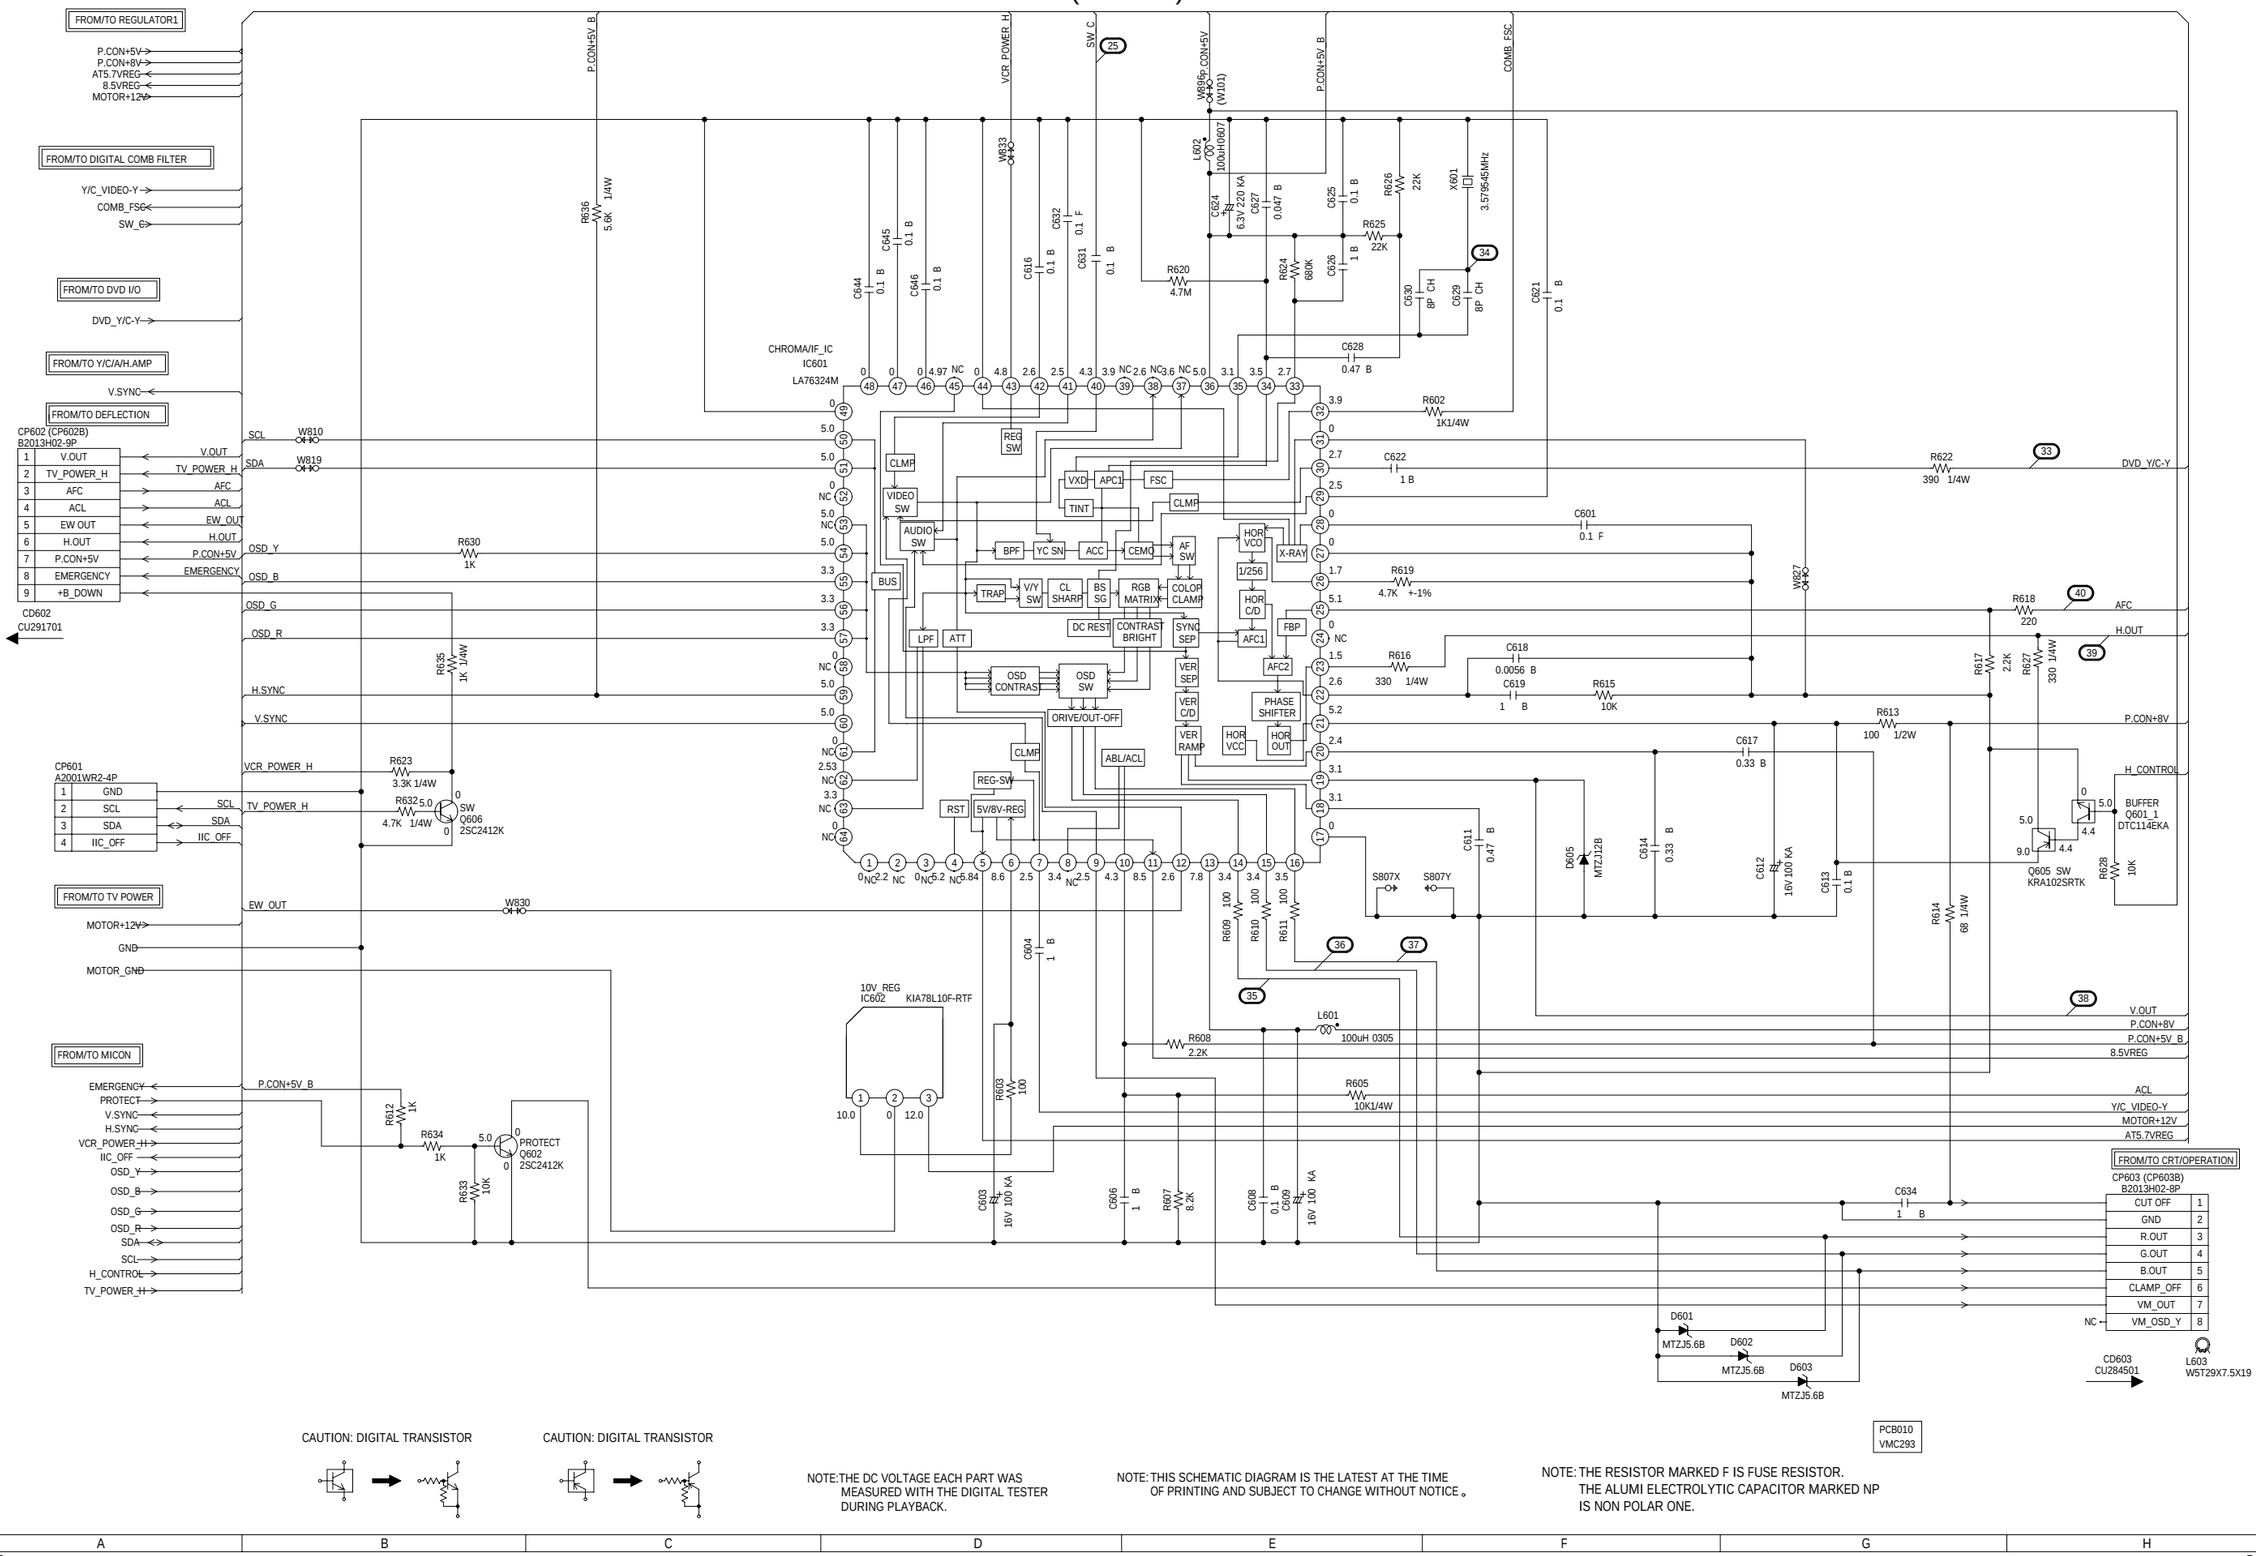

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

SOUND AMP/SURROUND SCHEMATIC DIAGRAM

(VCR PCB)

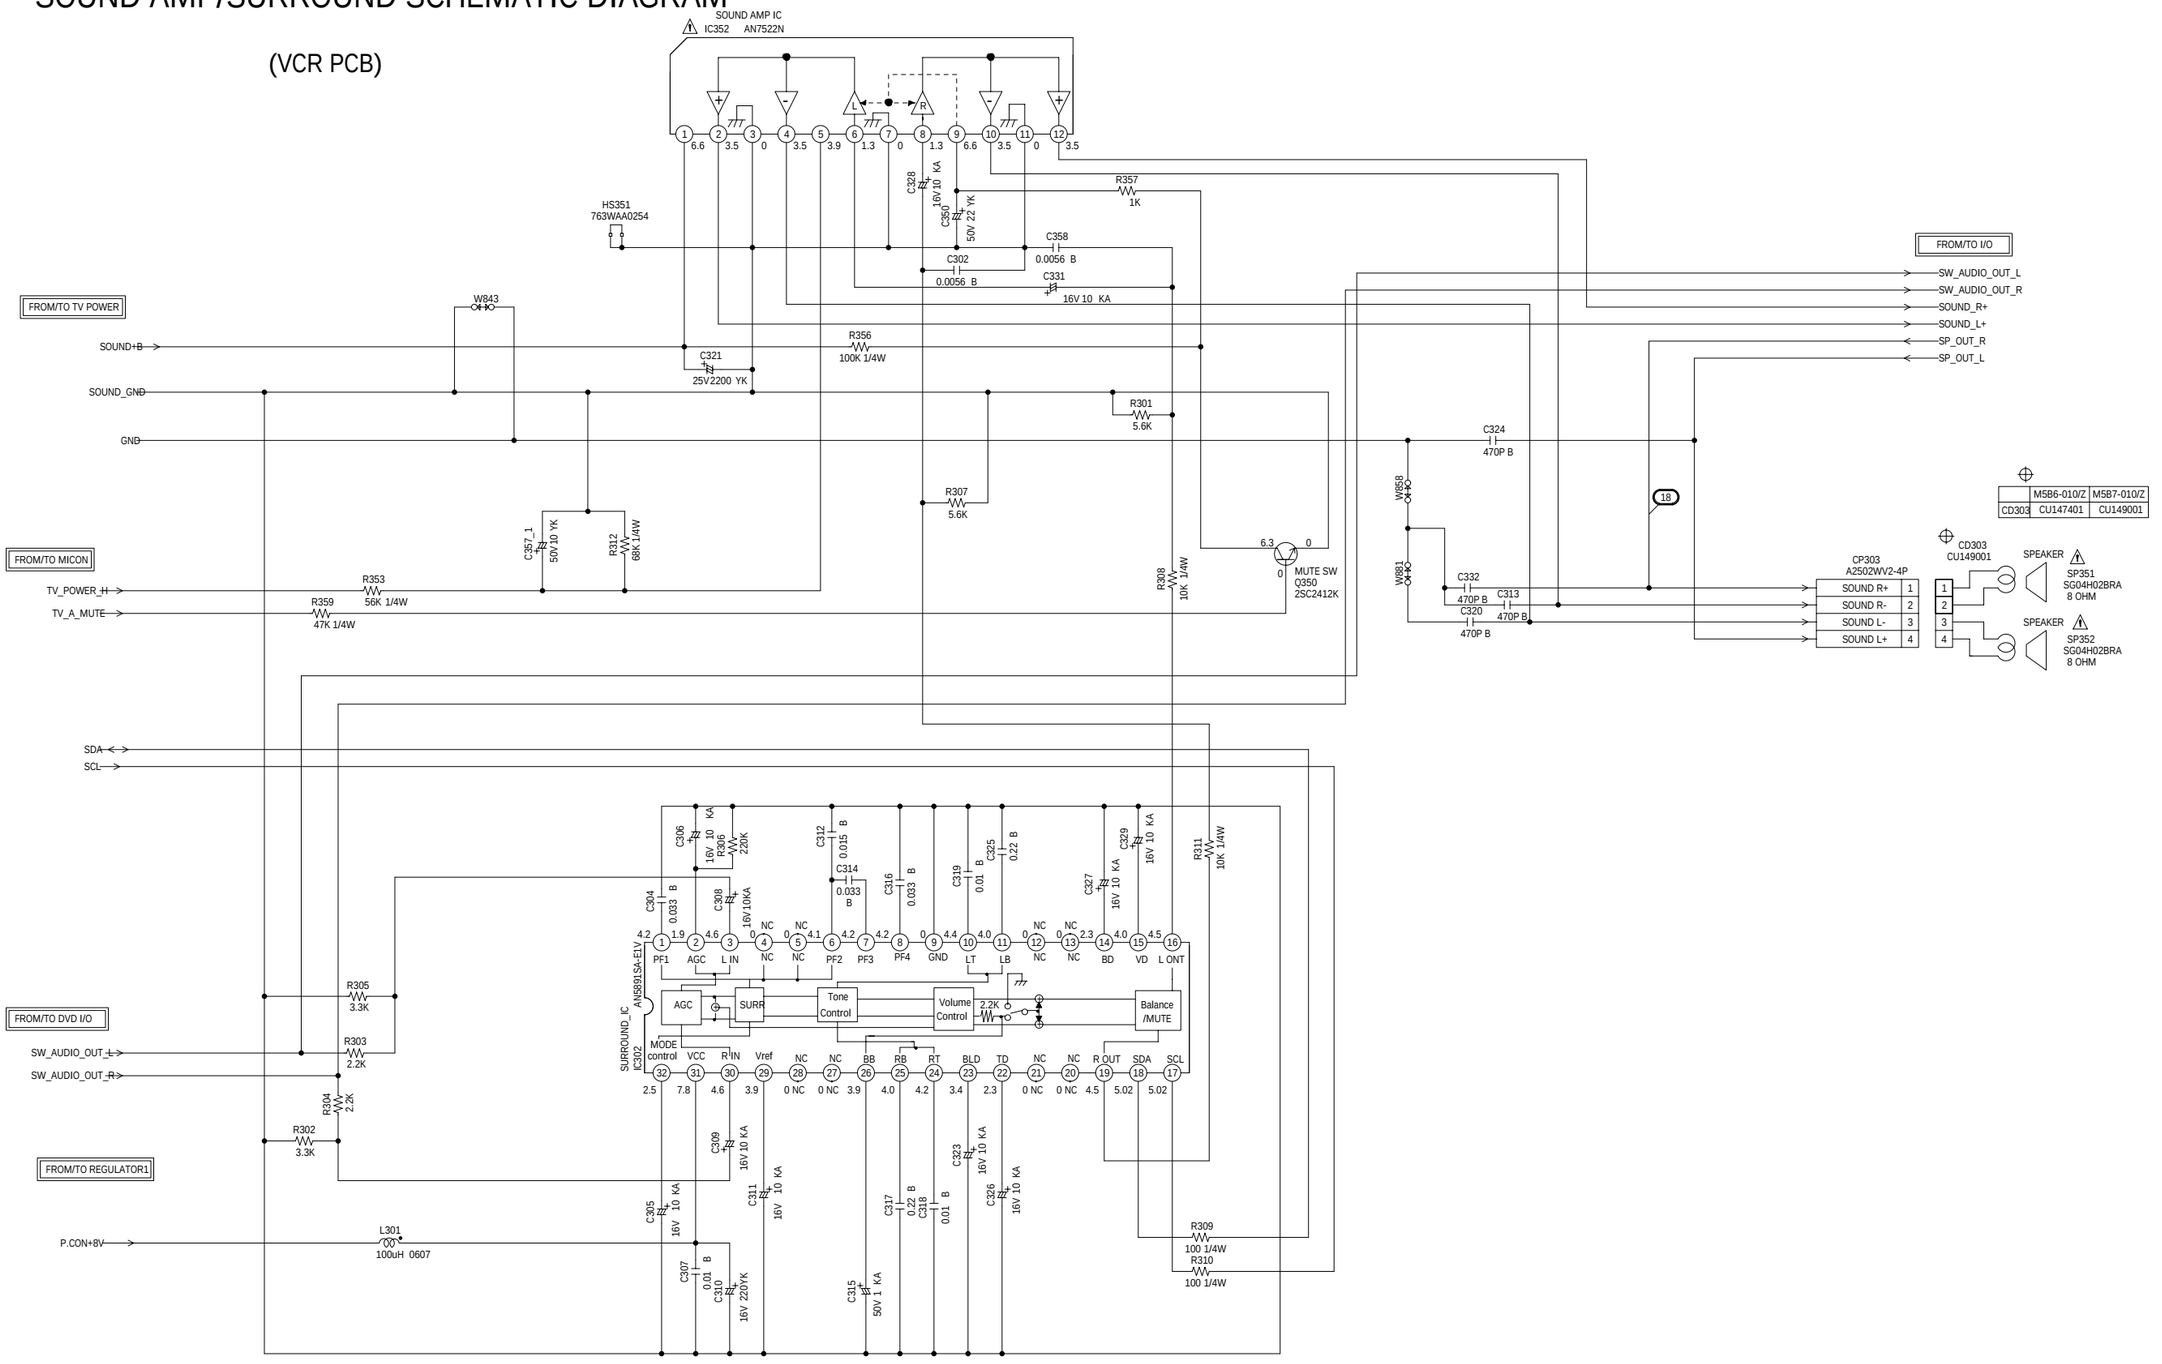

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

Hi-Fi/DEMODULATOR SCHEMATIC DIAGRAM

(VCR PCB)

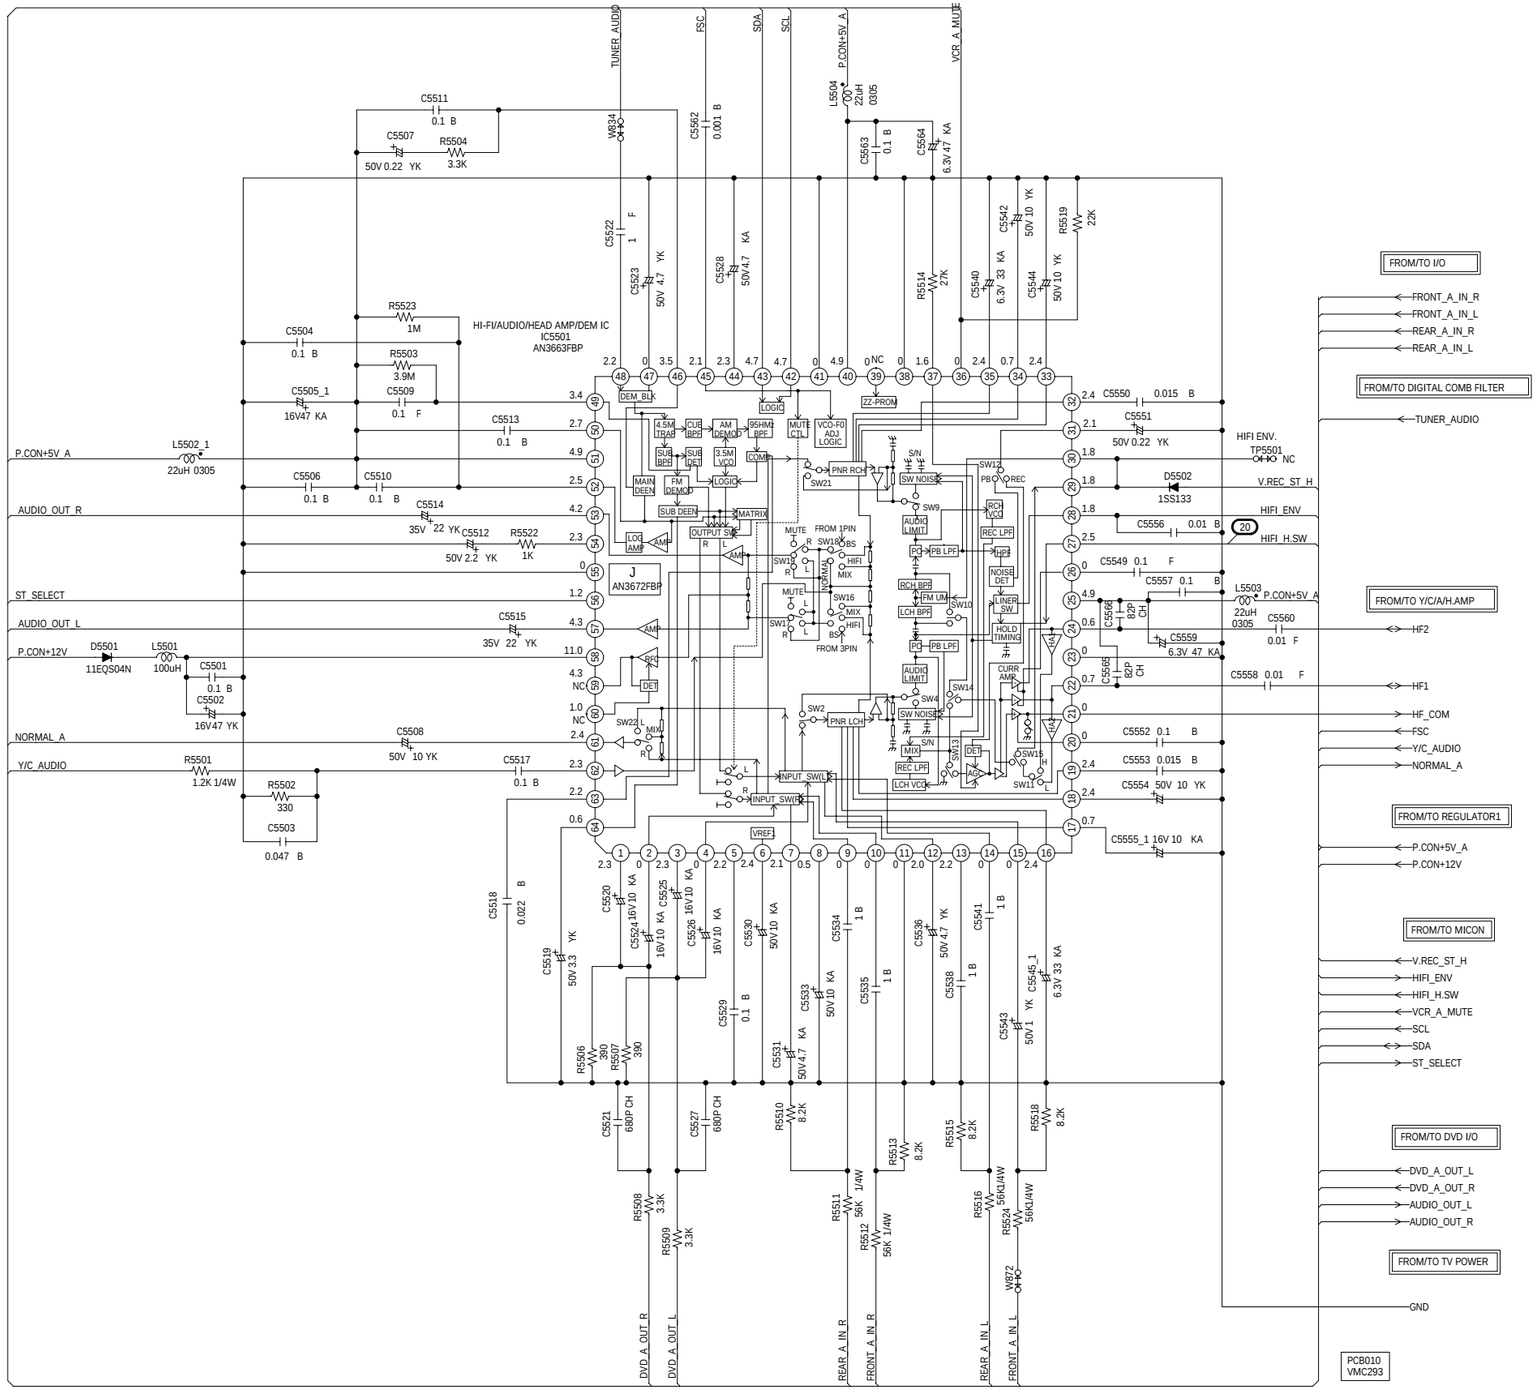

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

DIGITAL COMB FILTER SCHEMATIC DIAGRAM

(VCR PCB)

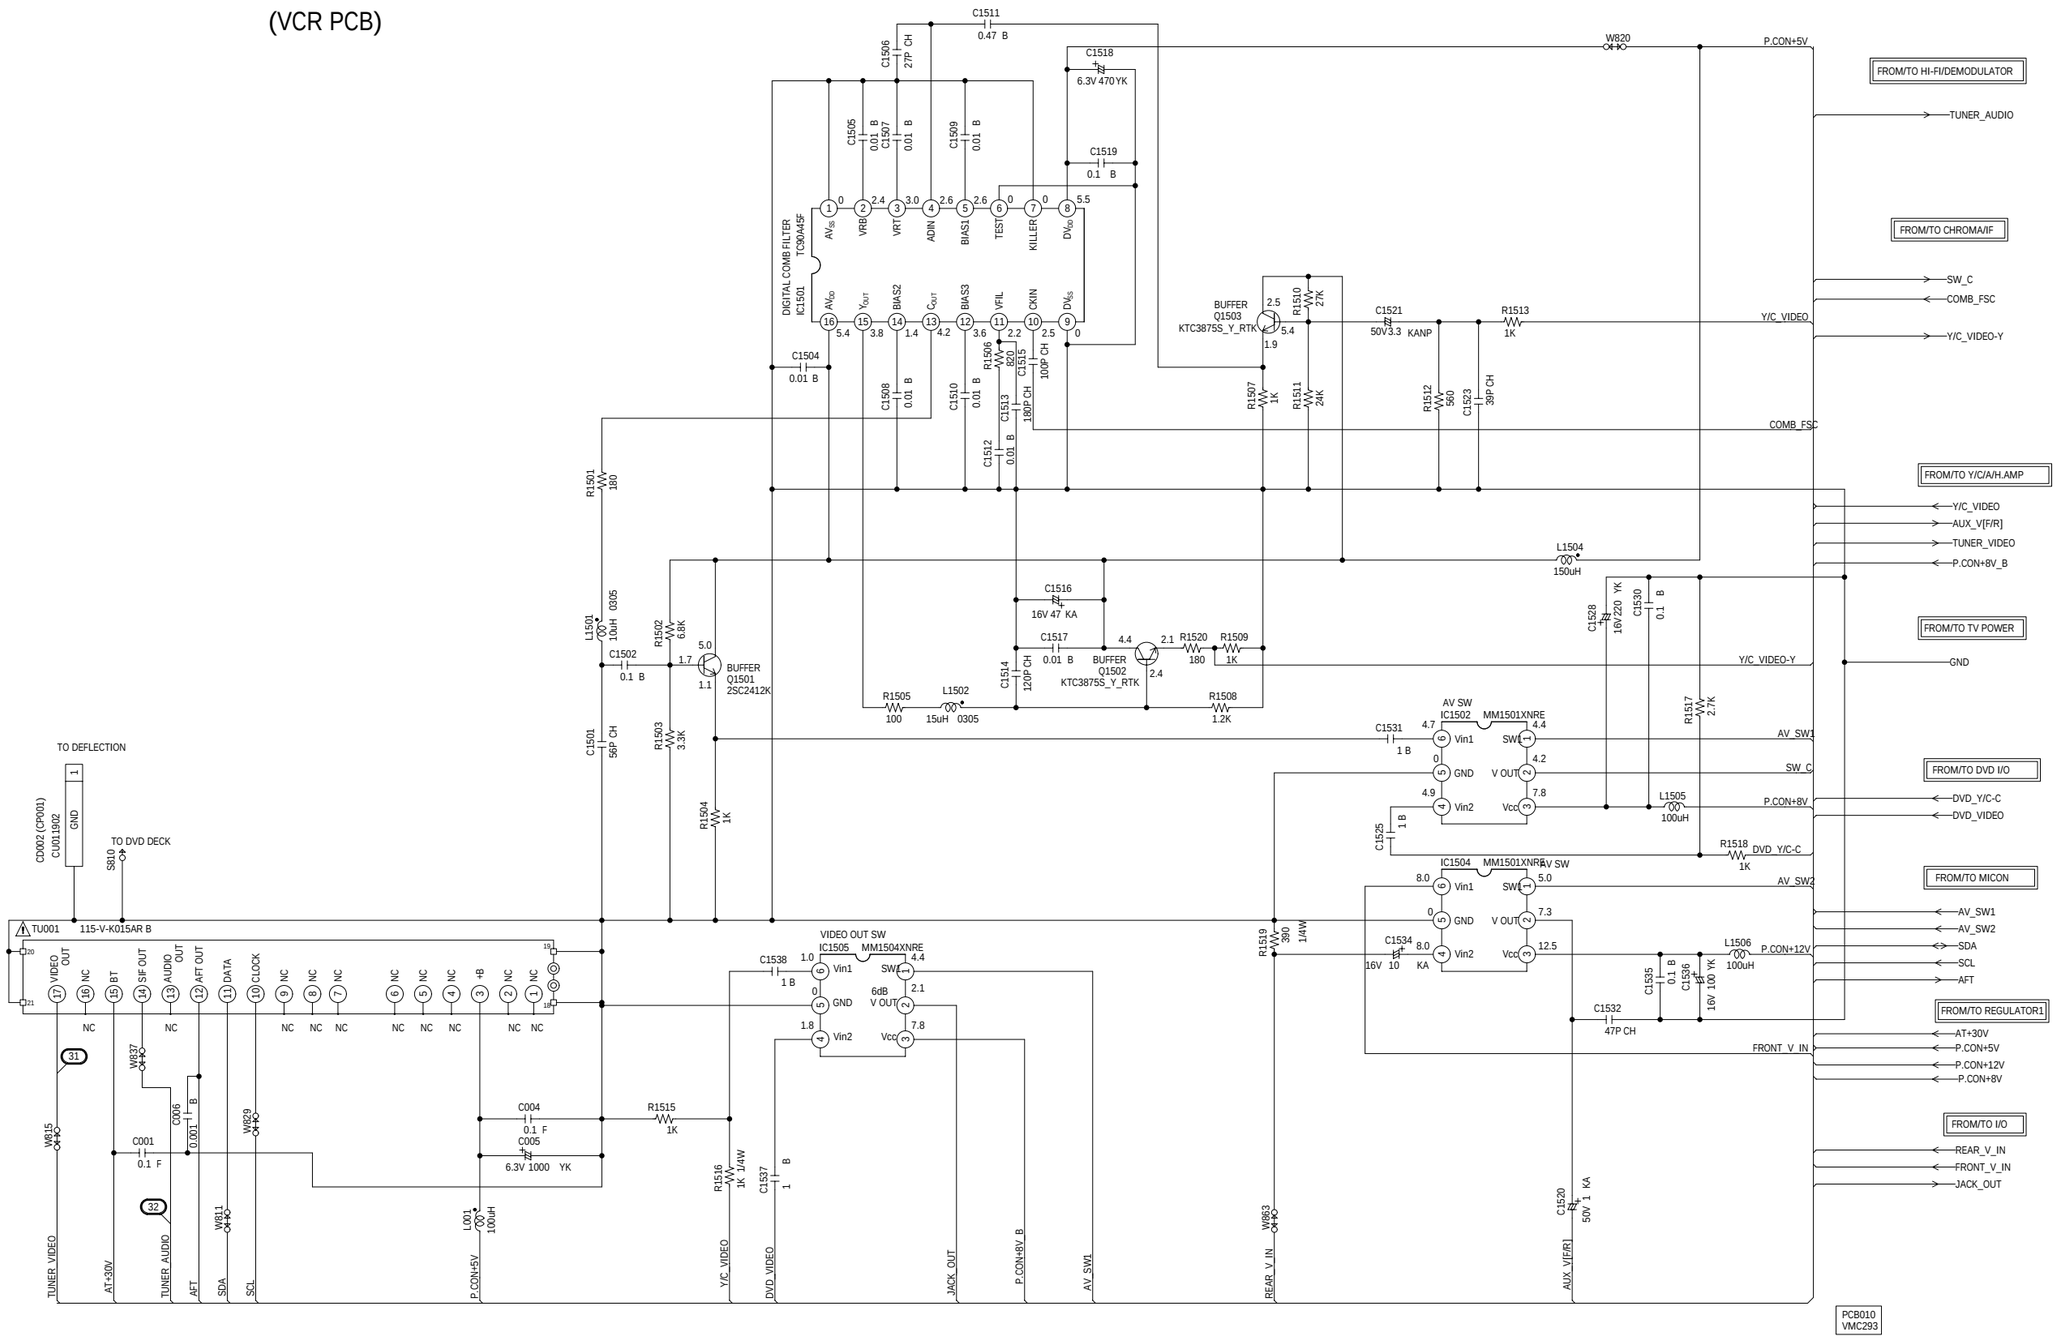

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

DVD IN/OUT SCHEMATIC DIAGRAM

(VCR PCB)

FROM/TO REGULATOR2

CP8001 (CD8505)
A2001WV2-11P

1	GND
2	GND
3	TX
4	RX
5	GND
6	P.CON+9V
7	P.CON+D5V
8	P.CON+3.3V
9	P.CON+3.3V
10	GND
11	SPDIF-134

W844 TX
W816 RX
C8019 56P CH
P.CON+9V_DH
P.CON+5V_D
P.CON+3.3V
SPDIF-134
C8017 0.01 B
S801X S801Y
R8001 4.7K

FROM/TO AUDIO/VIDEO

CP8002 (CP8502)
IMSA-9604S-12Z14

12	CVBS
11	GND
10	C(CVBS)
9	GND
8	Y
7	GND
6	AUDIO-L
5	GND
4	AUDIO-R
3	ZERO
2	DVD RESET
1	GND

W887 DVD_VIDEO
DVD_Y/C-C
DVD_Y/C-Y
ZERO
DVD_RESET
C8020 100P CH
C8044 0.1 B
S809X S809Y

ZERO MUTE SW
Q8007
KRC103SRTK
ZERO MUTE SW
Q8006
2SC2412K
R8012 4.7K 1/4W

P.CON+12V
R8022 10 1/4W
C8090 0.1 F
C8002 16V220 YK
C8005 50V2.2 KA
C8070 820P CH
R8054 8.2K
R8056 3.9K
R8023 10K
R8049 10K
C8081 100P CH
R8051 12K
C8004 16V22 KA
W851
R8027 1K
R8020 4.7K
C8023 50V2.2 NA
R8024 100K1/4W
R8021 4.7K
C8022 50V2.2 NA
R8025 100K1/4W
C8064 820P CH
R8047 1K
C8065 10V 33 KA
R8026 10K
C8025 820P CH
C8077 820P CH
R8048 10K
C8079 100P CH
R8050 12K
R8052 8.2K
R8053 3.9K
C8102 50V 2.2 KA
C8003 16V22 KA
W850

AUDIO SW
IC8001 MM1501XNRE
AUDIO SW
IC8002 MM1501XNRE
IC8004 NJM4580M
MIXER
A_GND
VCC

C8001 16V10 KA
C8009 16V10 KA
C8006 16V10 KA
C8007 16V10 KA
C8012 0.1 B
C8013 16V100 YK
C8014 0.1 B
C8015 16V100 KA
L8001 100uH 0305
L8003 100uH 0305

AV_SW1
AUDIO_OUT_L
AUDIO_OUT_R
SW_AUDIO_OUT_L
SW_AUDIO_OUT_R
P.CON+12V
AT+5V
P.CON+5V_E
DVD_A_OUT_L
DVD_A_OUT_R

FROM/TO SOUND AMP
SW_AUDIO_OUT_L
SW_AUDIO_OUT_R

FROM/TO I/O
ZERO
SPDIF-134
P.CON+5V_E

FROM/TO DIGITAL COMB FILTER
DVD_Y/C-C
DVD_VIDEO

FROM/TO CHROMA/IF
DVD_Y/C-Y

FROM/TO MICON
TX
RX
DVD_RESET
AT+5V
AV_SW1

FROM/TO TV POWER
GND

FROM/TO REGULATOR1
P.CON+3.3V
P.CON+5V_D
P.CON+12V
P.CON+9V_DH
AT+5V

FROM/TO Y/C/A/H.AMP
DVD_VIDEO

FROM/TO HI-FI/DEMODULATOR
DVD_A_OUT_L
DVD_A_OUT_R
AUDIO_OUT_L
AUDIO_OUT_R

29
30

PCB010
VMC293

CAUTION: DIGITAL TRANSISTOR



NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP
IS NON POLAR ONE.

NOTE: THE DC VOLTAGE EACH PART WAS
MEASURED WITH THE DIGITAL TESTER
DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

REGULATOR SCHEMATIC DIAGRAM

(VCR PCB)

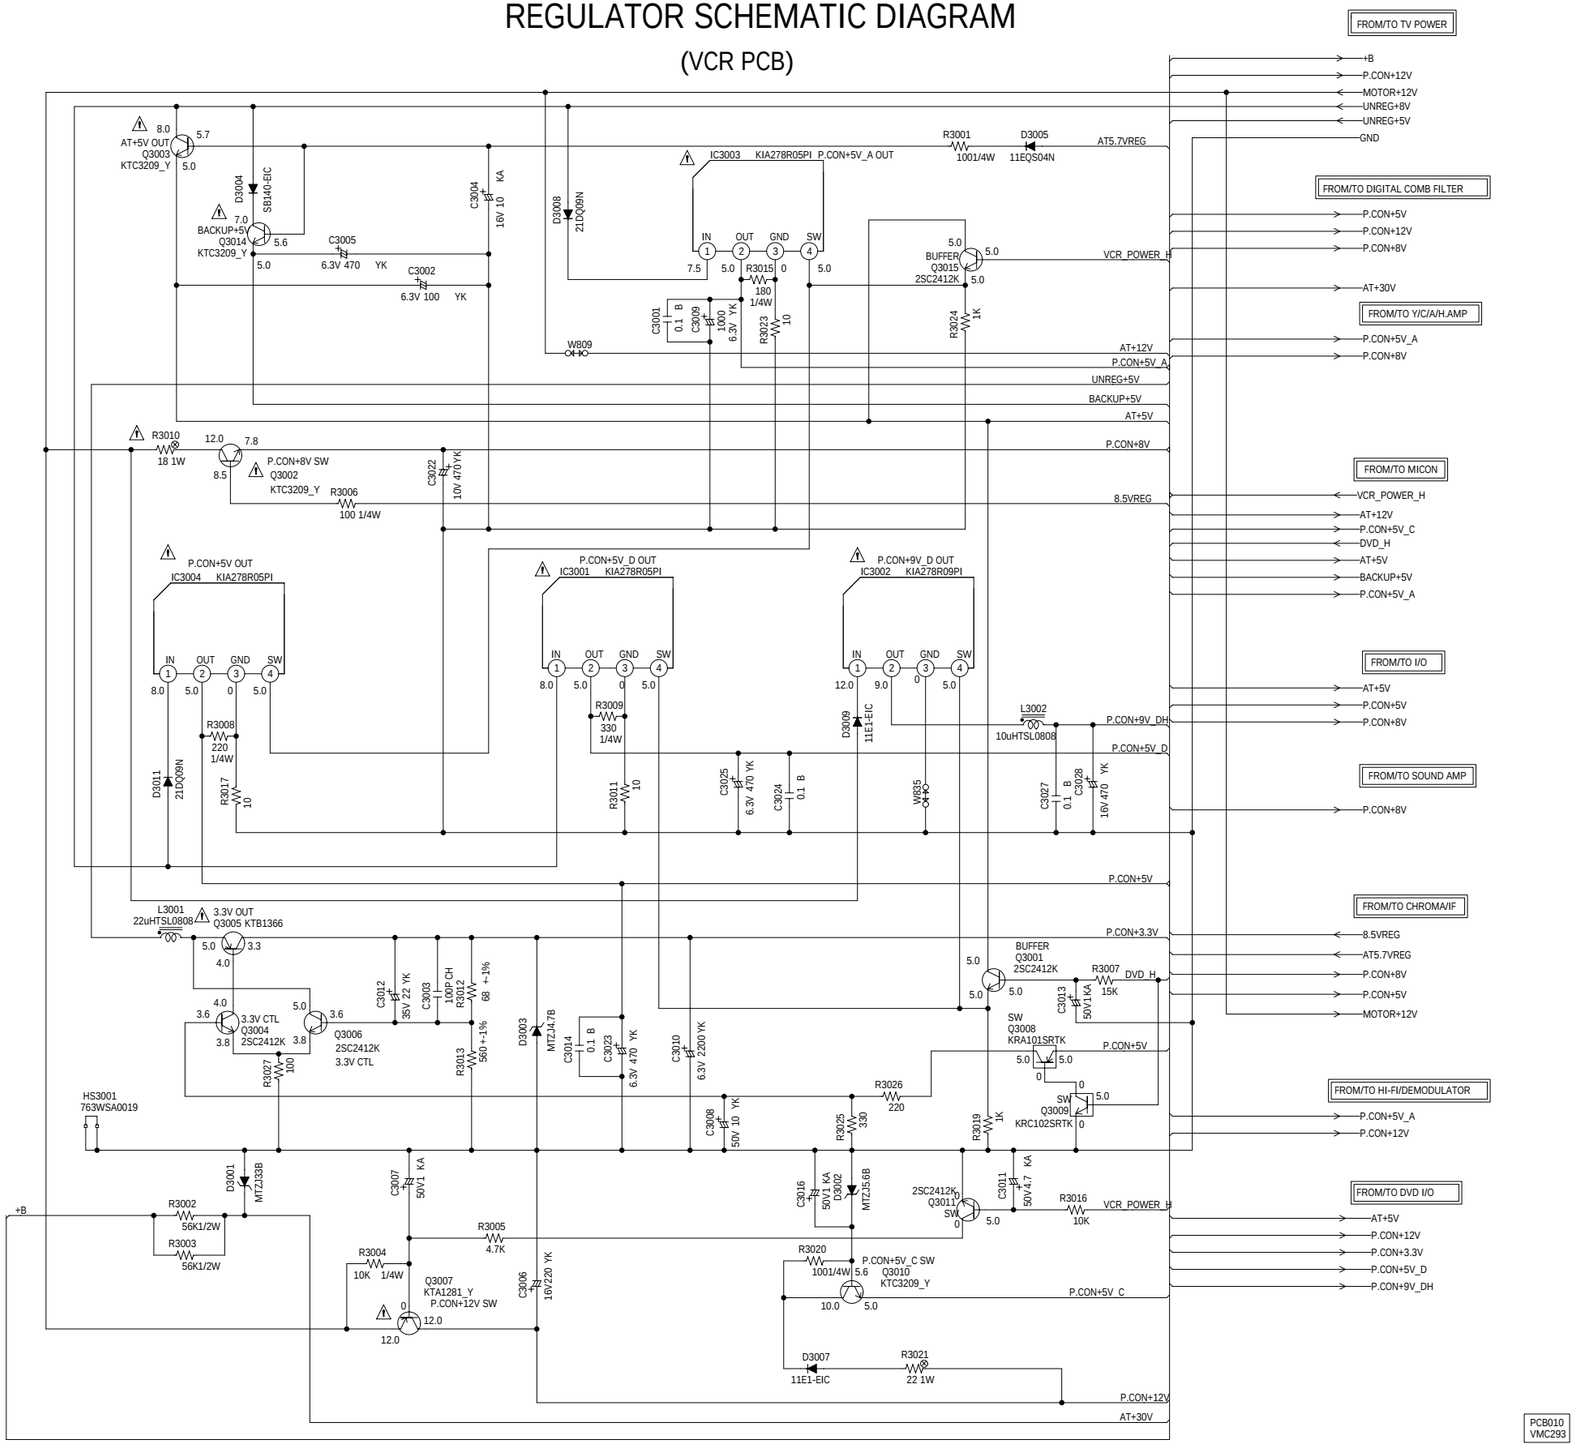

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR



TV POWER SCHEMATIC DIAGRAM

(VCR PCB)

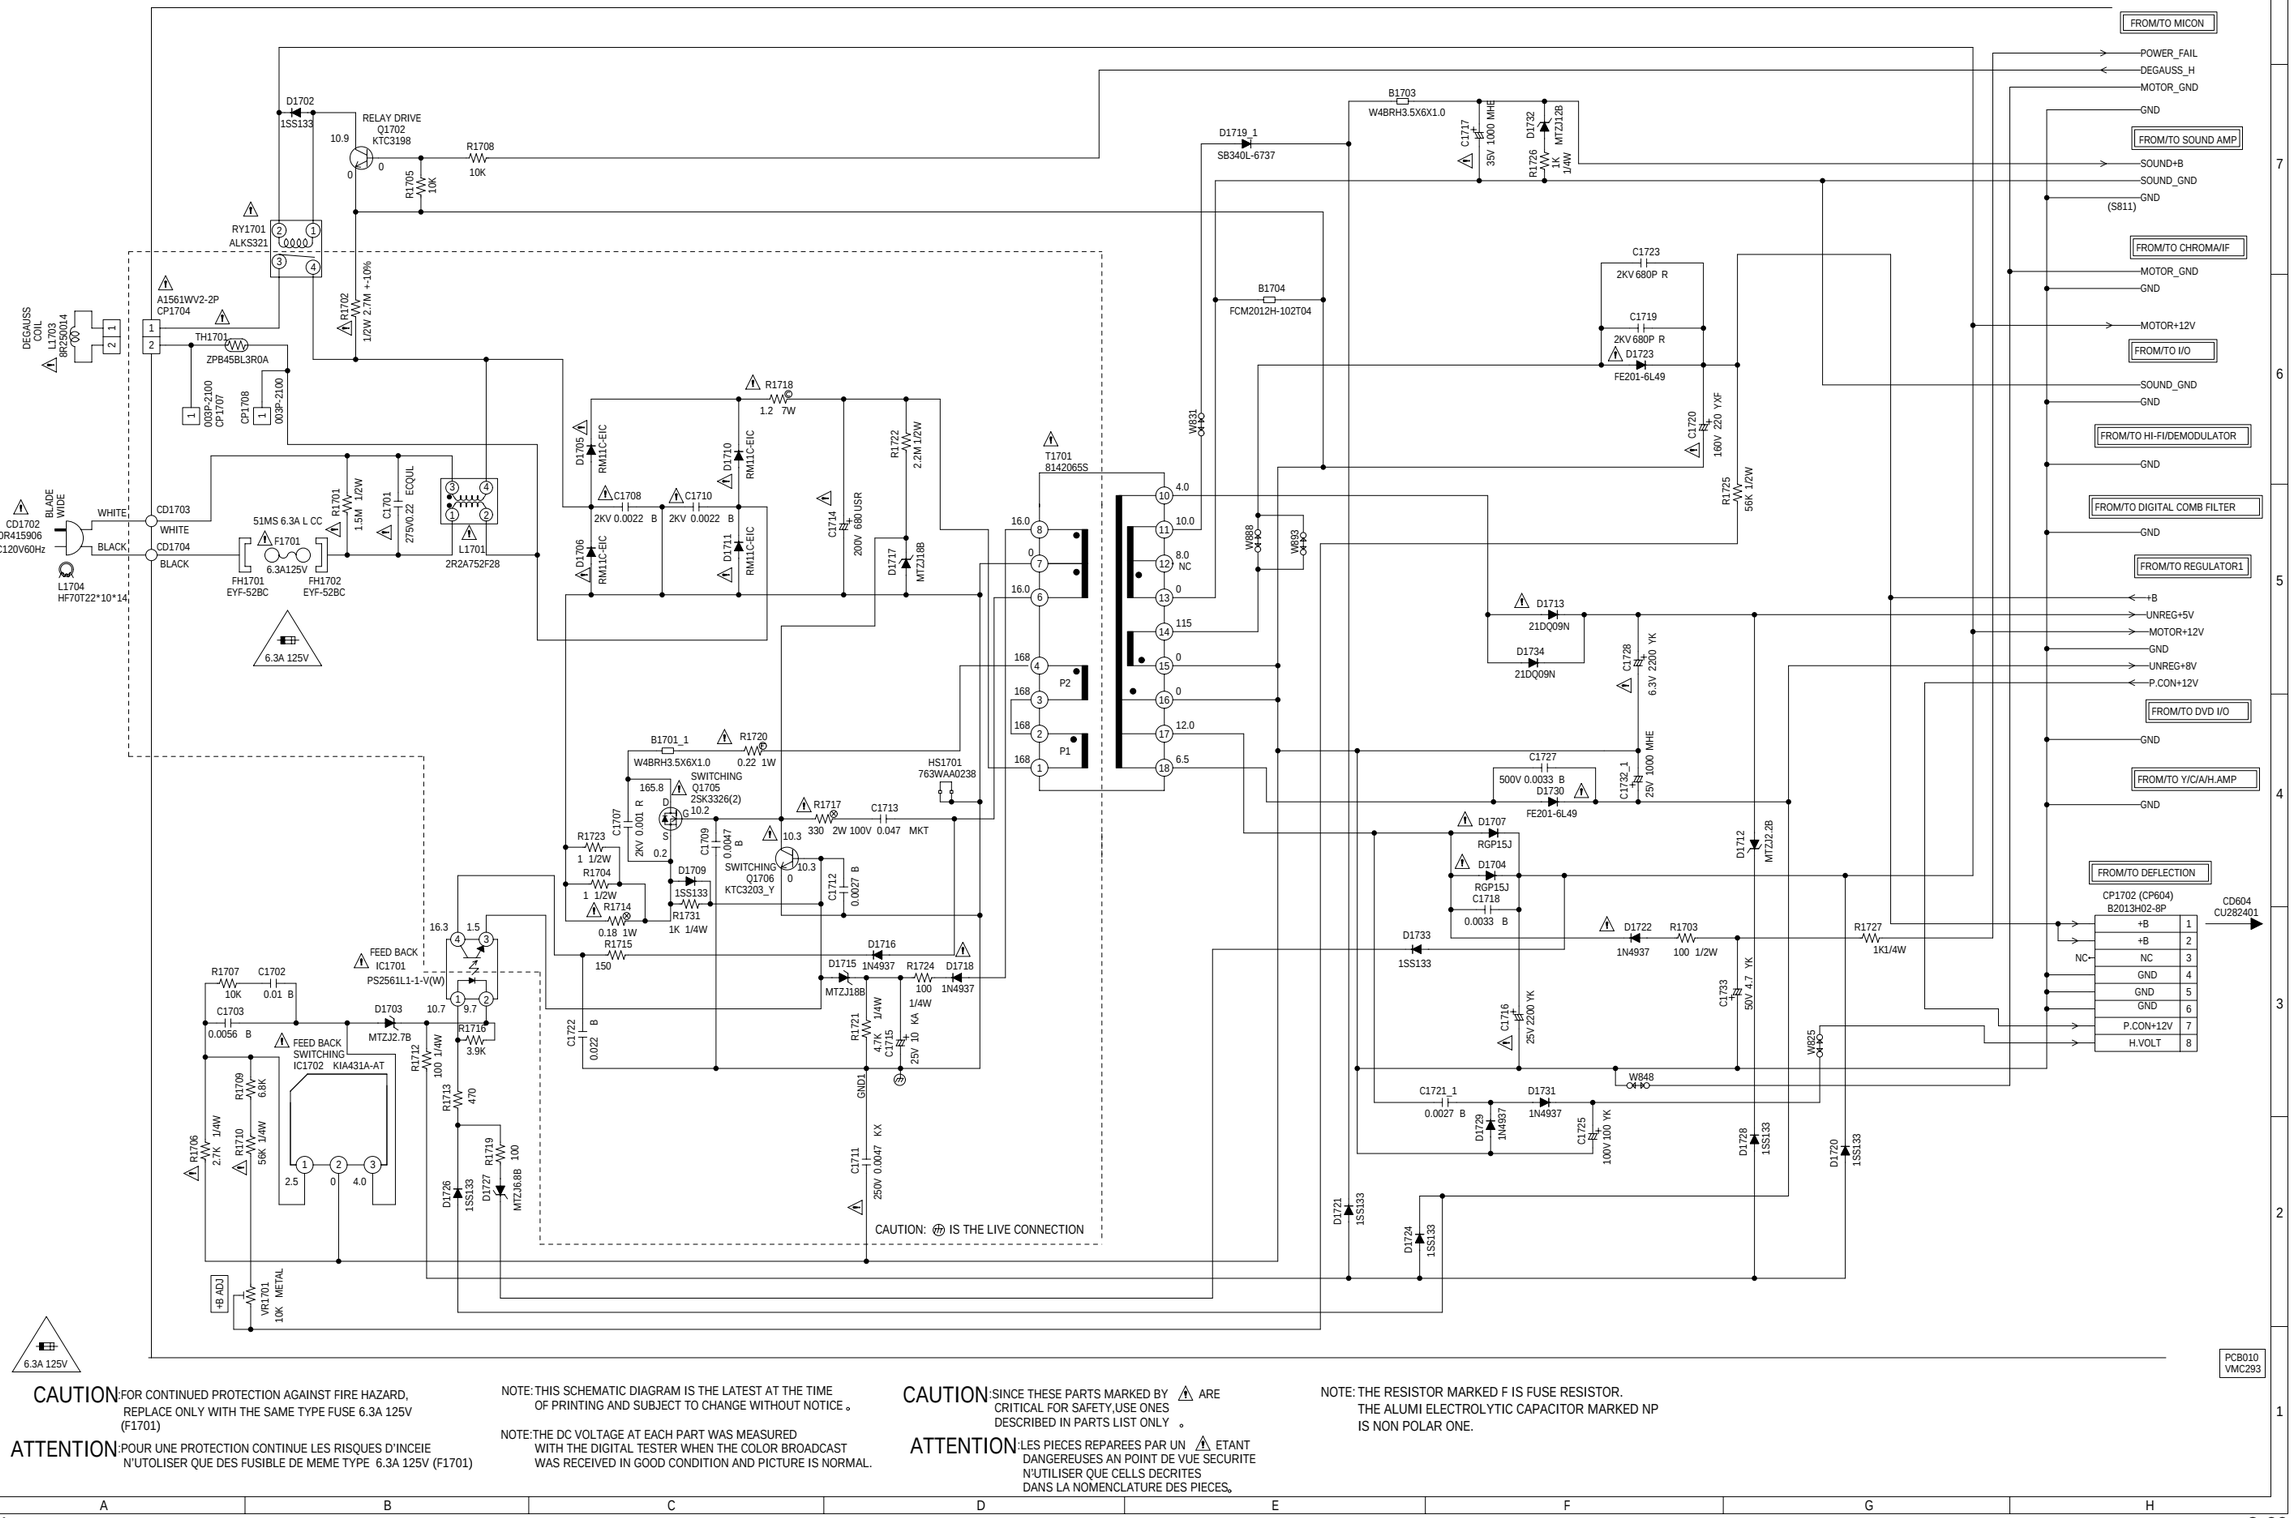

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V (F1701)

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTOLISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V (F1701)

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

DEFLECTION SCHEMATIC DIAGRAM

(DEFLECTION PCB)

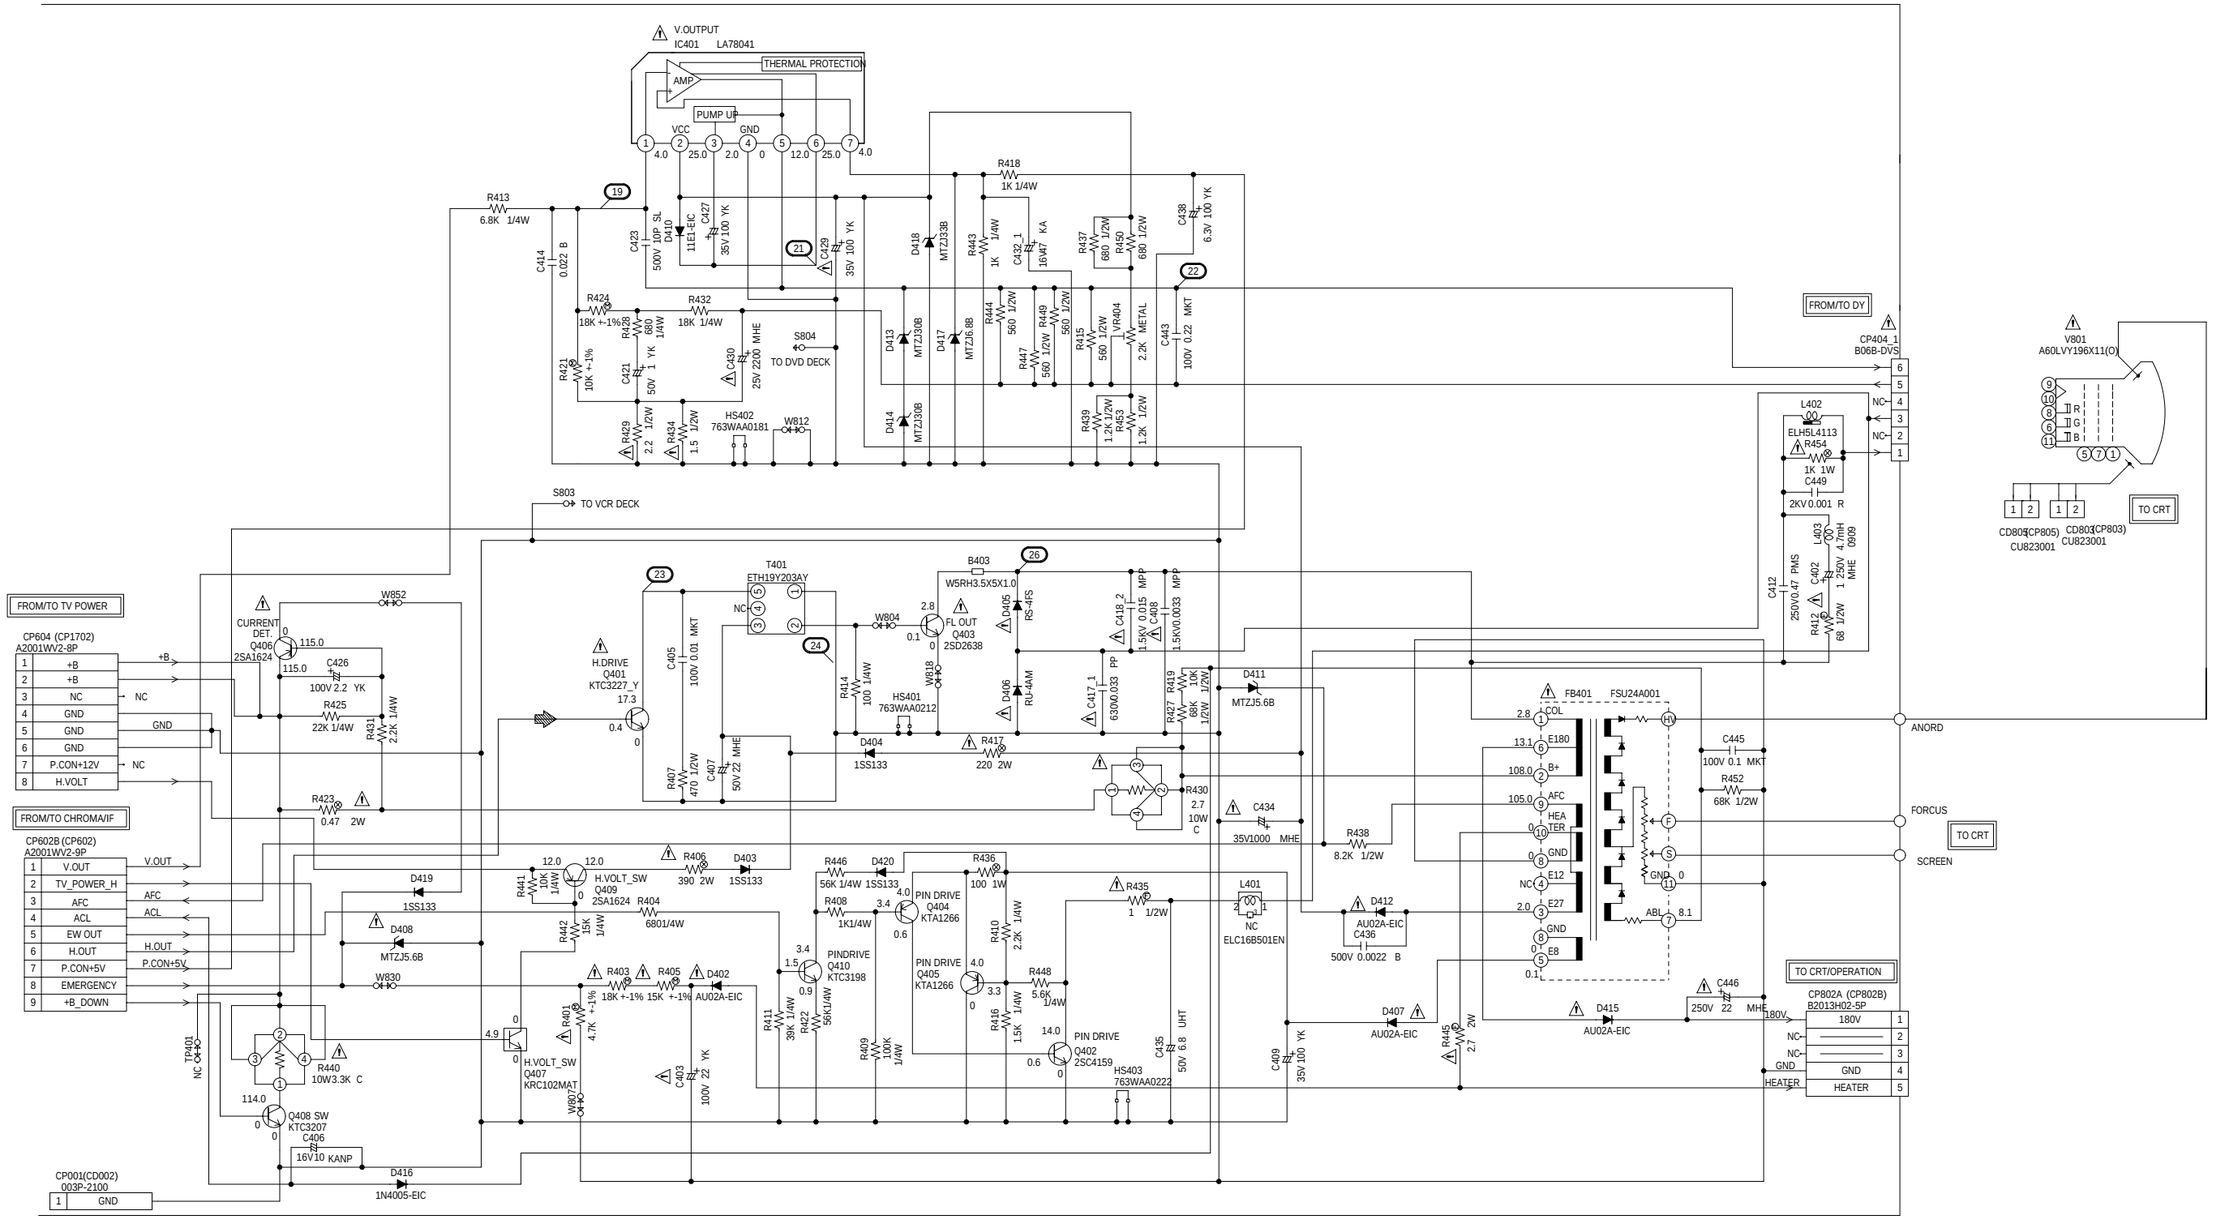

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: DIGITAL TRANSISTOR



CRT/OPERATION SCHEMATIC DIAGRAM

(CRT PCB)

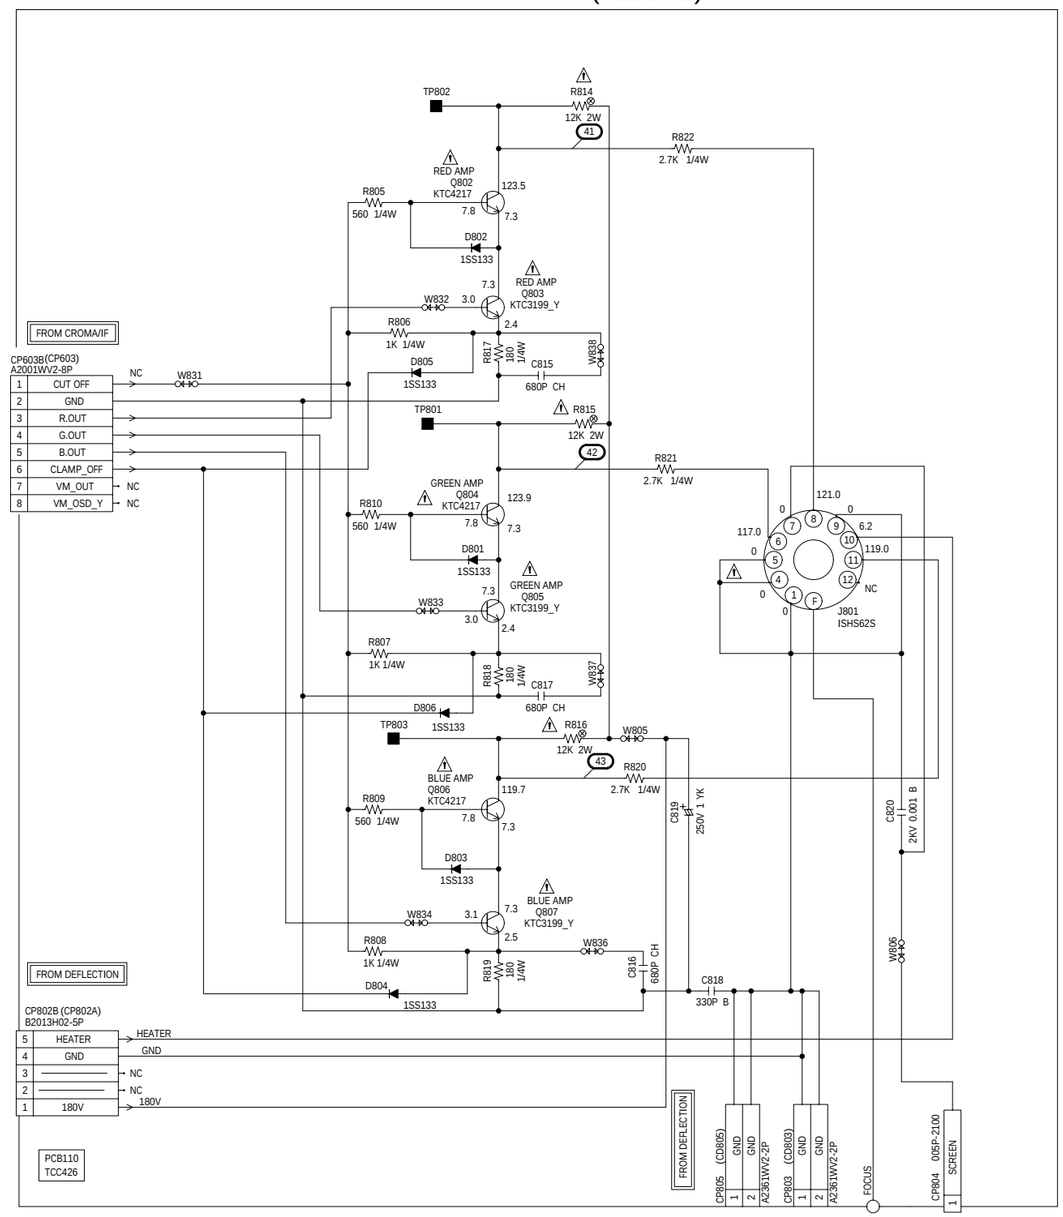

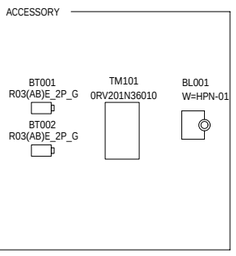

(OPERATION PCB)

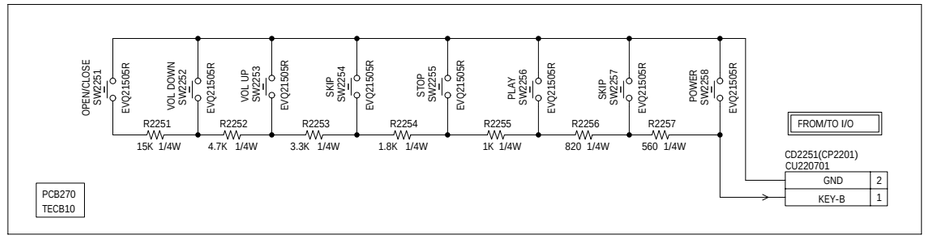

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

INTERCONNECTION DIAGRAM

DVD DRIVE DM-2

	CD2001	CP2001
T-	24	24 T-
T+	23	23 T+
F-	22	22 F-
F+	21	21 F+
MON(DVD)	20	20 MON(DVD)
NC(SW)	19	19 NC(SW)
VOL(DVD)	18	18 VOL(DVD)
GND(DVD)	17	17 GND(DVD)
LD(DVD)	16	16 LD(DVD)
LD(CD)	15	15 LD(CD)
VOL(CD)	14	14 VOL(CD)
GND(CD)	13	13 GND(CD)
MON(COM)	12	12 MON(COM)
GND(NC)	11	11 GND(NC)
RF	10	10 RF
C	9	9 C
B	8	8 B
A	7	7 A
D	6	6 D
F	5	5 F
E	4	4 E
VCC	3	3 VCC
VREF	2	2 VREF
GND(PDIC)	1	1 GND(PDIC)

OPTICAL PICK-UP

SPINDLE MOTOR

SLED,LOADING MOTOR

FG SENSER

	CD2301 FFC	CP2301
SLD-	1	1 SLD-
SLD+	2	2 SLD+
SP1-	3	3 SP1-
SP1+	4	4 SP1+
LIMIT SW	5	5 LIMIT SW
GND	6	6 GND
SP_FG	7	7 SP_FG
+5V	8	8 +5V

	CP2302
CLOSE	1 CLOSE
GND(D)	2 GND(D)
OPEN	3 OPEN

DVD PCB
PCB130
VMB283

	CD8505	CP8001
GND	1	1 GND
GND	2	2 GND
TX	3	3 TX
RX	4	4 RX
GND(M)	5	5 GND(M)
P.CON+9V	6	6 P.CON+9V
P.CON+5V	7	7 P.CON+5V
P.CON+3.3V	8	8 P.CON+3.3V
P.CON+3.3V	9	9 P.CON+3.3V
GND	10	10 GND
SPDIF	11	11 SPDIF

	CP8502	CD8501 FFC		CP8002
CVBS	1	1	12	12 CVBS
GND	2	2	11	11 GND
C(CVBS)	3	3	10	10 C(CVBS)
GND	4	4	9	9 GND
Y(G)	5	5	8	8 Y(G)
GND	6	6	7	7 GND
AUDIO-L	7	7	6	6 AUDIO-L
GND	8	8	5	5 GND
AUDIO-R	9	9	4	4 AUDIO-R
ZERO	10	10	3	3 ZERO
DVD RESET	11	11	2	2 DVD RESET
GND	12	12	1	1 GND

	CP602
V.OUT	1
TV_POWER_H	2
AFC	3
ACL	4
	5
H.OUT	6
P.CON+5V	7
EMERGENCY	8
+B_DOWN	9

	CP602B	CP001	CD002
+B_DOWN	9	GND 1	GND
EMERGENCY	8		
P.CON+5V	7		
H.OUT	6		
ACL	5		
AFC	4		
TV_POWER_H	3		
V.OUT	2		
	1		

	CP604	CP1702
+B	1	1 +B
+B	2	2 +B
NC	3	3 NC
GND	4	4 GND
GND	5	5 GND
GND	6	6 GND
P.CON+12V	7	7 P.CON+12V
H.VOLT	8	8 H.VOLT

DEFLECTION PCB
PCB080
TMC564

	CP603
	8
VM_OUT	7
CLAMP_OFF	6
B.OUT	5
G.OUT	4
R.OUT	3
GND	2
CUT OFF	1

FBT FBM01

CP802A: 1 180V, 2 GND, 3 HEATER

CP404: 5 4 3 2 1

FOCUS SCREEN

CP806: SCREEN, FOCUS

CRT SOCKET J801

CRT PCB
PCB110
TCC426

CP802B: 1 HEATER, 2 GND, 3 180V, 4 5

V801 H.V ANODE CRT

DEGAUSS COIL L1703

	CP1704
DEGAUSS COIL	1
DEGAUSS COIL	2

CP603B

	CP603B
	8
VM_OUT	7
CLAMP_OFF	6
B.OUT	5
G.OUT	4
R.OUT	3
GND	2
CUT OFF	1

BLADE WIDE

WHITE

BLACK

CD1703

CD1704

CD1702
AC120V60Hz

CP903: 2 GND, 1 GND

CP805: 2 GND, 1 GND

CD801

OPERATION PCB
PCB270
TECB10

CD2251: GND, KEY-B

CP2201: 2 GND, 1 KEY-B

SPEAKER SP351 8 OHM

SPEAKER SP352 8 OHM

CD303: 1 2 3 4

CP303: 1 SOUND R+, 2 SOUND R-, 3 SOUND L-, 4 SOUND L+

COMMAND TRANSMITTER
TM601

OS2201: Vout 1, GND 2, B+ 3

FULL ERASE HEAD ASS'Y

H5002: 1 FE HEAD (HOT), 2 FE HEAD (GND)

CP4503: 1 FE HEAD(HOT), 2 FE HEAD(GND)

HALL SENSOR, MAIN COIL, ROTOR MAGNET, MR FG SENSOR

VCC O G

HALL VCC, HALL IN, OUT SWITCH LOGIC

	CP101	
CAP FG	1	1
CAP VCO	2	2
VCC	3	3
CAP.M/F/R	4	4
I LIMIT	5	5
MOTOR GND	6	6
GND	7	7
LD/CY VCO	8	8
CAP CTL	9	9
LDM CTL	10	10
CYL FG/PG	11	11
CYL CTL	12	12

CAPSTAN DD UNIT
M2001

FFC: 1 2 3 4 5 6 7

RED, WHITE

LM

LOADING MOTOR
M101

D-FG GND, D-FG OUT, M-GND, D-COM, D-W OUT, D-V OUT, D-U OUT

UN4001
CYLINDER UNIT

VCR PCB
PCB010
VMC293

TU001

17	VIDEO OUT
16	NC
15	BT
14	SIF OUT
13	AUDIO OUT
12	AFT OUT
11	DATA
10	CLOCK
9	NC
8	NC
7	NC
6	NC
5	NC
4	NC
3	+B
2	NC
1	NC

	CP4501	FPC
HF1 (R)	9	9
HF COM	8	8
HF2 (L)	7	7
SP-CH1 (R)	6	6
SP COM	5	5
SP-CH2 (L)	4	4
EP/LP-CH1 (R)	3	3
EP/LP COM	2	2
EP/LP-CH2 (L)	1	1

HI-FI HEAD, SP HEAD, EP/LP HEAD

	CP4502	FFC
AUDIO_REC	6	6
AUDIO_PB	5	5
CTL+	4	4
CTL-	3	3
AE HEAD(+)	2	2
AE HEAD(-)	1	1

HEAD AUDIO CONTROL ASS'Y
H5001

AUDIO PB	6
AUDIO REC	5
CTL+	4
CTL-	3
AE HEAD(-)	2
AE HEAD(+)	1

AUDIO, CONTROL, AE

REAR OUT JACK J4202

REAR IN JACK J4201

COAXIAL J8007

RED FRONT AUDIO JACK J2204

WHITE FRONT AUDIO JACK J2203

YELLOW FRONT VIDEO JACK J2202

HEADPHONE_JACK J2201

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

WAVEFORMS

RF_AMP/DSP

100ns
100mV

①

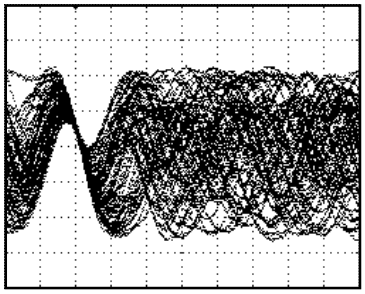

20ns
200mV

②

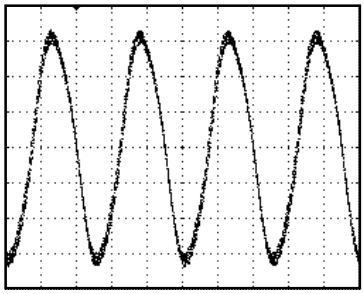

MOTOTR DRIVE

2ms
1.0V

③

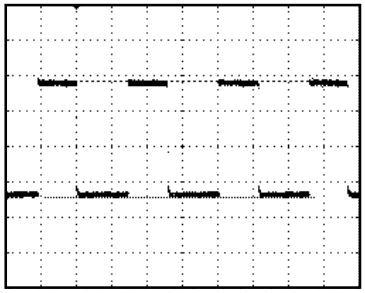

MPEG

20ns
500mV

④

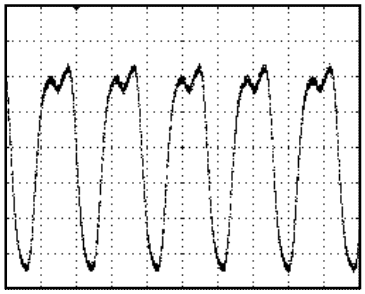

AUDIO/VIDEO

10µs
200mV

⑤

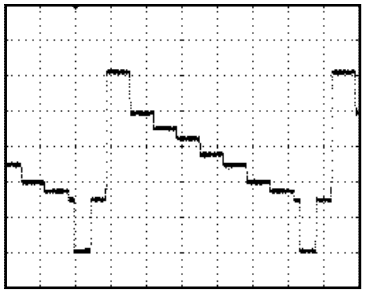

10µs
100mV

⑥

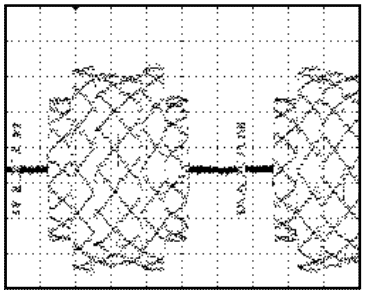

10µs
200mV

⑦

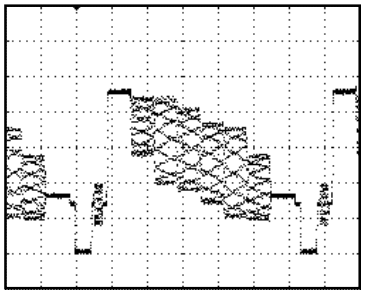

500µs
500mV

⑧

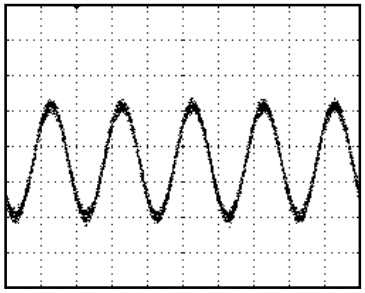

500µs
500mV

⑨

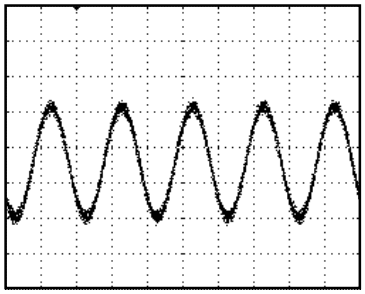

REGULATOR 2

100ns
500mV

⑩

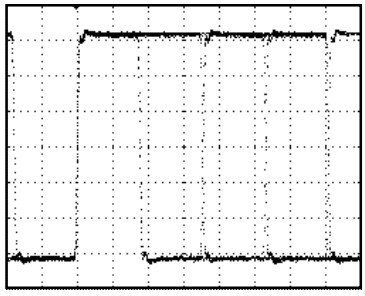

Y/C/AUDIO/CCD/HEAD AMP

20µs
1.0V

⑪

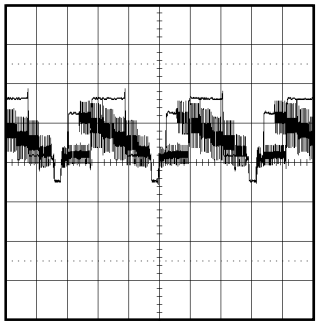

2µs
1.0V

⑫

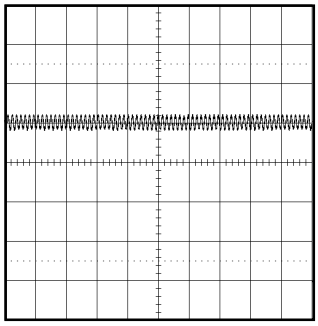

1ms
1.0V

⑬

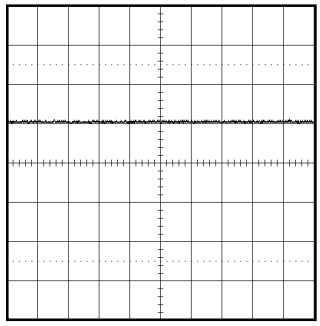

5ms
2.0V

⑭

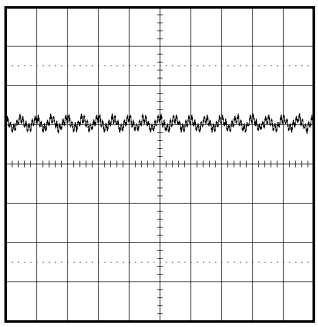

20µs
20V

⑮

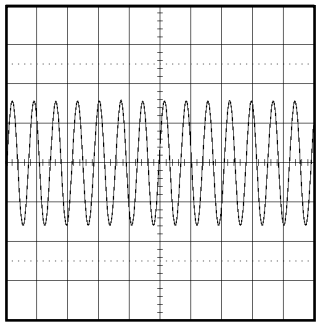

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

MICON

20ms
2.0V

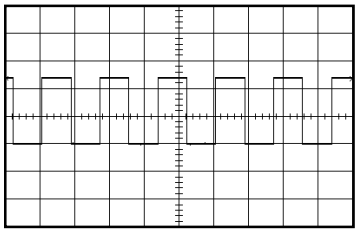

16

DEFLECTION

10ms
10V

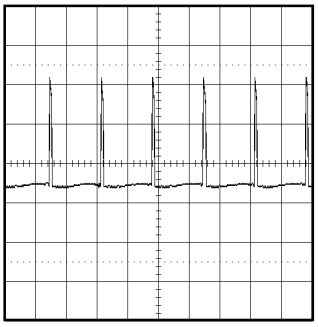

21

DEFLECTION

20µs
200V

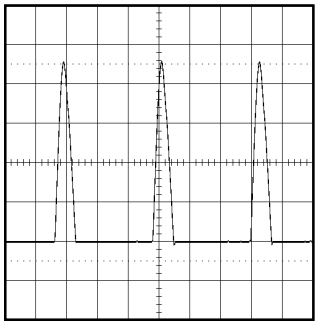

26

1ms
2.0V

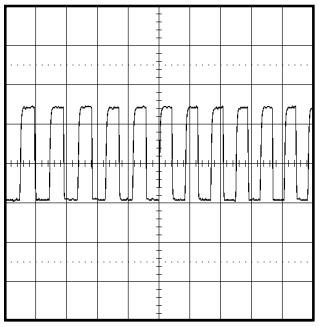

17

10ms
10V

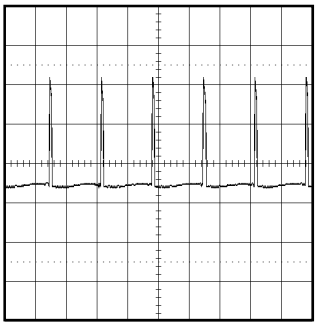

22

MICON

50µs
2.0V

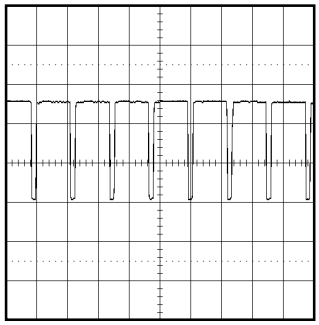

27

SOUND AMP/ SURROUND

1ms
200mV

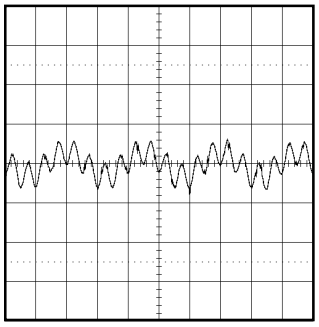

18

50µs
10V

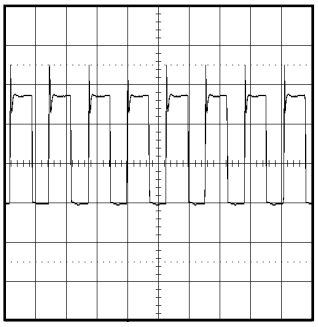

23

10ms
2.0V

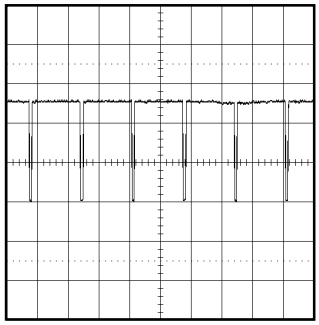

28

DEFLECTION

10ms
0.5V

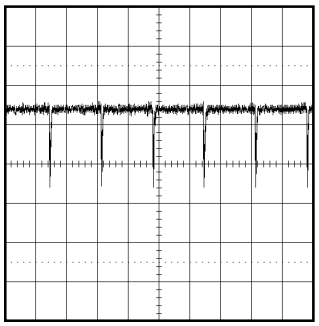

19

50µs
5.0V

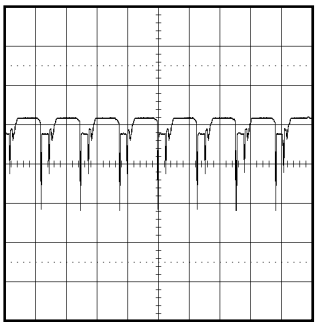

24

DVD IN/OUT

1ms
2.0V

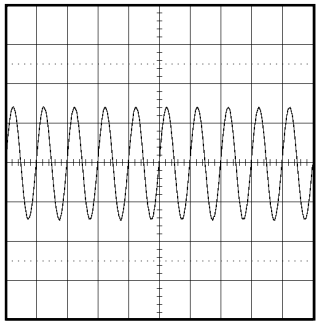

29

Hi-Fi/DEMODULATOR

1ms
1.0V

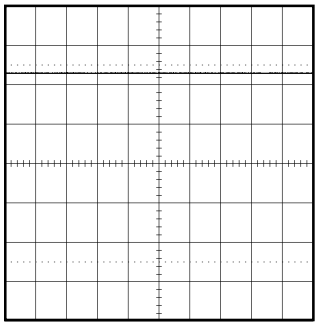

20

CHROMA/IF

20µs
0.5V

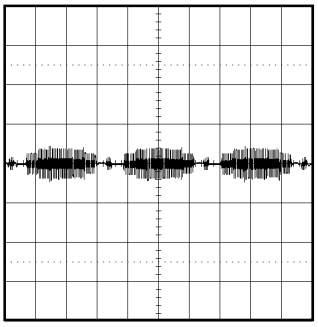

25

1ms
2.0V

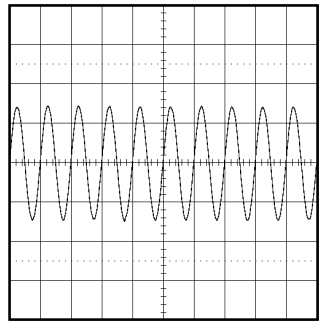

30

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

DIGITAL COMB FILTER

20µs
0.5V

31

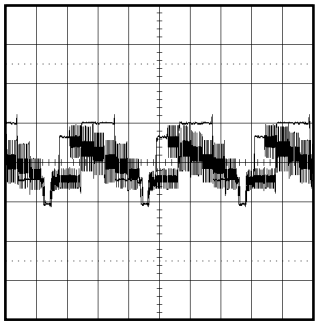

20µs
1.0V

36

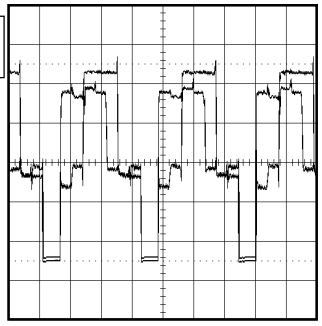

CRT/SVM

20µs
50V

41

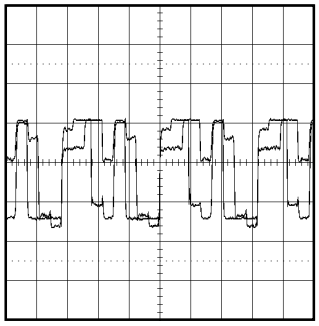

0.5ms
0.5V

32

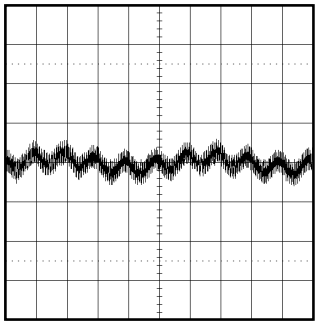

20µs
1.0V

37

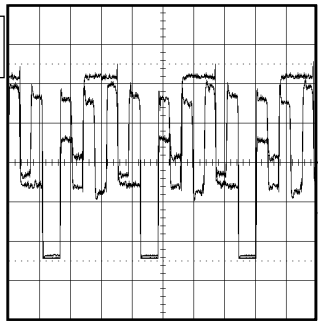

20µs
50V

42

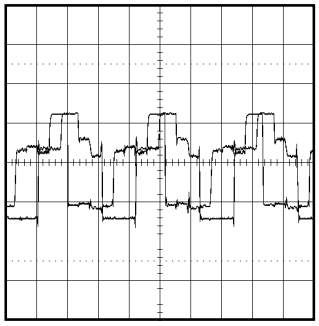

CHROMA/IF

20µs
0.5V

33

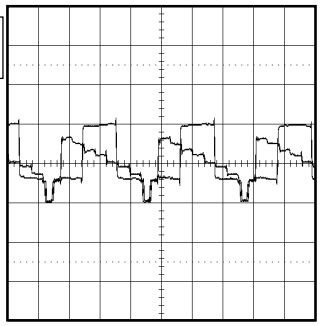

10ms
1.0V

38

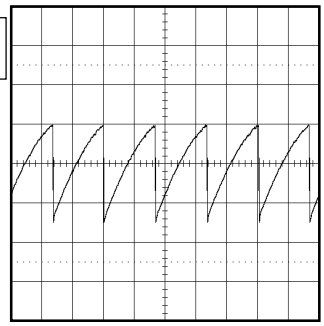

20µs
50V

43

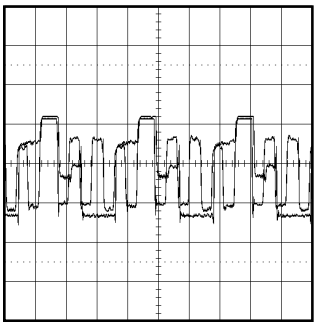

0.5µs
100mV

34

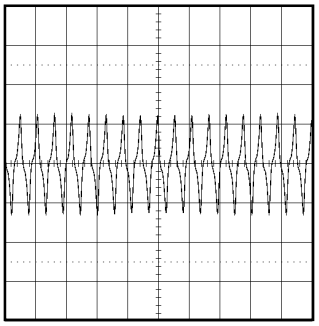

50µs
0.5V

39

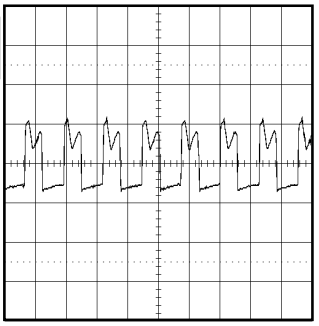

20µs
1.0V

35

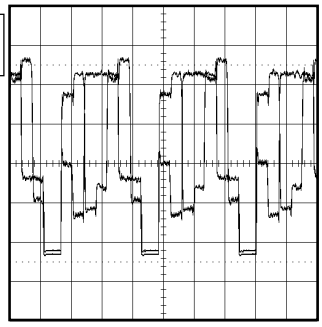

50µs
2.0V

40

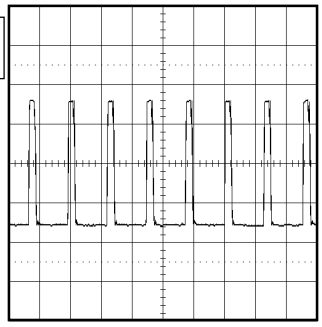

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

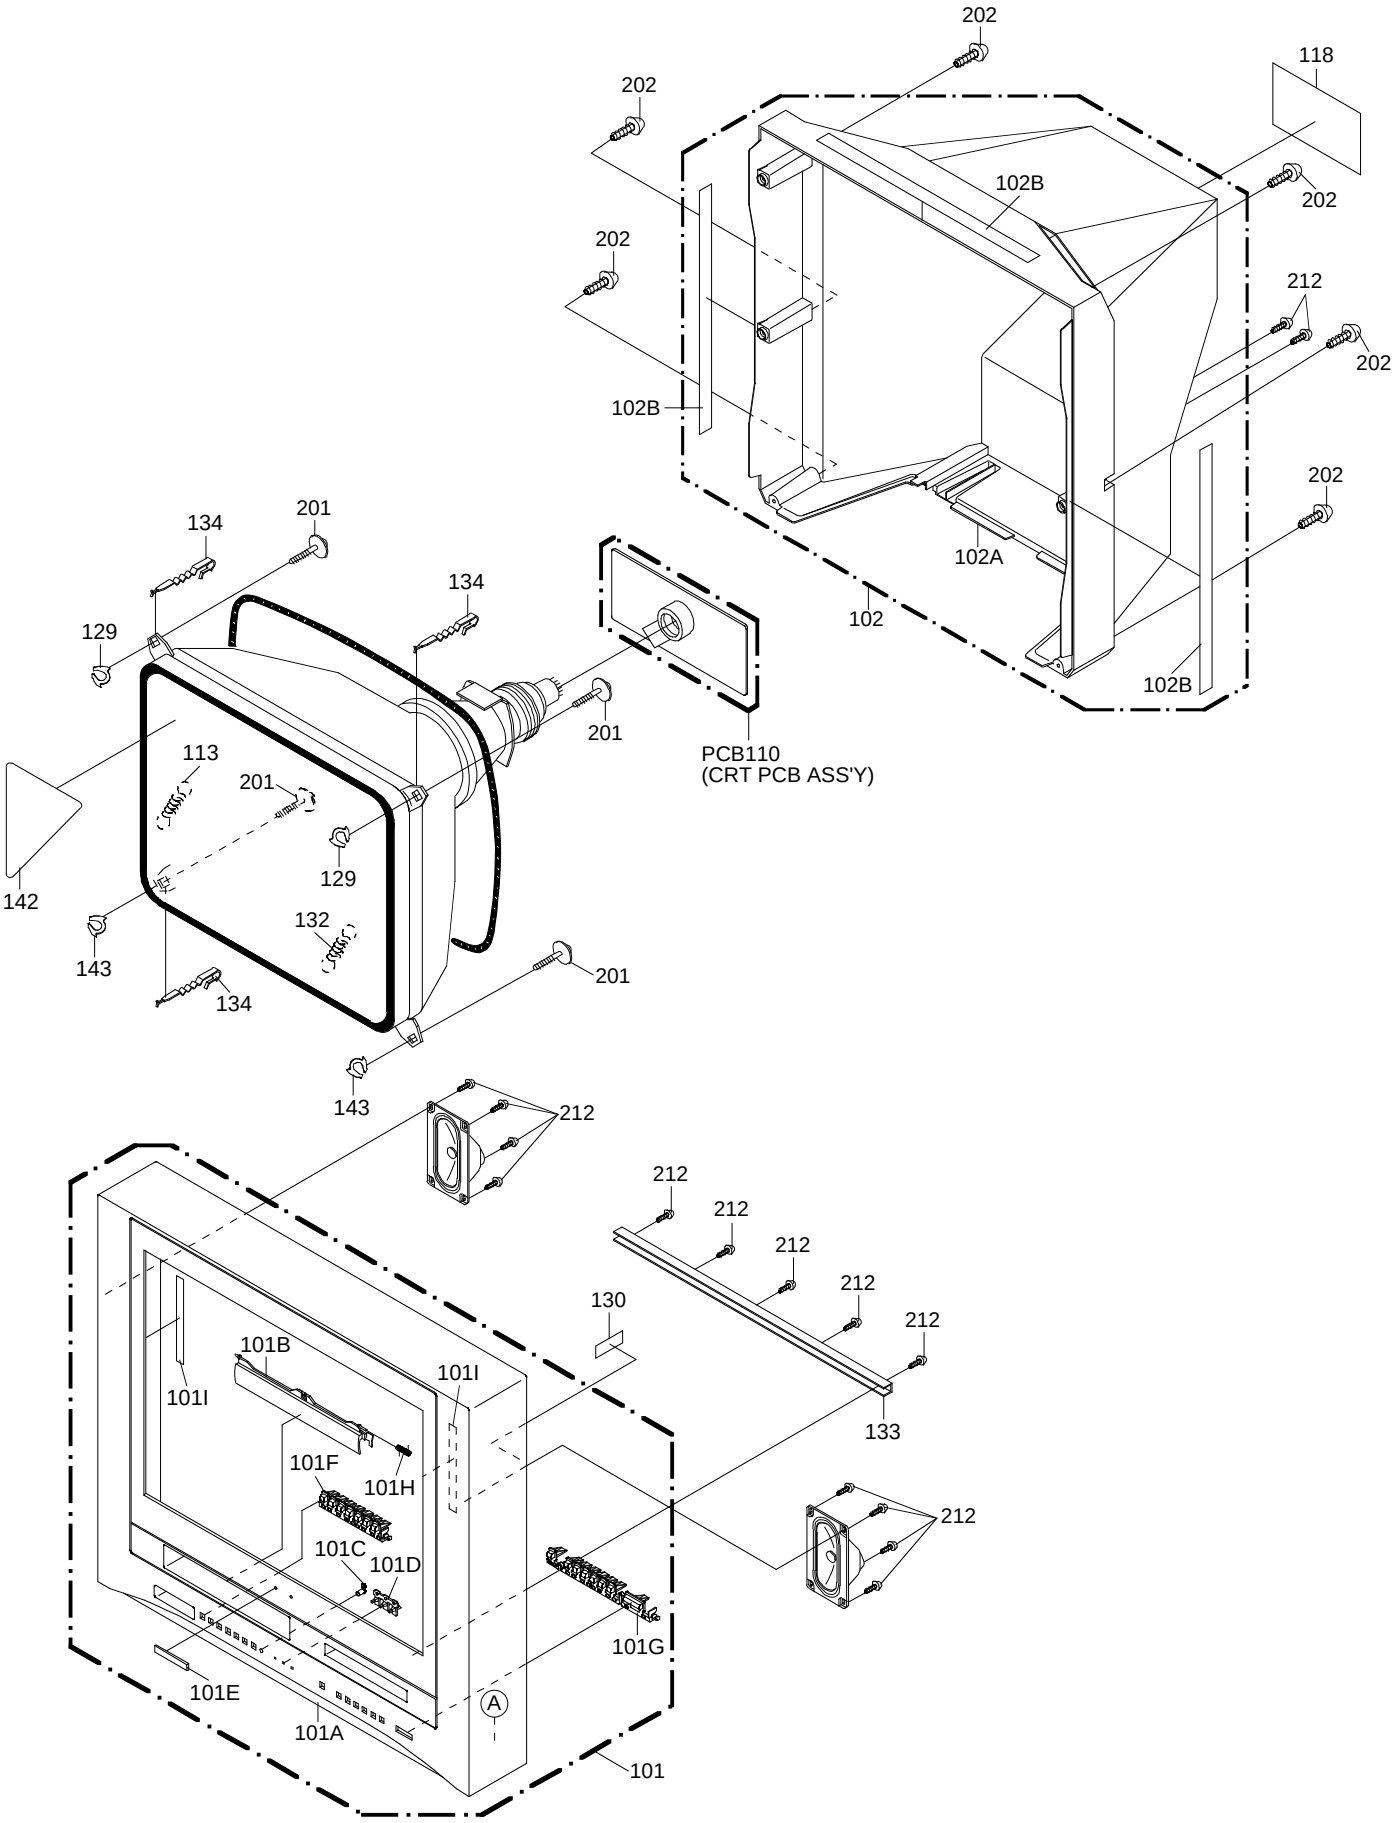

MECHANICAL EXPLODED VIEW

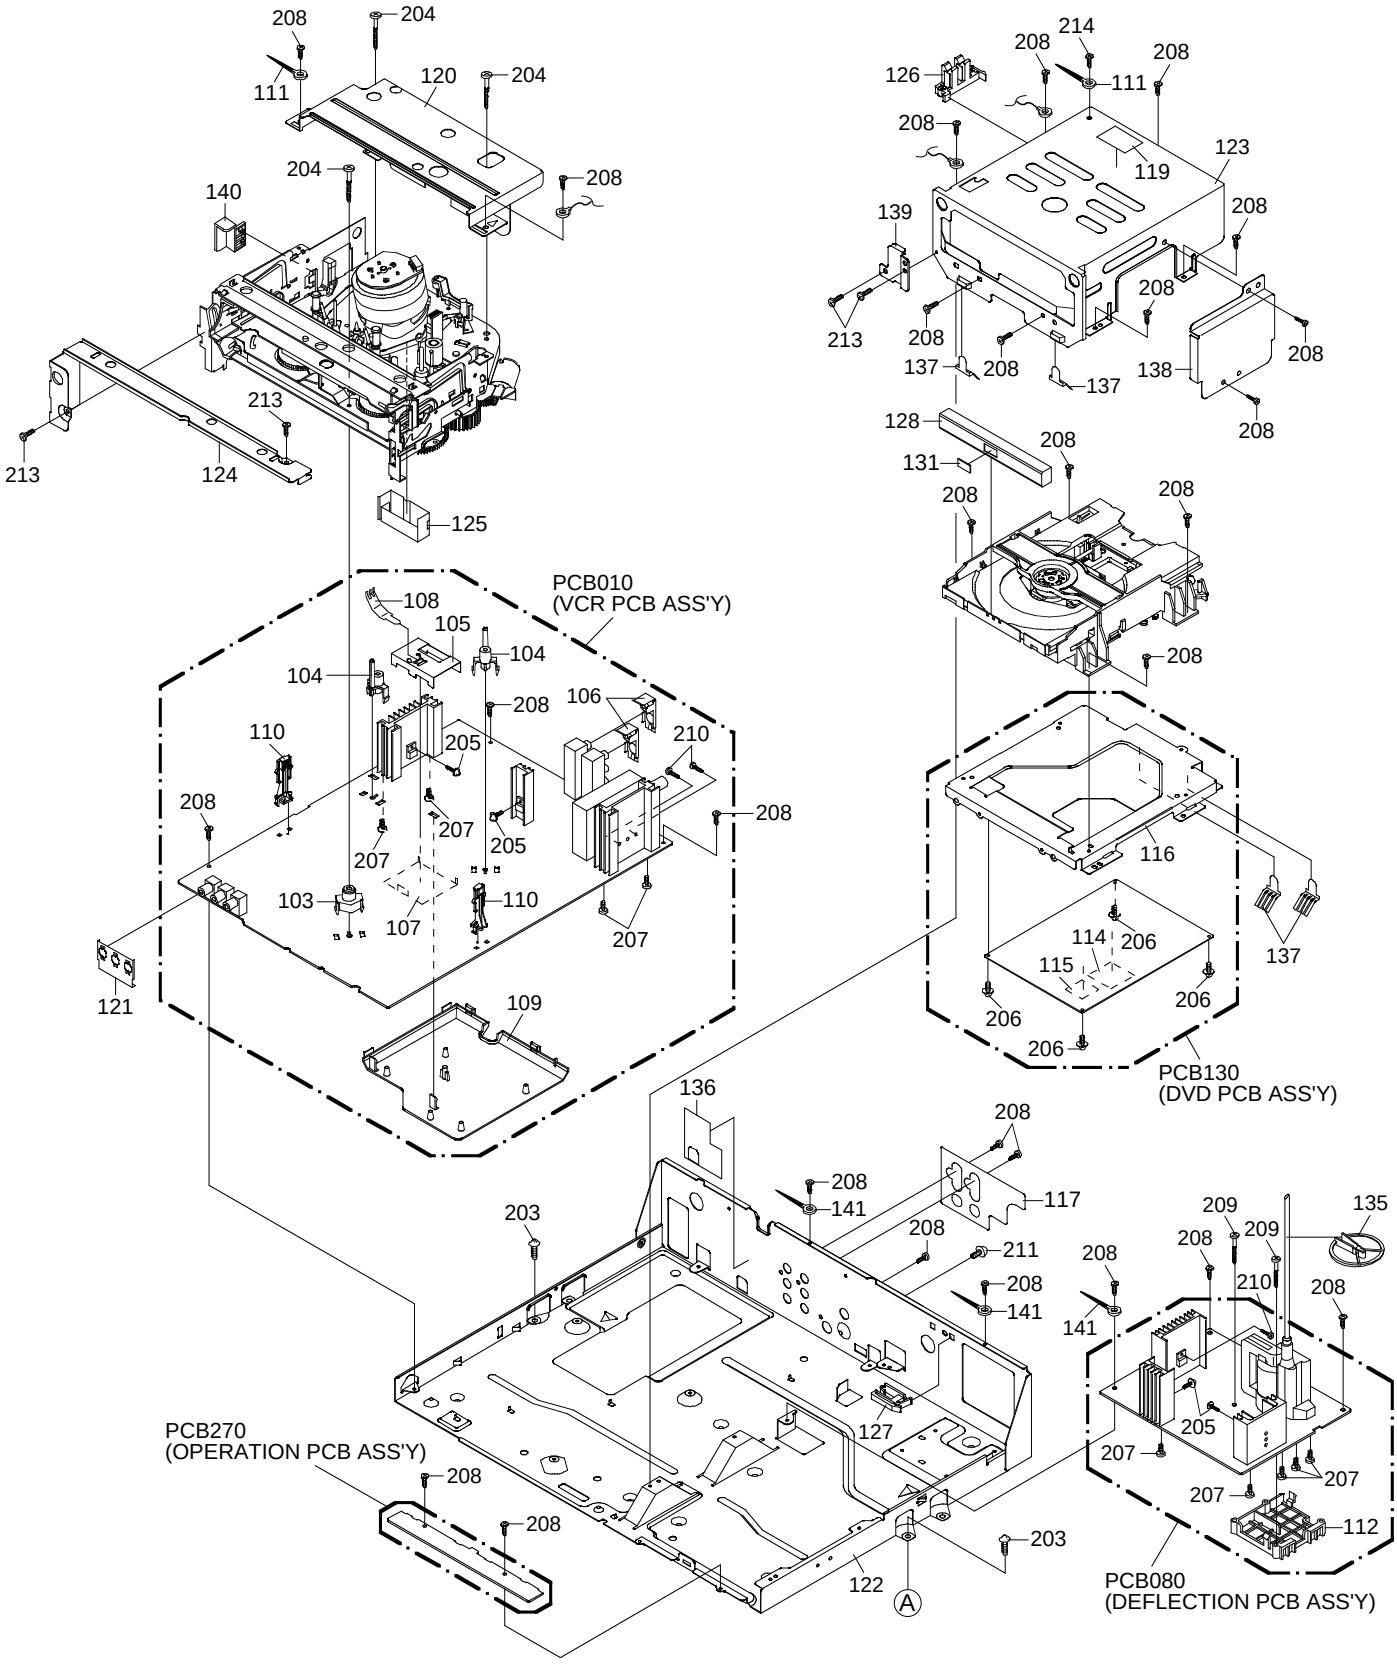

CHASSIS EXPLODED VIEW (TOP VIEW)

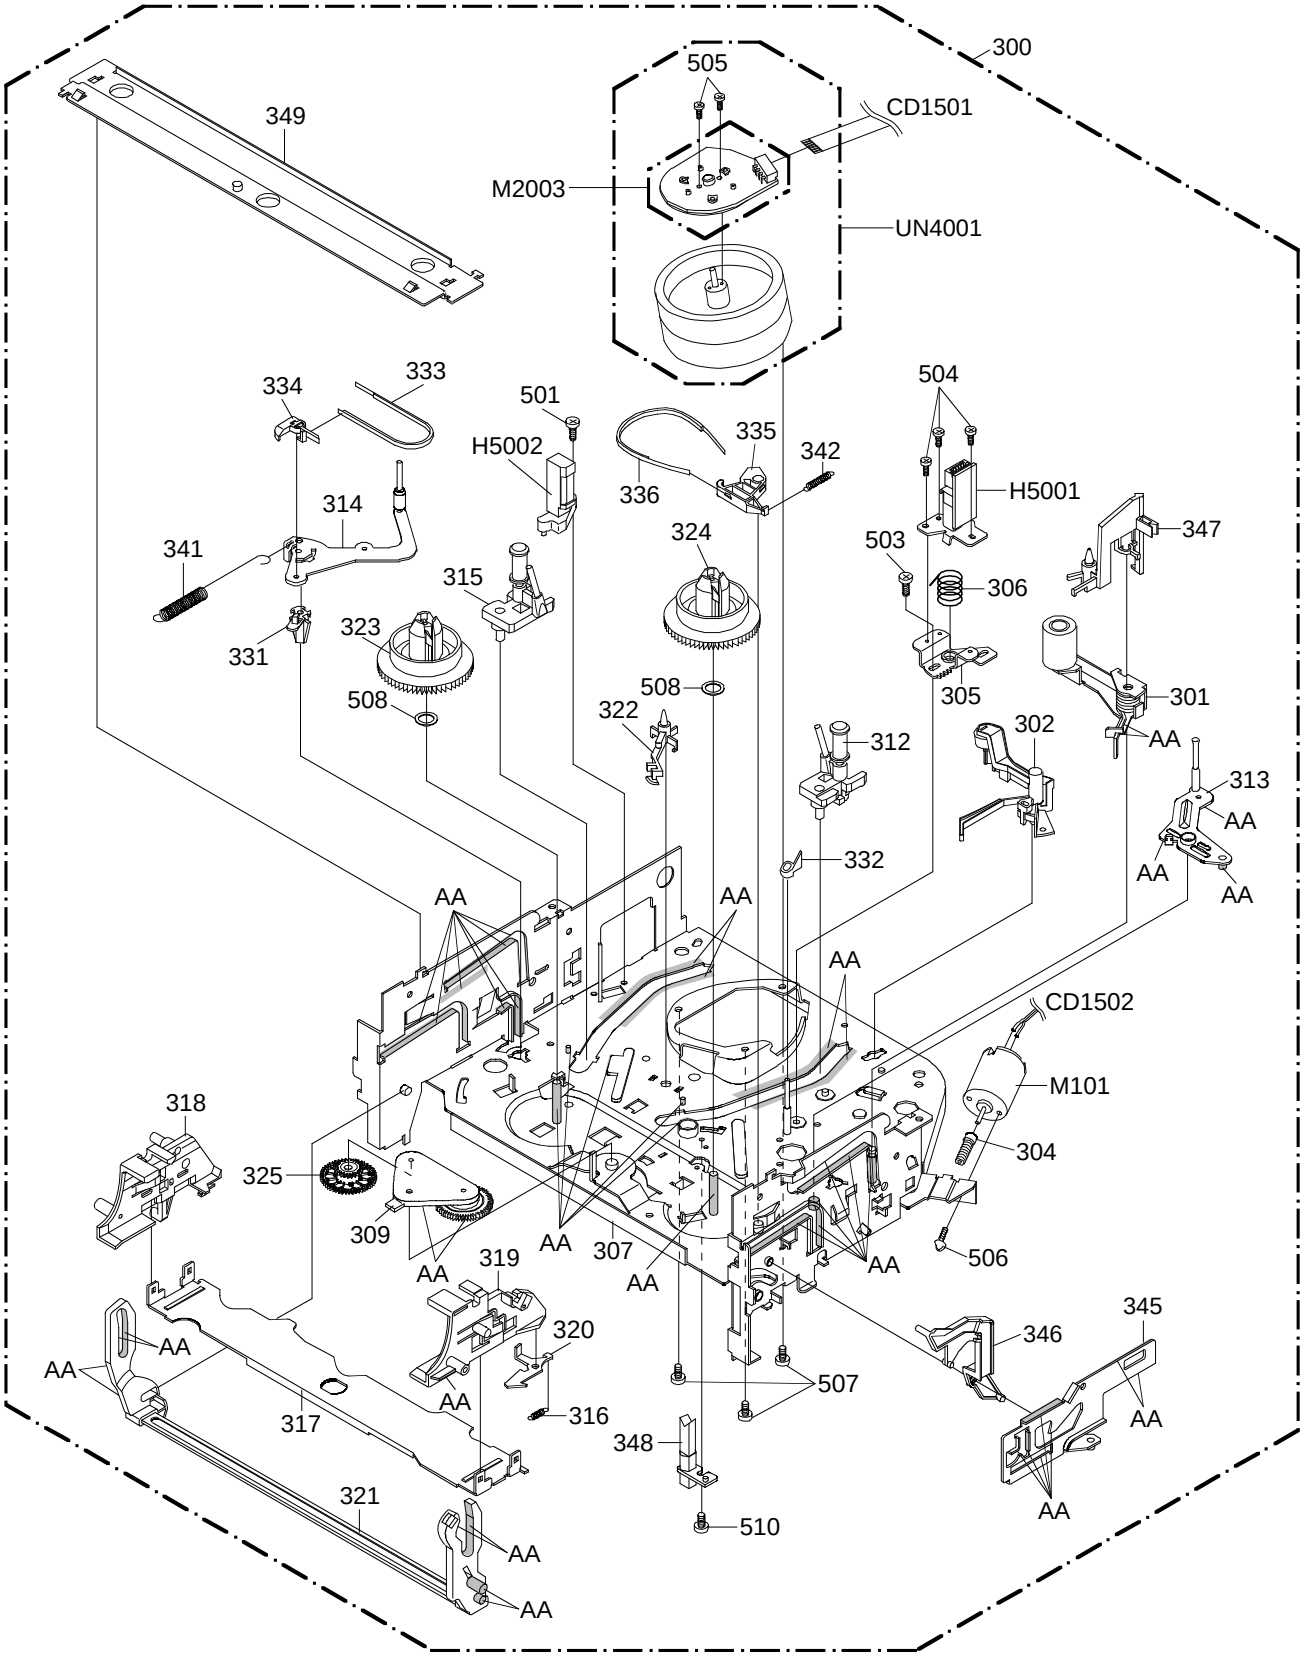

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

CHASSIS EXPLODED VIEW (BOTTOM VIEW)

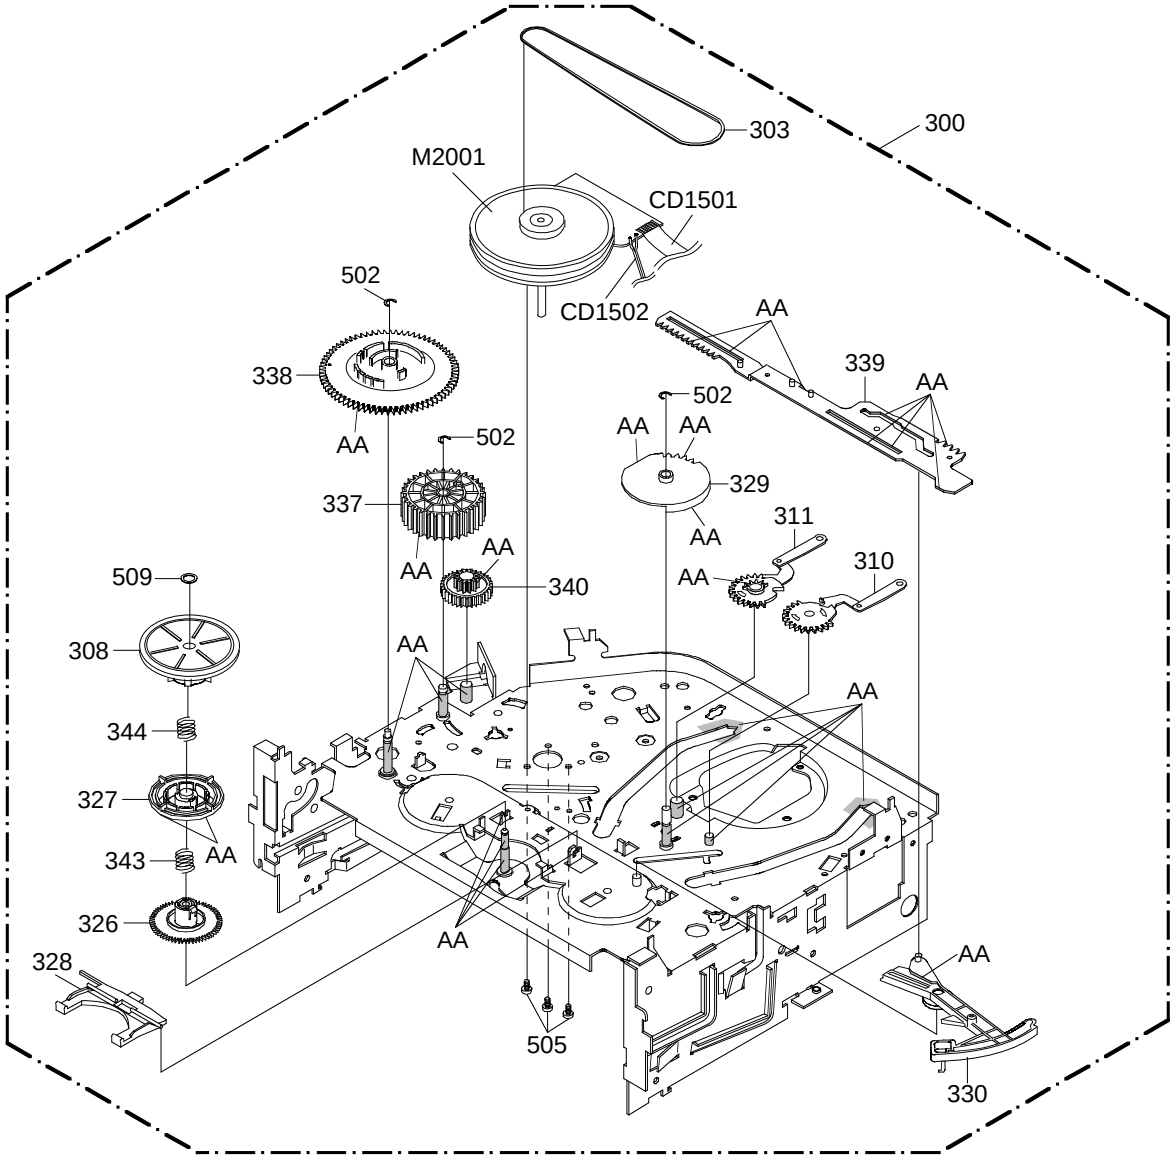

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

DVD DECK EXPLODED VIEW

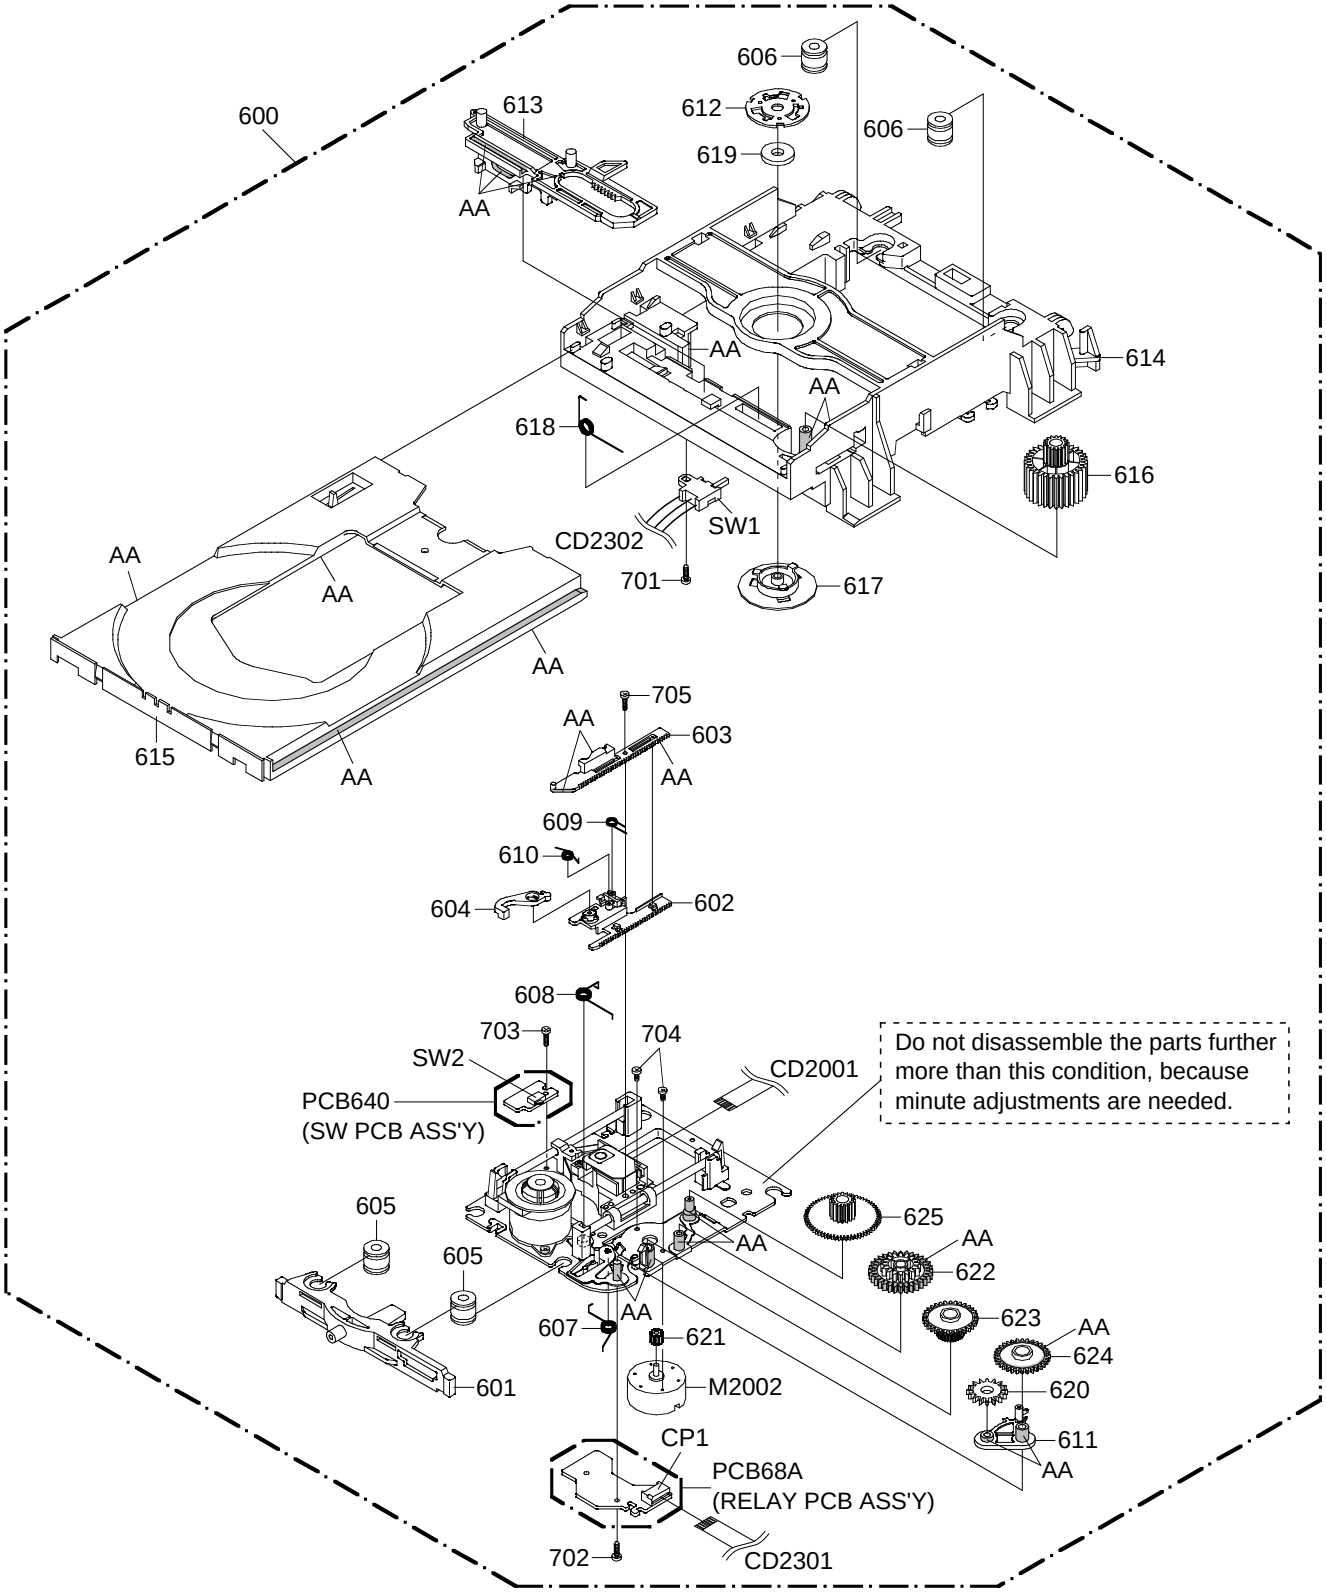

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AD302219	A5F201Z720	CABINET,FRONT ASSY	
101A	AE000172	701WPJ1218	CABINET,FRONT	
101B	AE000173	712WPJ0829	FLAP	
101C	BZ710665	713WPA0160	GUIDE,REMOCON	
101D	BZ710666	713WPA0195	GLASS,LED	
101E	AE000155	7235490021	BADGE,BRAND	
101F	BZ710667	735WPB0216	BUTTON,FRAME1	
101G	BZ710668	735WPB0217	BUTTON,FRAME2	
101H	BZ710010	743WKA0032	SPRING,FLAP	
101I	AE000174	800WQ00056	FELT SHEET	
102	AD302220	A5F201Z740	CABINET,BACK ASSY	
102A	AE000409	702WPA1001	CABINET,BACK	
102B	AE000166	800WQ00041	FELT SHEET	
103	BZ710577	701WPA0686	HOLDER,DECK	
104	BZ710658	701WPA0751	HOLDER,DECK	
105	BZ710466	752WSA0230	SHIELD,CASE HEAD AMP	
106	BZ710659	752WSA0290	SHIELD,COMPO	
107	AD301956	752WSA0308	SHIELD,COVER HEAD AMP	
108	BZ710331	753WUAA006	SPRING,EARTH HEAD AMP	
109	AD301957	755WPA0035	COVER,PCB	
110	BZ710498	85OP700038	HOLDER,END SENSOR	
111	BZ710039	8995034000	CORD CLIP UL CO.	
112	BZ710459	761WPA0223	HOLDER,FBT	
113	AD300759	741WUA0021	SPRING,EARTH	
114	AD301805	7232020744	SHEET,IC	
115	AD301806	7232020745	SHEET,IC	
116	AD301958	761WSA0099	ANGLE,DECK	
117	AE000152	7230007670	SHEET,JACK	
118	AE000410	7225490111	SHEET,RATING	
119	AD301907	7260000342	SHEET,CAUTION	
120	AE000160	752WSA0331	SHIELD,COVER DECK	
121	BZ710671	752WSA0292	SHIELD,AV JACK	
122	AD301963	752WSA0321	PLATE,BOTTOM	
123	AD301962	752WSA0323	DVD,TOP	
124	AD301964	752WSA0324	VCR,TOP	
125	AD301966	752WSA0327	SHIELD,COVER FPC	
126	BZ710694	774WPA0002	HOLDER,WIRE	
127	AE000164	774WPA0005	HOLDER,WIRE-2	
128	AD301965	712WPB0136	PLATE,TRAY-FRONT	
129	AD300135	769WSA0011	WASHER CRT T=0.5	
130	AD300007	7230006755	SHEET,CAUTION	
131	AE000156	7235630001	SHEET,DVD	
132	BZ710258	741WUA0001	SPRING,EARTH	
133	BZ710686	752WSA0288	ANGLE,FRONT	
134	BZ710259	762WPA0011	HOLDER,CRT WIRE	
135	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
136	AE000157	724WNA0009	SHEET,PVC	
137	AD301574	744WUA0013	SPRING,EARTH	
138	AE000161	752WSA0337	SHIELD,DVD	
139	AE000162	752WSA0343	HOLDER,VCR	
140	BZ710618	755WPAA012	PLATE,COVER LIGHT (L)	
141	AD300758	899EFBA001	WIRING CLIP	
142	AE000411	7230007669	POP LABEL	
143	AE000412	769WSAA005	WASHER CRT T=1	
201	AD302054	8141J50C54	SCREW,TAP TITE(P) GW22	5x35
202	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
203	BZ710320	8117540804	SCREW,TAPPING(B0) TRUSS	4x8
204	BZ710582	8109130B94	SCREW,TAP TITE(B)R PAN	3x29
205	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
206	BZ710562	8109I30804	SCREW,TAP TITE(B) WH7	3x8
207	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
208	BZ710678	8109230804	SCREW,TAP TITE(B) BIND	3x8
209	BZ710409	8107630B04	SCREW,TAP TITE(S) BRAZIER	3x20

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
210	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
211	AD301968	8107230404	SCREW,TAP TITE(S) BIND	3x4
212	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
213	BZ710240	8107230804	SCREW,TAP TITE(S) BIND	3x8
214	BZ710337	8107930604	SCREW,CUP(S)	3x6
---	AE000413	7230007636	SHEET,BAR CODE	
---	AD300432	791WHA0092	LAMIFILM,BAG	
---	BZ710687	792WHA0350	PACKAGE,TOP	
---	BZ710688	792WHA0351	PACKAGE,BOTTOM	
---	AE000414	793WCD1496	GIFT BOX	
---	AD301971	A5F101H975	INSTRUCTION BOOK KIT	
---	AD302404	J5500817	REGISTRATION CARD	
---	AD302088	J5F10101A	INSTRUCTION BOOK	
---	AD302406	JB5UD200	POLYBAG,INSTRUCTION(RED CAUTION)	

CHASSIS REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
300	AD302086	A5F101H420A	DECK ASSY	A5F101H420A
301	BZ710564	85OA400234	PINCH ROLLER BLOCK	
302	BZ710682	85OA500026	AHC ASS'Y	
303	BZ710193	85OP200290	BELT,CAPSTAN (S)	
304	BZ710515	85OP600581	WORM	
305	BZ710094	85OP500083	BASE,AC HEAD	
306	BZ710112	85OP800324	SPRING,AC HEAD	
307	BZ710516	85OA000459	MAIN CHASSIS ASS'Y	
308	BZ710517	85OA200089	CLUTCH ASS'Y	
309	BZ710518	85OA200090	ARM IDLER ASS'Y	
310	BZ710519	85OA300065	LOADING ARM S UNIT	
311	BZ710520	85OA300066	LOADING ARM T UNIT	
312	BZ710521	85OA400223	INCLINED BASE T UINT 3S	
313	BZ710522	85OA400232	P5 ARM ASS'Y 2	
314	BZ710650	85OA400235	TENSION ARM ASS'Y 2	
315	BZ710524	85OA400231	INCLINED BASE S UNIT	
316	BZ710525	85OP800358	SPRING,LOCKER	
317	BZ710526	85OP900736	CASS,HOLDER	
318	BZ710527	85OP900748	CASS,SIDE L	
319	BZ710528	85OP900749	CASS,SIDE R	
320	BZ710529	85OP900739	LOCKER,R	
321	BZ710530	85OA900228	LINK UNIT	
322	BZ710531	85OP000496	POST,CASS GUIDE	
323	BZ710532	85OP200316	REEL,S (S)	
324	BZ710533	85OP200317	REEL,T (S)	
325	BZ710534	85OP200308	GEAR,IDLER	
326	BZ710535	85OP200311	GEAR,CLUTCH	
327	BZ710536	85OP200312	GEAR,COUPLING	
328	BZ710537	85OP200313	LEVER,CLUTCH	
329	BZ710538	85OP300194	GEAR,MAIN LOADING	
330	BZ710092	85OP400490	LEVER,TENSION	
331	BZ710093	85OP400492	HOLDER,TENSION	
332	BZ710366	85OP400520	CAP.P4	
333	BZ710762	85OP400542	BAND,TENSION	
334	BZ710540	85OP400533	CONNECT,TENSION	
335	BZ710541	85OP600573	ARM,BRAKE T	
336	BZ710763	85OP600584	BAND,BRAKE T	
337	BZ710543	85OP600577	CAM,PINCH ROLLER	
338	BZ710544	85OP600578	CAM,MAIN	
339	BZ710545	85OP600579	ROD,MAIN	
340	BZ710546	85OP600582	GEAR,JOINT	
341	BZ710110	85OP800322	SPRING,TENSION	
342	BZ710547	85OP800360	SPRING,BRAKE T	
343	BZ710548	85OP800355	SPRING,COUPLING	
344	BZ710549	85OP800356	SPRING,RING	
345	BZ710565	85OP900750	LEVER,LINK 2	
346	BZ710551	85OP900744	LEVER,FLAP	
347	BZ710552	85OP900745	CASS,OPENER	
348	BZ710106	85OP700035	REFLECTOR,LED	
349	BZ710514	85OP900746	BRACKET,TOP 3V	
501	BZ710049	8107226804	SCREW,TAP TITE(S) BIND	2.6x8
502	BZ710058	83ETW30000	E-RING	3.0
503	BZ710371	8107226404	SCREW,TAP TITE(S) BIND	2.6x4
504	BZ710046	8102120604	SCREW,PAN	M2x6
505	BZ710050	8109126604	SCREW,TAP TITE(B) PAN	2.6x6
506	BZ710553	810A130404	SCREW/WASHER(A)	M3x4
507	BZ710219	810A126504	SCREW/WASHER(A)	M2.6x5
508	BZ710056	82Q264713N	POLYSLIDER WASHER	2.6x4.7xT0.13
509	BZ710054	82P184505N	POLYSLIDER WASHER(CUT)	1.8x4.5xT0.5
510	BZ710017	8107226604	SCREW,TAP TITE(S) BIND	2.6x6
CD1501	BZ614292	122H071704	CORD JUMPER	2H071704
CD1502	AD301953	122Y021002	CORD JUMPER	2Y021002
H5001	AD301675	1523Q91003	HEAD (AUDIO CONTROL)	VTR-1X2RPE22-756
H5002	AD301676	1543Q02014	HEAD (FULL ERASE)	VTR-1X2ERS11-154
⚠ M101	BZ710566	1596P98001	MOTOR (LOADING)	MXN13FB12K3
⚠ M2001	AD301677	1510S98038	CAPSTAN DD UNIT	F2QVB33
M2003	BZ710657	1589S11017	MICRO MOTOR	I2OAL05
⚠ UN4001	AD301954	A2C301N500	CYLINDER UNIT ASS'Y	A2C301N500

DVD DECK REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
600	AE000167	A5F101H650	DVD MECHA ASSY	A5F101H650
601	AD301822	92P100022A	TRAVERSE HOLDER	
602	AD301823	92P100032A	RACK,FEED 1	
603	AD301824	92P100033A	RACK,FEED 2	
604	AD301825	92P100035A	LEVER,RACK FEED	
605	AD301826	92P200006A	INSULATOR(F)	
606	AD301827	92P200007A	INSULATOR(R)	
607	AD301850	92P300008A	SPRING,CHASSIS	
608	AD301849	92P300005A	SPRING,ARM IDLER	
609	AD301830	92P300006A	SPRING,RACK FEED 2	
610	AD301831	92P300007A	SPRING,RACK FEED 1	
611	AD301848	92P100031A	ARM,IDLER	
612	AD301833	92P000001A	CLAMPER PLATE	
613	AD301834	92P100019A	RACK,LOADING	
614	AD301835	92P100020A	MAIN FRAME M	
615	AD301836	92P100021A	TRAY	
616	AD301837	92P100023A	GEAR,MAIN	
617	AD301838	92P100024A	CLAMPER	
618	AD301839	92P300002A	SPRING,RACK LOADING	
619	AD301840	92P400002A	MAGNET,CLAMPER	
620	AD301847	92P100030A	GEAR,IDLER	
621	AD301842	92P100025A	GEAR,MOTOR	
622	AD301843	92P100026A	GEAR,MIDDLE 1	
623	AD301844	92P100027A	GEAR,MIDDLE 2	
624	AD301845	92P100028A	GEAR,MIDDLE 3	
625	AD301846	92P100029A	GEAR,FEED	
701	BZ710187	8110226804	SCREW,TAP TITE(P) BIND	2.6x8
702	AD301851	8110120604	SCREW,TAP TITE(P) PAN	2x6
703	AD301852	8107220504	SCREW,TAP TITE(S) BIND	2x5
704	AD301853	8140117254	SCREW,PAN	M1.7x2.5 P3
705	AD301913	8110220804	SCREW,TAP TITE(P) BIND	2x8
CD2001	AD301855	122H0O1901	CORD JUMPER	2H0O1901
CD2301	AD301856	122H080701	CORD JUMPER	2H080701
CD2302	AE000148	06CH232101	CORD CONNECTOR	CH232101
CP1	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
⚠ M2002	AD301861	1515S98001	FEED MOTOR	BCD3B81
PCB640	AD301862	A5E601V640	PCB ASS'Y	VEBA17A
PCB68A	AD301863	A5E601V680	PCB ASS'Y	VEBA12A
SW1	AD301866	0515S32001	SWITCH	SSS-23-6
SW2	AD301867	0500S01032	PUSH LEVER SWITCH	SW1AB-271-10A

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
		RESISTORS		
R312	AE000271	R002T4683J	RC	68K OHM 1/4W
⚠R401	AD301014	R4X5T6472F	R,METAL	4.7K OHM 1/6W
⚠R403	BZ210105	R4X5T6183F	R,METAL	18K OHM 1/6W
⚠R405	AD300037	R4X5T6153F	R,METAL	15K OHM 1/6W
⚠R406	BZ210280	R3X28A391J	R,METAL OXIDE	390 OHM 2W
⚠R412	BZ210021	R65582680J	R,FUSE	68 OHM 1/2W
⚠R417	AD301140	R3X28A221J	R,METAL OXIDE	220 OHM 2W
⚠R423	BZ210051	R3X18AR47J	R,METAL OXIDE	0.47 OHM 2W
⚠R429	BZ210053	R002T22R2J	RC	2.2 OHM 1/2W
⚠R430	AD301920	R5X34F2R7J	R,CEMENT	0 2.7 OHM 10W
⚠R434	BZ210130	R002T21R5J	RC	1.5 OHM 1/2W
R435	AD301595	R65582010J	R,FUSE	1 OHM 1/2W
R436	BZ210277	R3X181101J	R,METAL OXIDE	100 OHM 1W
⚠R440	AD301921	R5X34F332J	R,CEMENT	0 3.3K OHM 10W
⚠R445	BZ210104	R6558A2R7J	R,FUSE	2.7 OHM 2W
R449	AE000145	R002T2561J	RC	560 OHM 1/2W
⚠R454	BZ210003	R3K181102J	R,METAL	1K OHM 1W
⚠R814	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R815	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R816	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R1701	BZ210206	R002T2155J	RC	1.5M OHM 1/2W
⚠R1702	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W
⚠R1714	BZ210243	R3X181R18J	R,METAL OXIDE	0.18 OHM 1W
⚠R1717	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W
⚠R1718	BZ210250	R5Y2CE1R2J	R,CEMENT	1.2 OHM 7W
⚠R1720	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W
R3010	AD302206	R3X181180J	R,METAL OXIDE	18 OHM 1W
R3021	AE000147	R3X181220J	R,METAL OXIDE	22 OHM 1W
R4219	AE000146	R0X1X6102J	RC	1K OHM 1/6W
		CAPACITORS		
C321	BZ210176	E02LF3222M	CE	2200 UF 25V
C357	AD301348	E02LU5100M	CE	10 UF 50V
⚠C403	BZ110195	E02LU8220M	CE	22 UF 100V
⚠C408	BZ110233	P4N8FK332H	CMPP	0.0033UF 1.5KV
⚠C412	BZ210173	P4J7F3474J	CMPP	0.47 UF 250V PMS
⚠C417	BZ110054	P3N1F5333J	CPP	0.033 UF 630V
⚠C418	AD302207	P4N8FK153H	CMPP	0.015 UF 1.5KV
⚠C429	AD301434	E02LU4101M	CE	100 UF 35V
⚠C430	BZ110101	E5EZF3222M	CE	2200 UF 25V
C432	AE000272	E50HU2470M	CE	47 UF 16V
⚠C434	BZ110055	E5EZF4102M	CE	1000 UF 35V
C435	BZ110057	E53FF56R8K	CE	6.8 UF 50V NP
⚠C446	AD300061	E5EZFD220M	CE	22 UF 250V
C449	BZ110182	C03L0R713K	CC	0.001 UF 2KV R
C820	AD300078	C0JBB0713K	CC	0.001 UF 2KV B
⚠C1701	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL
C1707	BZ110182	C03L0R713K	CC	0.001 UF 2KV R
⚠C1708	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B
⚠C1710	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B
⚠C1711	AD301391	CD39E0MQ3M	CC	0.0047UF 250V
⚠C1714	AE000142	E52DHC681S	CE	680 UF 200V
C1716	BZ110010	E02L03222M	CE	2200 UF 25V
⚠C1717	BZ110055	E5EZF4102M	CE	1000 UF 35V
C1719	BZ110172	C03L0R7U2K	CC	680 PF 2KV R
⚠C1720	AD301025	E62NFB221M	CE	220 UF 160V
C1723	BZ110172	C03L0R7U2K	CC	680 PF 2KV R
C1725	AE000074	E02L08101M	CE	100 UF 100V
⚠C1728	AD300511	E02LT0222M	CE	2200 UF 6.3V
C1732	BZ110032	E5EZF3102M	CE	1000 UF 25V
C3009	AD300413	E02LT0102M	CE	1000 UF 6.3V
C3010	AD300511	E02LT0222M	CE	2200 UF 6.3V
		DIODES		
D101	AD301638	0010E00330	INFRARED LED	LTE-3271T-012A-O
D102	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D103	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D105	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D106	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D108	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D402	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D403	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D404	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
			DIODES	
⚠D405	AD300074	D2BFRS4FS0	DIODE,SILICON	RS-4FS
⚠D406	AD300073	D2BFRU4AM0	DIODE,SILICON	RU-4AM
D407	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
⚠D408	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D410	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D411	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
⚠D412	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D413	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D414	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
⚠D415	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D416	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D417	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D418	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D419	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D420	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D601	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D602	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D603	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D605	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D804	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D805	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D806	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1702	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1703	AE000141	D97U02R71B	DIODE,ZENER	MTZJ2.7B T-77
⚠D1704	BZ410007	D23TGP15J0	DIODE,SILICON	RGP15J-G23
⚠D1705	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1706	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1707	BZ410007	D23TGP15J0	DIODE,SILICON	RGP15J-G23
D1709	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D1710	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1711	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1712	BZ410067	D97U02R21B	DIODE,ZENER	MTZJ2.2B T-77
D1713	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D1715	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D1716	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1717	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
⚠D1718	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1719	BZ410115	D2LKB340L0	DIODE,SCHOTTKY	SB340L-6737
D1720	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1721	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1722	AD300731	D2WXN49370	DIODE,SILICON	1N4937
⚠D1723	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
D1724	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1726	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1727	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D1728	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1729	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1730	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
D1731	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1732	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D1733	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1734	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D2001	BZ410120	DDARDS1210	DIODE,SILICON	KDS121RTK
D2002	BZ410121	DDARDS1200	DIODE,SILICON	KDS120RTK
D2201	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D2205	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2206	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2207	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2301	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D3001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D3002	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D3003	BZ410090	D97U04R71B	DIODE,ZENER	MTZJ4.7B T-77
D3004	BZ410077	D2WXSB1400	DIODE,SCHOTTKY	SB140-EIC
D3005	BZ410012	D28TQS04N0	DIODE,SCHOTTKY	11EQS04N-TA1B2
D3007	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D3008	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D3009	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D3011	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description	
			DIODES		
D4201	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77	
D4204	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D4205	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D4207	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D5501	BZ410012	D28TQS04N0	DIODE,SCHOTTKY	11EQS04N-TA1B2	
D5502	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D8501	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8502	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8503	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8504	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8505	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8506	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8510	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
			ICS		
IC101	AD301923	I51F58074A	IC	OEC8074A	
IC103	AD301641	I9UF032310	IC	PST3231NR	
IC199	AD302209	A5F201Z015	IC	S-24C04BDP-LA	
IC302	AD301983	I01FF58910	IC	AN5891SA-E1V	
IC352	AD302184	I0FSP7522N	IC	AN7522N	
⚠IC401	AD300414	I03TD80410	IC	LA78041	
IC601	AD302210	I03FC63240	IC	LA76324M	
IC602	AE000143	I1KF98L100	IC	KIA78L10F-RTF	
IC1501	AD300609	I05FE90A45	IC	TC90A45F	
IC1502	AD301988	I0UF015010	IC	MM1501XNRE	
IC1504	AD301988	I0UF015010	IC	MM1501XNRE	
IC1505	AD301927	I0UF015040	IC	MM1504XNRE	
⚠IC1701	AD301771	000220001W	PHOTO COUPLER	PS2561L1-1-V(W)	
⚠IC1702	AD302211	I1KJ9A431A	IC	KIA431A-AT	
IC2001	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP	
IC2002	AD301766	I5PK063150	IC	L6315ATXXTY	or
	AE000144	I5PKL63150	IC	L6315ATXXTV	
IC2003	AD301767	I5FJ0128V7	IC	CY62128VLL-70ZC	or
	AE000230	I5PJ027BL7	IC	M68AW127BM70N6	
IC2301	BZ611126	I03F065600	IC	LA6560	
IC2302	AD301770	I07E00358F	IC	BA10358F-E2	
IC2303	AD301770	I07E00358F	IC	BA10358F-E2	
IC2304	AD301770	I07E00358F	IC	BA10358F-E2	
⚠IC3001	AD301931	I1KA78R050	IC	KIA278R05PI	
IC3002	AD301929	I1KA78R090	IC	KIA278R09PI	
IC3003	AD301931	I1KA78R050	IC	KIA278R05PI	
IC3004	AD301931	I1KA78R050	IC	KIA278R05PI	
IC4002	AD301773	I5PK055190	IC	STI5519AVB	
IC4003	AD301774	I5CF0CU040	IC	SN74AHCU04PWR	
IC4007	AD301775	IF6J016A27	IC	MT48LC4M16A2TG-75	
IC4012	AD301776	I5PJ000DT7	IC	M29W800DT70N6	
IC4501	BZ611095	I03F3205M0	IC	LA71205M-MPB	
IC5501	BZ611114	I01F63FBP0	IC	AN3663FBP	
IC8001	AD301988	I0UF015010	IC	MM1501XNRE	
IC8002	AD301988	I0UF015010	IC	MM1501XNRE	
IC8004	BZ611074	I0QF045800	IC	NJM4580M	
IC8502	AD301777	I17F0742K0	IC	PCM1742KE/2K	
IC8504	AD301778	I0GF9Z01Z0	IC	PQ025EZ01ZP	
			TRANSISTORS		
Q101	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L	
Q102	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK	
Q103	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L	
Q104	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N	
Q105	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N	
Q106	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK	
Q107	BZ410107	0002700690	PHOTO COUPLER	RPI-303	
Q108	BZ410107	0002700690	PHOTO COUPLER	RPI-303	
Q110	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK	
Q114	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q116	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q350	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q401	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT	
Q402	AD300027	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)	
⚠Q403	AD302136	TD50026380	TRANSISTOR,SILICON	2SD2638	
Q404	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q405	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q406	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
			TRANSISTORS	
Q407	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT
Q408	AD300674	TCAT032070	TRANSISTOR,SILICON	KTC3207-AT
Q409	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q410	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q601	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146
Q602	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q605	BZ510090	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK
Q606	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
⚠Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q803	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
⚠Q804	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q805	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
⚠Q806	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q807	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
Q1501	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q1502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1702	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
⚠Q1705	BZ510098	T220033260	FET	2SK3326(2)
⚠Q1706	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q2001	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146
Q2003	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2004	BZ510113	T27T030180	FET	2SK3018
Q2005	BZ510113	T27T030180	FET	2SK3018
Q2006	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146
Q2007	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2008	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2009	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q2201	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q2202	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q2203	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q2301	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2302	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q2303	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q2304	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q2305	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q3001	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
⚠Q3002	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3003	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3004	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
⚠Q3005	AD301934	TBA0013660	TRANSISTOR,SILICON	KTB1366(O,Y)
⚠Q3006	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q3007	BZ510057	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y
Q3008	BZ510107	TPAAA05001	COMPOUND TRANSISTOR	KRA101SRTK
Q3009	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q3010	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3011	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q3014	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3015	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4001	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4002	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4003	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q4201	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4202	BZ510072	TPAAC05002	COMPOUND TRANSISTOR	KRA103SRTK
Q4203	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4204	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q4210	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4211	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4212	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4501	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4503	BZ510072	TPAAC05002	COMPOUND TRANSISTOR	KRA103SRTK
Q4504	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q4505	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q4506	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4507	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4509	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4511	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q8002	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q8006	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q8007	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
		TRANSISTORS		
Q8501	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8502	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8503	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8505	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
		COILS &TRANSFORMERS		
L001	BZ310002	021673101K	COIL	100 UH
L301	BZ310005	02167D101K	COIL	100 UH
L401	AD300117	02D1000001	COIL	ELC16B501EN
L402	BZ310063	022100027A	COIL,LINEARITY	ELH5L4113
L403	BZ310004	021679472K	COIL	4.7 MH
L601	BZ310041	02167F101J	COIL	100 UH
L602	BZ310005	02167D101K	COIL	100 UH
L603	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L1501	AD300612	02167F100J	COIL	10 UH
L1502	AD300613	02167F150J	COIL	15 UH
L1504	AD300123	021673151K	COIL	150 UH
L1505	BZ310201	0216A6101K	COIL	100 UH
L1506	BZ310201	0216A6101K	COIL	100 UH
⚠L1701	BZ310180	029T000105	COIL,LINE FILTER	2R2A752F28
⚠L1703	AE000066	028R250014	COIL,DEGAUSS	8R250014
L1704	BZ310181	02A6B2E0A1	CORE,FERRITE	HF70T22*10*14
L2001	AD301783	0216S1100J	COIL	10 UH
L2002	AD301783	0216S1100J	COIL	10 UH
L2003	BZ310191	02167F2R2J	COIL	2.2 UH
		COILS &TRANSFORMERS		
L2004	BZ310191	02167F2R2J	COIL	2.2 UH
L3001	BZ310150	02167E220K	COIL	22 UH
L3002	AD301785	02167E100K	COIL	10 UH
L4001	BZ310039	02167F220J	COIL	22 UH
L4002	BZ310039	02167F220J	COIL	22 UH
L4003	BZ310039	02167F220J	COIL	22 UH
L4004	BZ310039	02167F220J	COIL	22 UH
L4205	BZ310041	02167F101J	COIL	100 UH
L4502	BZ310114	031626009R	COIL,BIAS OSC	1626009
L4504	BZ310041	02167F101J	COIL	100 UH
L4505	BZ310040	02167F470J	COIL	47 UH
L4506	BZ310040	02167F470J	COIL	47 UH
L4509	BZ310005	02167D101K	COIL	100 UH
L5501	BZ310201	0216A6101K	COIL	100 UH
L5502	BZ310039	02167F220J	COIL	22 UH
L5503	BZ310039	02167F220J	COIL	22 UH
L5504	BZ310039	02167F220J	COIL	22 UH
L8001	BZ310041	02167F101J	COIL	100 UH
L8002	BZ310201	0216A6101K	COIL	100 UH
L8003	BZ310041	02167F101J	COIL	100 UH
L8501	BZ310191	02167F2R2J	COIL	2.2 UH
L8502	BZ310191	02167F2R2J	COIL	2.2 UH
L8503	BZ310191	02167F2R2J	COIL	2.2 UH
L8504	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L8507	BZ310191	02167F2R2J	COIL	2.2 UH
L8509	BZ310191	02167F2R2J	COIL	2.2 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE	ETH19Y203AY
⚠T1701	AD301935	048142065S	TRANSFORMER,SWITCHING	8142065S
		JACKS		
⚠J801	AD301936	066F130021	SOCKET,CATHODE RAY,TUBE	ISHS62S
⚠J2201	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
J2202	BZ614146	060G421016	RCA JACK	HTJ-032-05AY
J2203	BZ614147	060G421017	RCA JACK	HTJ-032-05AW
J2204	BZ614280	060G421020	RCA JACK	HTJ-032-05AR
J4201	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J4202	BZ614399	060J411018	RCA JACK	MSP-213V1-432 PBSN
J8007	BZ614400	060J401082	RCA JACK	MSP-251V-05PBSN
		SWITCHES		
SW101	BZ612016	0508S11001	SWITCH (LEAF)	LSA-1144EAU
SW2201	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2202	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2203	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2204	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2205	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2206	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2207	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description	
			SWITCHES		
SW2251	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2252	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2253	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2254	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2255	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2256	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2257	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
SW2258	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R	
			VARIABLE RESISTORS		
VR404	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222	
⚠VR1701	AD301937	V1K6314BTE	VOLUME,SEMI FIXED	NVG6TLTAB103	
			P.C.BOARD ASSEMBLIES		
PCB010	AD302212	A5F201Z010	PCB ASS'Y	VMC293A	
PCB080	AD302213	A5F201Z080	PCB ASS'Y	TMC564B	
PCB110	AD302214	A5F201Z110	PCB ASS'Y	TCC426B	
PCB130	AD302215	A5F201Z130	PCB ASS'Y	VMB283B	
PCB270	AD302216	A5F201Z270	PCB ASS'Y	TECB10B	
			MISCELLANEOUS		
B403	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0	
B1701	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0	
B1703	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0	
B1704	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B2002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B2003	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B2004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B2005	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B2201	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0	
B4002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B4004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B8001	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2	
B8501	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B8502	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B8503	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B8504	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04	
B8505	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2	
BL001	BZ310014	023C00022A	COIL,BALUN	HPN-01	
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G	
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G	
CD002	BZ614411	06CU011902	CORD,CONNECTOR	CU011902	
CD303	BZ614424	06CU149001	CORD,CONNECTOR	CU149001	
CD602	AD302218	06CU291701	CORD,CONNECTOR	CU291701	
CD603	AE000133	06CU284501	CORD,CONNECTOR	CU284501	
CD604	AE000132	06CU282401	CORD,CONNECTOR	CU282401	
CD802	BZ614310	WCL6844038	FLAT CABLE	AWM2468 AWG26 5C GRAY 440MM	
CD803	BZ614378	06CU823001	CORD,CONNECTOR	CU823001	
CD805	BZ614378	06CU823001	CORD,CONNECTOR	CU823001	
CP001	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100	
CP101	BZ614289	06972C0010	CONNECTOR PCB SIDE	TMC-J12P-B2	
CP303	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P	
⚠CP404	AD300095	069X460029	CONNECTOR PCB SIDE	B06B-DVS	
CP601	AD301943	069S240639	CONNECTOR PCB SIDE	A2001WR2-4P	
CP602	BZ614462	067U009039	WIRE HOLDER	B2013H02-9P	
CP603	AD301944	067U008029	WIRE HOLDER	B2013H02-8P	
CP604	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P	
CP803	BZ614269	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P	
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100	
CP805	BZ614269	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P	
⚠CD1702	BZ614407	120R415906	CORD,AC BUSH	0R415906	
CD2251	BZ614408	06CU220701	CORD,CONNECTOR	CU220701	
CD4501	BZ614373	122F061502	CORD,JUMPER	2F061502	
CD8501	AE000134	122H0C2204	CORD,JUMPER	2H0C2204	
CD8505	AD301946	06CU2B3301	CORD,CONNECTOR	CU2B3301	
CP1702	AD301944	067U008029	WIRE HOLDER	B2013H02-8P	
⚠CP1704	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P	
CP1707	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100	or
	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100	
CP1708	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100	or
	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100	
CP2001	AD301793	069XYO0010	CONNECTOR PCB SIDE	24FLZ-SM1-TB	
CP2201	BZ614416	069S220629	CONNECTOR PCB SIDE	A2001WV2-2P	
CP2301	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
			MISCELLANEOUS	
CP2302	AD301795	069S230639	CONNECTOR PCB SIDE	A2001WR2-3P
CP4501	BZ614011	0697290620	CONNECTOR PCB SIDE	TOC-C09X-A1
CP4502	BZ614050	069J760029	CONNECTOR PCB SIDE	IMSA-9604S-06Z14
CP4503	AD301649	067U002019	WIRE HOLDER	B2013H02-2P
CP602B	BZ614458	069S290629	CONNECTOR PCB SIDE	A2001WV2-9P
CP603B	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P
CP8001	BZ614214	069S2B0629	CONNECTOR PCB SIDE	A2001WV2-11P
CP8002	AD301797	069J7C0029	CONNECTOR PCB SIDE	IMSA-9604S-12Z14
CP802A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP802B	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP8502	AD301798	069J7C0019	CONNECTOR PCB SIDE	IMSA-9604S-12Z13
CUS011	BZ710148	800WFAA007	CUSHION B	
CUS131	BZ710279	800WFAA006	CUSHION A	
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
EL003	BZ614044	124120301A	EYE LET	XRY20X30BD
EL004	BZ614043	124116281A	EYE LET	XRY16X28BD
⚠F1701	AD301046	081PC6R305	FUSE	51MS063L
⚠FB401	AD302140	043224005F	TRANSFORMER,FLYBACK	FSU24A001
FH1701	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH1702	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
OS2201	AD301949	0773071003	REMOTE RECEIVER	RPM7138-SH10
⚠RY1701	AD300114	0560V20115	RELAY	ALKS321
⚠SP351	BZ614381	070C546004	SPEAKER	SG04H02BRA
⚠SP352	BZ614381	070C546004	SPEAKER	SG04H02BRA
TM101	AD301950	076D0FG020	TRANSMITTER	ORV201N36010
⚠TU001	AE000273	0163300005	RF UNIT	115-V-K015AR B
⚠TH1701	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
⚠V801	AD301131	098W250401	CRT W/DY	A60LVY196X11(O)
X101	BZ613006	100DA32R01	CRYSTAL	DT-26
X102	BZ613033	100CT01403	CRYSTAL	HC-49/U-S
X601	AD301951	100CT3R532	CRYSTAL	HC-49/U-S
X2001	AD301802	100BT02003	CRYSTAL	HC-49U/S
X4001	AD301803	100BT02701	CRYSTAL	HC-49U/S
X4501	BZ613017	100CT3R502	CRYSTAL	HC-49/U

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN